


interatletika™

PRODUCTION AND SALE OF SPORTS GOODS

Customer support:
+38 095 273 81 53
play.interatletika.com

DATA SHEET

**T810NEWKZG, T810ZOF, T810NEWZGF –
Playground complex "Baby"**

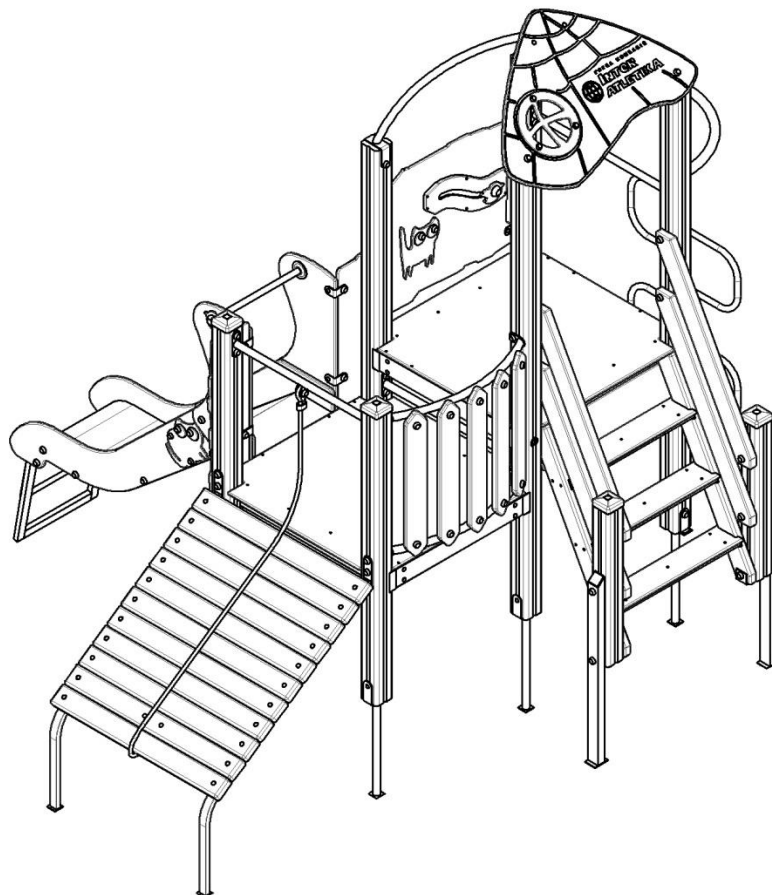

CONTENT

1. GENERAL INFORMATION	3
2. MAIN TECHNICAL DATA AND CHARACTERISTICS	3
3. COMPLETE SET AND CHARACTERISTICS OF THE MAIN PARTS OF THE PRODUCT	3
4. ASSEMBLY AND INSTALLATION PROCEDURES	3
5. PRODUCT INSTALLATION SCHEME	3
6. INSTRUCTIONS FOR SAFE USE	3
7. TECHNICAL MAINTENANCE	3
8. INFORMATION ON STORAGE, TRANSPORT AND DISPOSAL	4

FOR NOTES

[illegible]

1. GENERAL INFORMATION

Purpose and content of this document. This document contains a general description of the equipment, information on installation, intended use, maintenance, current repair and manufacturer's warranty.

Distribution of this document for product modifications. The manufacturer can make changes to the design of the product, aimed at improving its characteristics, changing the design, etc. This document may not contain a description of such changes, but applies to such modified products.

2. MAIN TECHNICAL DATA AND CHARACTERISTICS

Length, mm	3390
Width, mm	2955
Height, mm	2760
Weight, kg	293,5
Height of fall, mm	1054
Age range, years	from 3 till 12
Weight limits, kg	up to 60

3. COMPLETE SET AND CHARACTERISTICS OF THE MAIN PARTS OF THE PRODUCT

The product consists of separate modules, that are transported unassembled. Complete set of the modules and their assembly schemes are presented at pic. 1-11.

4. PRODUCT ASSEMBLY AND INSTALLATION

Instrument and tools. No needed instrument for assembling and installation the product is a part of a set.

Product assemble and installation procedure.

- 1) Dig the holes for concreting in accordance with picture 12 and picture 13.
- 2) Assemble and install the tower.
- 3) Install and fix other modules to the tower edges.
- 4) Assemble and install the roof.
- 5) Check the vertical and horizontal positions of the product with a lever.
- 6) Concrete the product in accordance with pic. 13. By installing the product at the sand ground the overall dimensions of the foundation must be 15-20% more.

5. PRODUCT INSTALLATION SCHEME

Safety zone of the installed product must be in accordance with pic.12

6. INSTRUCTIONS FOR SAFE USE

Do not use the product until it has been fully and completely installed.

The product must not be used by users of a different age category.

The product must not be used by users of a different weight category.

Before using the product, clear the safety area of any unnecessary objects that may cause damage to the user (debris, tools left over from assembly and installation, etc.).

Do not use the product in adverse weather conditions (ice, snow, rain, hail, strong winds, etc.), which may cause injury to the user.

7. TECHNICAL MAINTENANCE

You have purchased high-quality and reliable equipment. In the process of its production, the requirements of regulatory and technical documents of Ukraine, the CIS countries and the European Union regulating the production of children's gaming equipment were taken into account. However, it should not be forgotten that when operating any technical product, certain rules and requirements must be followed. Despite the fact that our product is of high quality and reliability, this rule applies to it in full. You should be aware that the implementation of the following rules and recommendations for product maintenance is aimed at ensuring that your child, the child of your friends or acquaintances is safe and no unforeseen factors threaten his health, life.

Remember that the operation of the product is accompanied by the influence of various negative factors on it, a complete list of which cannot be predicted. Among them, an important place is occupied by natural factors and factors caused by human influence on equipment. As a rule, their action initially leads to disruptions in the appearance of the product. Thus, under the influence of factors caused by the exploitation of a person, there may be damage to the integrity of the paint coating of parts made of wood, in the form of scuffs, chips, incisions, and when exposed to parts made of metal, damage to the paint coating in the form of nicks, chips, abrasion, etc. This leads to the emergence and development of defects that can be the cause of the destruction of the product. The product is particularly dangerous if it is used for other than its intended purpose, if the permissible loads are exceeded, or if vandalism occurs, as these factors can cause irreversible changes in the structure of the material from which the product is made, leading to destruction.

The maintenance of the product implies, first of all, the responsibility of the user to comply with all recommendations provided in this document, starting with a daily inspection of the external condition of the product

before operation.

Daily inspection of the product is a very important procedure. With its help, you can timely detect any changes in the appearance of the product (deformation of individual parts, deformation of the structure as a whole or part of it, damage to parts, cracks of welds, as well as the absence of fastening of parts of the product, etc.).

Before using the product, check its operability, absence of damage, dirt on the product, sharp edges, reliability of fixing the structure, absence of unnecessary objects on the surface of the site. If the product is damaged, fully or partially inoperable, or has any other defects, do not use it.

During operation it is also necessary to inspect the condition of the product periodically - the current inspection. It includes an external inspection of the product, checking its operability (in the presence of moving elements - the smoothness of the movement of mechanisms, compliance with operating modes, etc.). Current inspection allows you to detect malfunctions caused by the operation of equipment, climatic conditions, acts of vandalism and other factors, until they reach a critical level and the destruction of the product. The current inspection is carried out in order to detect foreign objects that may threaten the user and lead to violations of the functioning of the product. The frequency of the current inspection is set by the owner taking into account the operating conditions. If you do not have sufficient technical knowledge and skills to conduct such inspections, we recommend you to contact the authorized specialists of the manufacturer in order to obtain advice.

Every three months, a scheduled inspection should be carried out, which primarily concerns the foundation part, load-bearing elements and connection nodes of elements (their integrity and degree of deterioration).

The main annual inspection must be carried out annually by authorised specialists of the manufacturer. During the inspection, the technical condition of the equipment shall be assessed for compliance with safety requirements. The degree of deterioration and damage to wooden elements and their ability to withstand the applied loads, damage, corrosion of metal elements and the impact of these factors on the safety of the product are determined. The inspection also helps to identify the impact of repairs, if any, on the safety of the equipment.

Based on the results of the inspection, a maintenance procedure is carried out to eliminate the identified discrepancies in the product's operation. This procedure includes assessing the condition of parts and assemblies, replacing worn parts, and restoring the integrity of protective coatings. The results of the inspections, as well as the procedures carried out as a result of the inspection and maintenance of the product must be properly documented in the Registration Journal, which is an integral part of this passport. The owner of the product must keep the acts of maintenance of the product, acts of repair work.

8. INFORMATION ON STORAGE, TRANSPORT AND DISPOSAL

The product is transported in the manufacturer's packaging by any means of transport that ensures its safety and protection from external factors (rain, snow, sunlight, water, high humidity, etc.).

Information about transportation

Date		Brand, state number of the ca/trailer	Position, full name	Signature
Departure	Arrival			

Before installation, store the product in the original packaging in dry, closed rooms with natural air ventilation.

If it is necessary to transport the product to another location after use, it is recommended to use the manufacturer's packaging.

If long-term storage of the product is required, the following storage rules must be observed (the list of conditions is not complete):

- place the product in a closed dry room with natural ventilation;
- protect the product from external factors (dust, water drops, etc.) with a large plastic bag, leaving space for free air circulation;
- take other measures to preserve the appearance and characteristics of the product during storage.

When removing the product from storage and preparing for installation, follow the next recommendations:


- remove the product from the packaging material (polyethylene, cardboard, other packaging materials);
- remove dust and other contaminants from the surface of the product;
- check completeness and absence of parts damage.

Information about storage



Date		Product storage conditions	Full name	Signature
Putting into storage	Removal from storage			


After the end of the equipment's service life, the buyer independently determines the procedure for its use. If you decide to recycle, contact the seller or specialized organizations.

The equipment does not contain harmful impurities and materials that can harm your health and is not subject to special disposal.

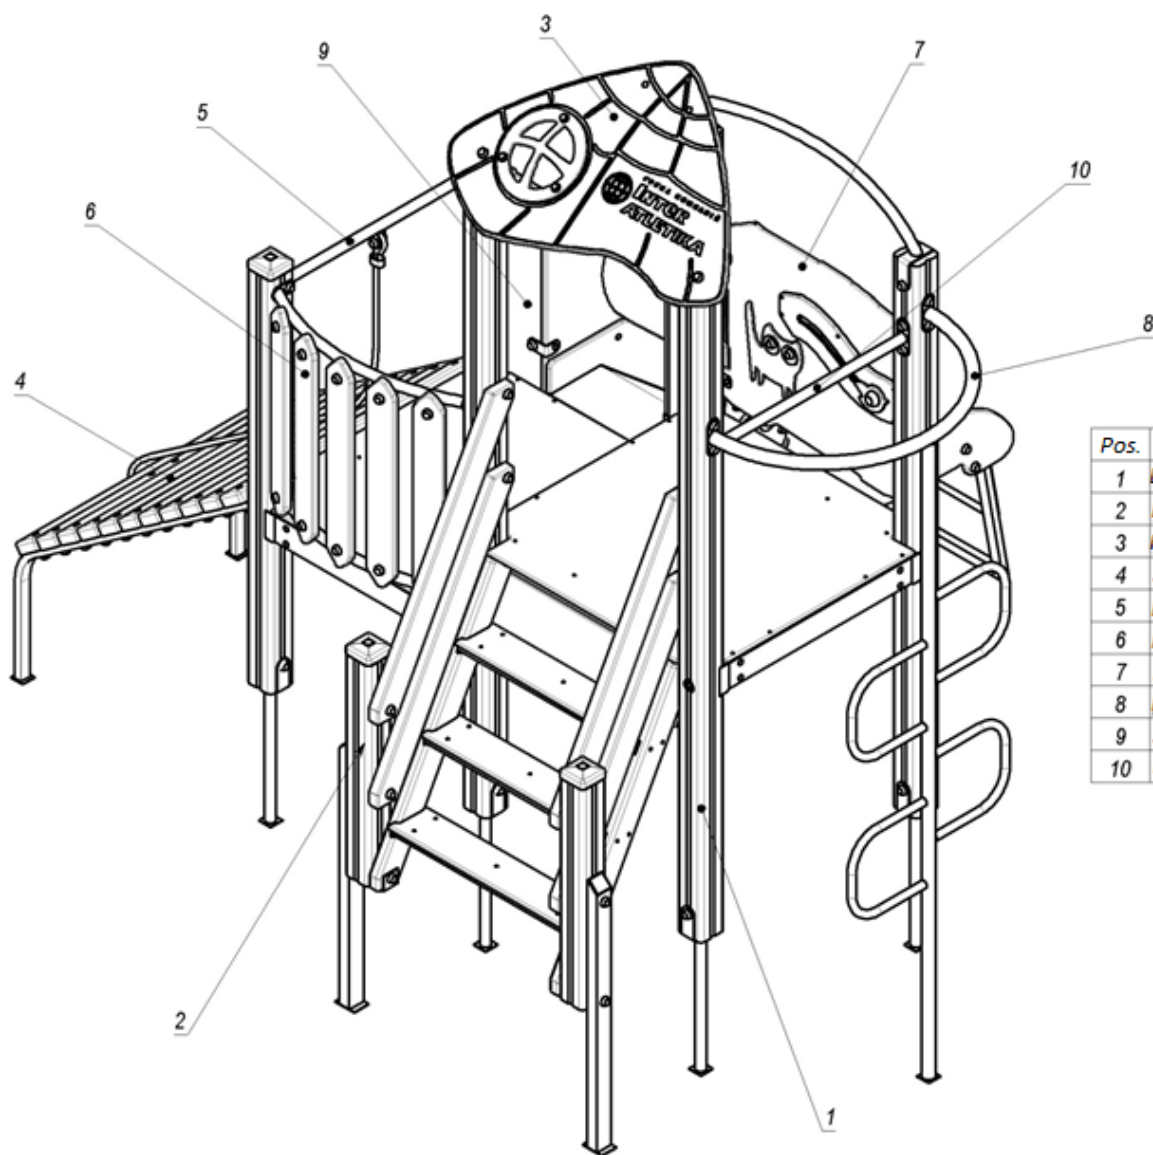


Pos.	Name	Weight,kg	Q-ty	Note
1	Double tower (0,7-1 m)	116	1	
2	Ladder with wooden handrails 1m	39	1	
3	Roof assembly	11	1	
4	Straight slide 0,7 m assembly	39	1	
5	Brace rod with rope assembly	3	1	
6	Fence assembly	10	1	
7	Fence assembly	8	1	
8	Ladder with steps 1m assembly	15	1	
9	Slide 700mm NEW assembly	43	1	
10	Brace rod assembly	1	1	

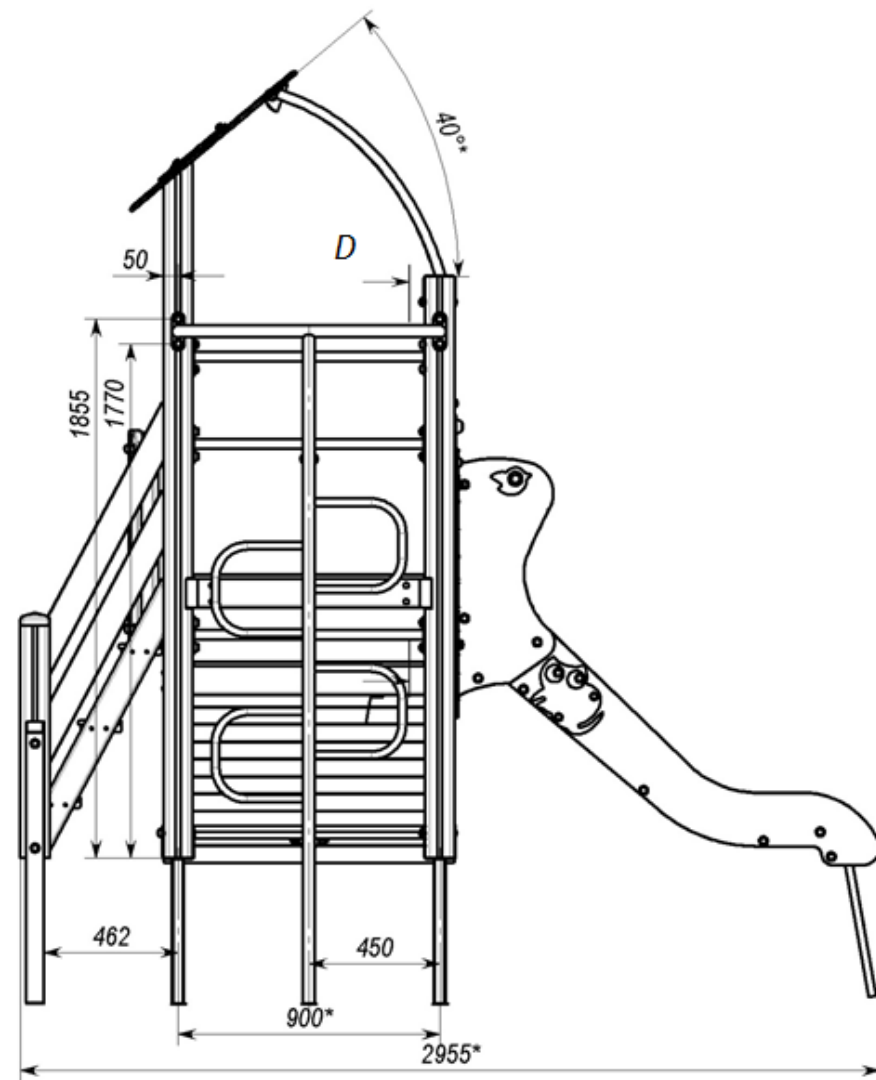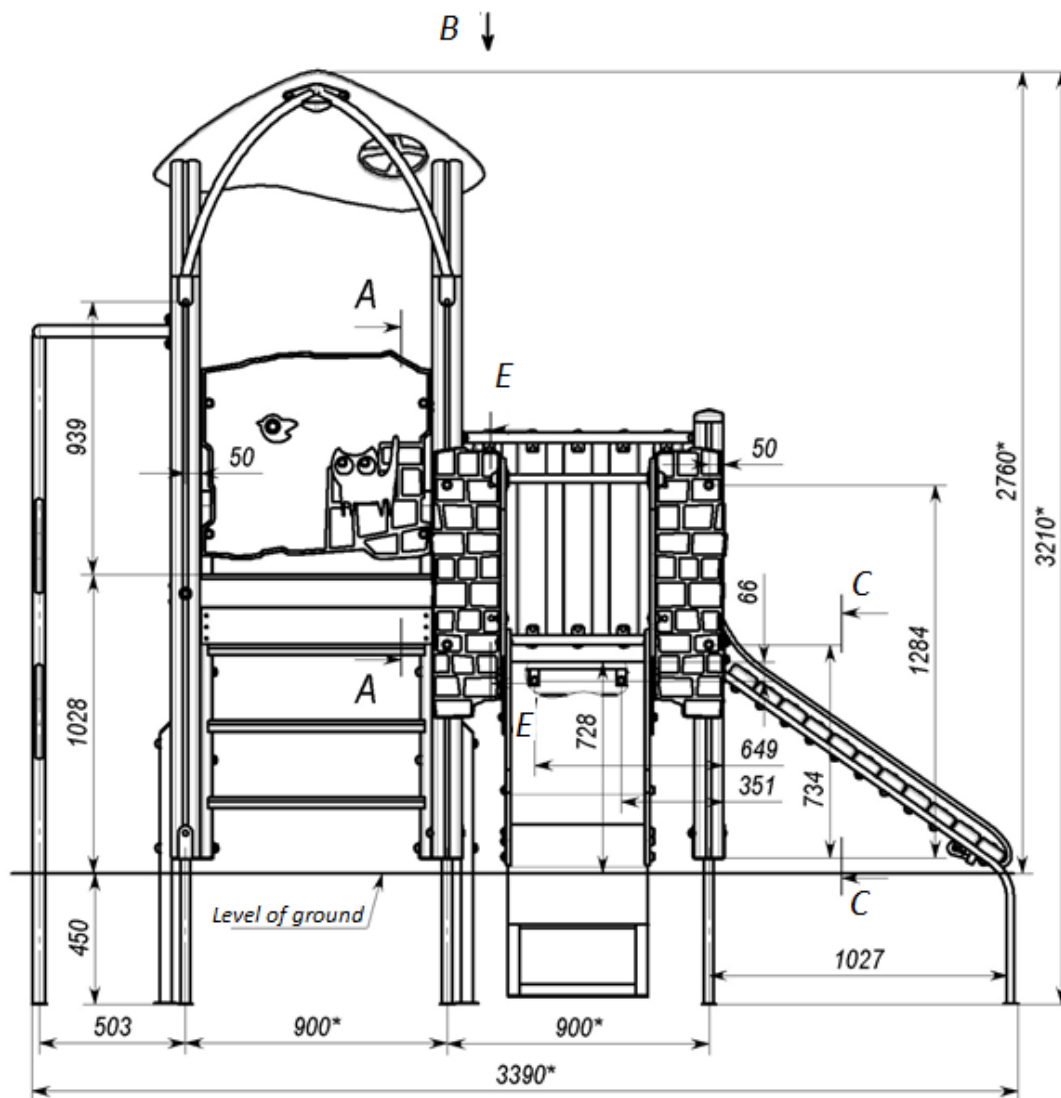

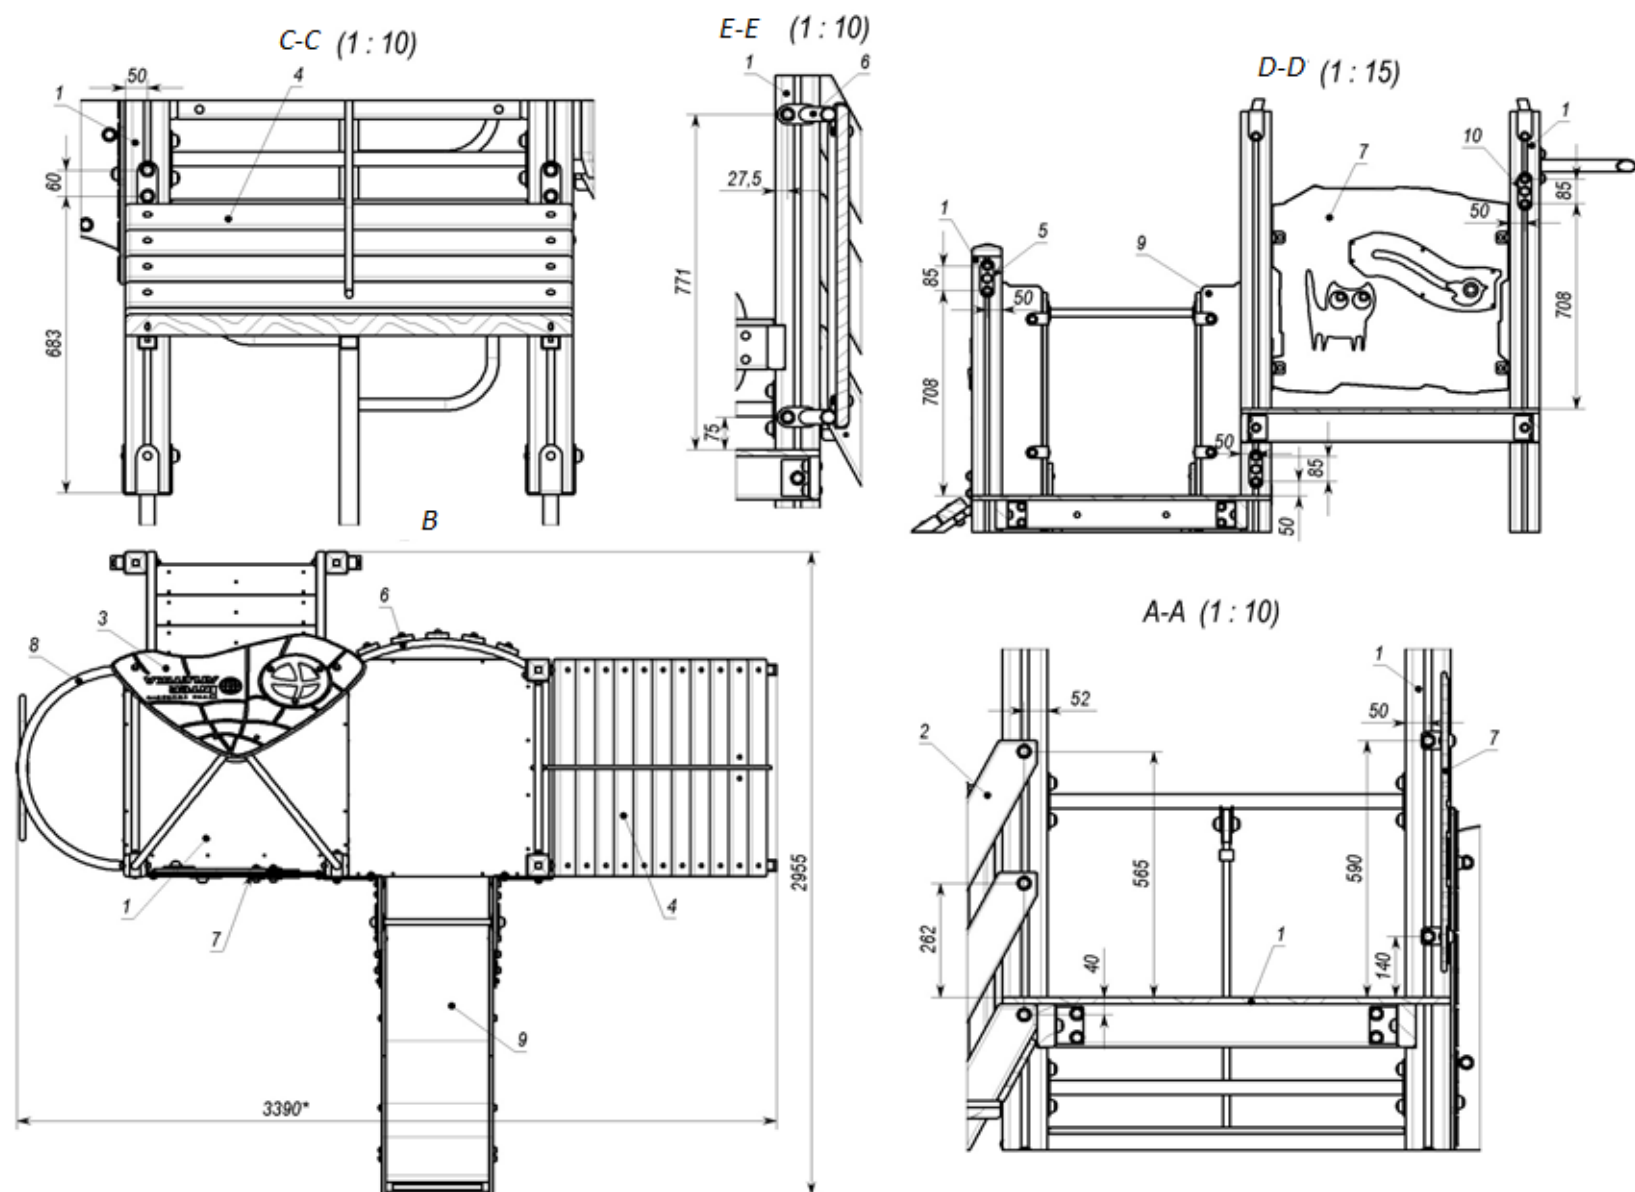


Picture 1 – Complete set and characteristics of the parts of the product

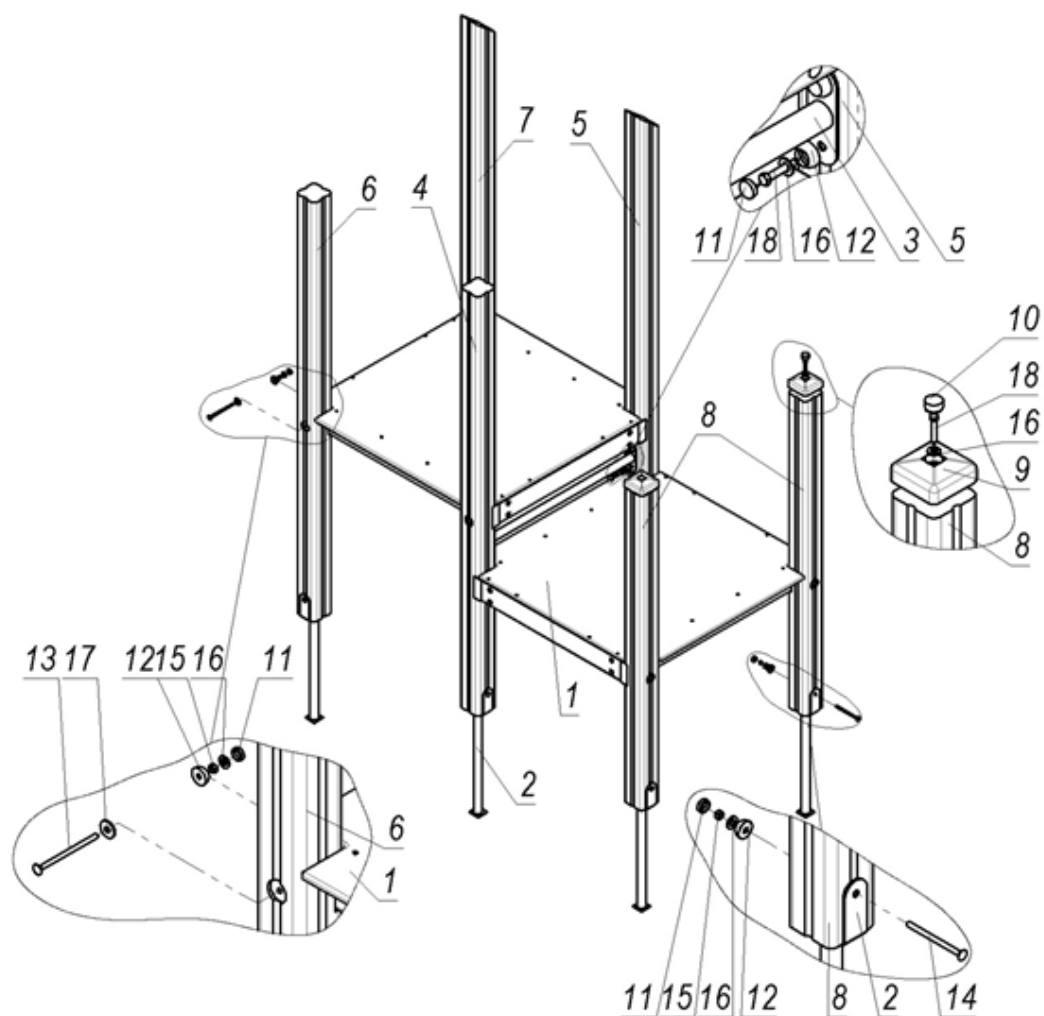

Pos.	Name	Weight, kg	Q-ty	Note
1	Platform	19	2	
2	Beam support	2	6	Brown
3	Brace rod	2	1	Brown
4	Beam	11	1	RC-720 (winewood)
5	Beam	13	1	RC-720 (winewood)
6	Beam 2,0m	11	1	RC-720 (winewood)
7	Beam	13	1	RC-720 (winewood)
8	Beam 1,5m	8	2	RC-720 (winewood)
9	Cap		2	Yellow
10	Cap		2	Yellow
11	Cap M8	.	18	Yellow
12	Cup M8	.	18	Yellow
13	Bolt M8x130 GOST7802	.	8	
14	Bolt M8x120 GOST7802	.	6	
15	Nut M8 GOST5915	.	14	
16	Washer 10 GOST11371	.	20	
17	Washer 10 GOST6958	.	8	
18	Screw 8x50 GOST11473	.	6	

Picture 2 – Complete set and tower assembly scheme

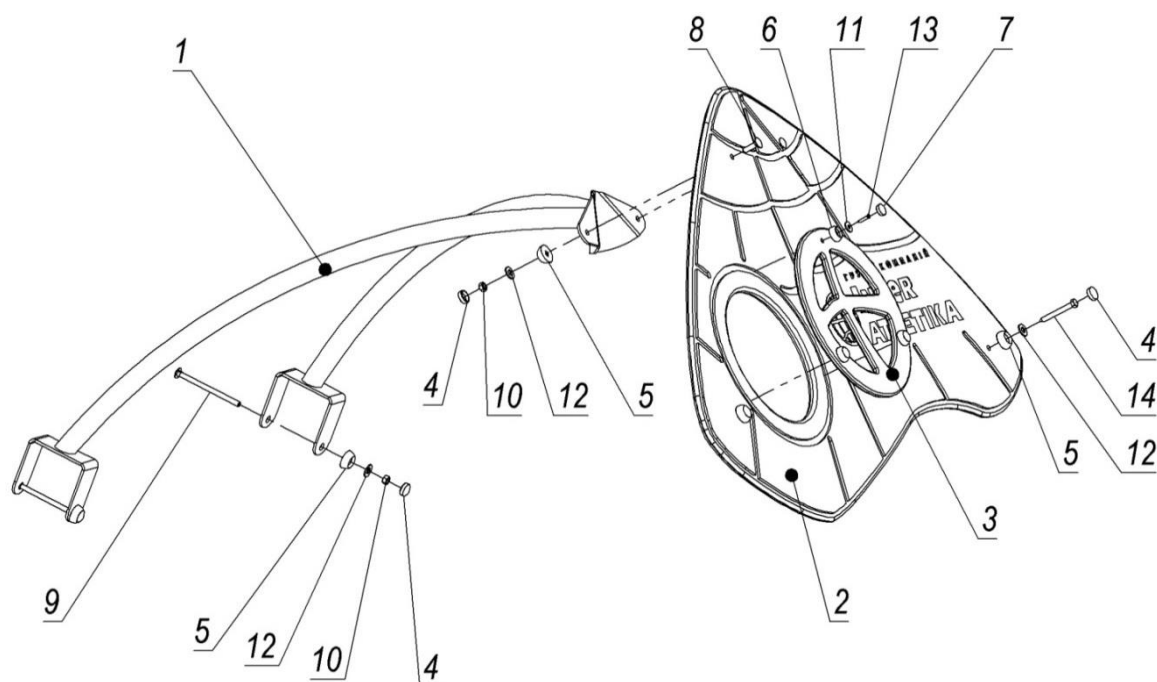

For T810 NEWZOF

Pos.	Name	Weight, kg	Q-ty	Note
1	Roof support	6	1	Orange
2	Gable	5	1	Orange
3	Cover plate "Window"	1	1	Green
4	Cup M8	.	6	Yellow
5	Cap M8	.	6	Yellow
6	Cup M6	.	3	Yellow
7	Cap M6	.	3	Yellow
8	Bolt M8x30 GOST7802	.	2	
9	Bolt M8x120 GOST7802	.	2	
10	Nut M8 GOST5915	.	4	
11	Washer 6 GOST6958	.	3	
12	Washer 10 GOST11371	.	6	
13	Screw 4x25 GOST1145	.	3	
14	Screw 8x70 GOST11473	.	2	


For T810 NEWKZG

Pos.	Name	Weight, kg	Q-ty	Note
1	Roof support	6	1	Yellow
2	Gable	5	1	Yellow
3	Cover plate "Window"	1	1	Red
4	Cup M8	.	6	Yellow
5	Cap M8	.	6	Yellow
6	Cup M6	.	3	Yellow
7	Cap M6	.	3	Yellow
8	Bolt M8x30 GOST7802	.	2	
9	Bolt M8x120 GOST7802	.	2	
10	Nut M8 GOST5915	.	4	
11	Washer 6 GOST6958	.	3	
12	Washer 10 GOST11371	.	6	
13	Screw 4x25 GOST1145	.	3	
14	Screw 8x70 GOST11473	.	2	

For T810 NEWZGF

Pos.	Name	Weight, kg	Q-ty	Note
1	Roof support	6	1	Yellow
2	Gable	5	1	Yellow
3	Cover plate "Window"	1	1	Green
4	Cup M8	.	6	Yellow
5	Cap M8	.	6	Yellow
6	Cup M6	.	3	Yellow
7	Cap M6	.	3	Yellow
8	Bolt M8x30 GOST7802	.	2	
9	Bolt M8x120 GOST7802	.	2	
10	Nut M8 GOST5915	.	4	
11	Washer 6 GOST6958	.	3	
12	Washer 10 GOST11371	.	6	
13	Screw 4x25 GOST1145	.	3	
14	Screw 8x70 GOST11473	.	2	

Picture 3 – Complete set and roof assembly scheme

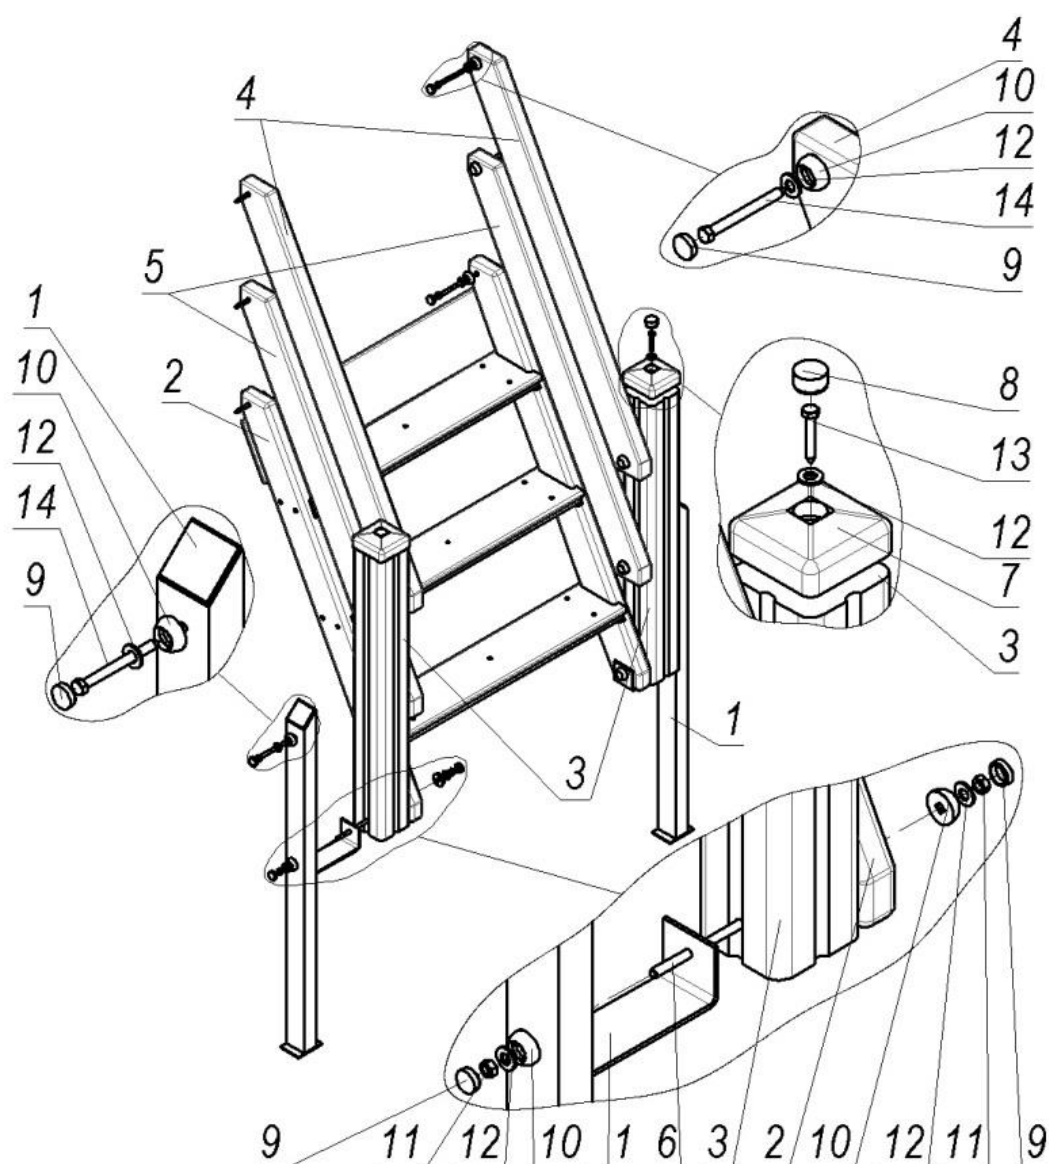


For T810NEWZOF

Pos.	Name	Weight, kg	Q-ty	Note
1	Rack	4	2	Brown
2	Wooden ladder 1m	15	1	
3	Support	3	2	RC-720 (winewood)
4	Handrail	3	2	Orange
5	Handrail	3	2	RC-720 (winewood)
6	Pivot L=210mm	.	2	
7	Cap	.	2	Yellow
8	Cap	.	2	Yellow
9	Cap M8	.	16	Yellow
10	Cup M8	.	16	Yellow
11	Nut M8 GOST 5915	.	4	
12	Washer 10 GOST11371	.	18	
13	Screw 8x50 GOST11473	.	2	
14	Screw 8x90 GOST11473	.	12	

For T810NEWKZG, T810NEWZGF

Pos.	Name	Weight, kg	Q-ty	Note
1	Rack	4	2	Brown
2	Wooden ladder 1m	15	1	
3	Support	3	2	RC-720 (winewood)
4	Handrail	3	2	Yellow
5	Handrail	3	2	RC-720 (winewood)
6	Pivot L=210mm	.	2	
7	Cap	.	2	Yellow
8	Cap	.	2	Yellow
9	Cap M8	.	16	Yellow
10	Cup M8	.	16	Yellow
11	Nut M8 GOST 5915	.	4	
12	Washer 10 GOST11371	.	18	
13	Screw 8x50 GOST11473	.	2	
14	Screw 8x90 GOST11473	.	12	

Picture 4 – Complete set and wooden ladder assembly scheme

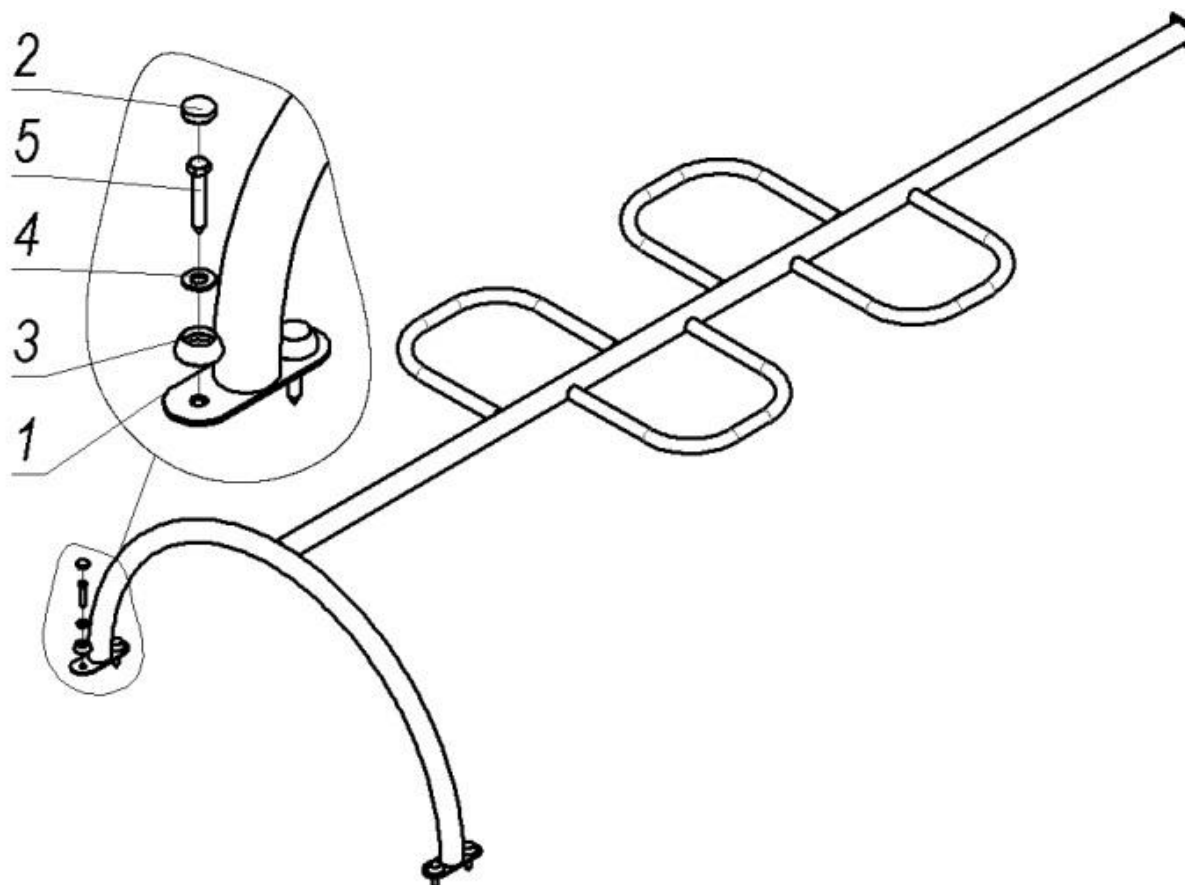


For T810 NEWZOF, T810 NEWZGF

<i>Pos.</i>	<i>Name</i>	<i>Weight, kg</i>	<i>Q-ty</i>	<i>Note</i>
1	Ladder with steps 1m	15	1	Green
2	Cap M8	.	4	Yellow
3	Cup M8	.	4	Yellow
4	Washer 10 GOST11371	.	4	
5	Screw 8x50 GOST11473	.	4	

For T810 NEWFZG

<i>Pos.</i>	<i>Name</i>	<i>Weight, kg</i>	<i>Q-ty</i>	<i>Note</i>
1	Ladder with steps 1m	15	1	Red
2	Cap M8	.	4	Yellow
3	Cup M8	.	4	Yellow
4	Washer 10 GOST11371	.	4	
5	Screw 8x50 GOST11473	.	4	

Picture 5 – Complete set and ladder with steps assembly scheme

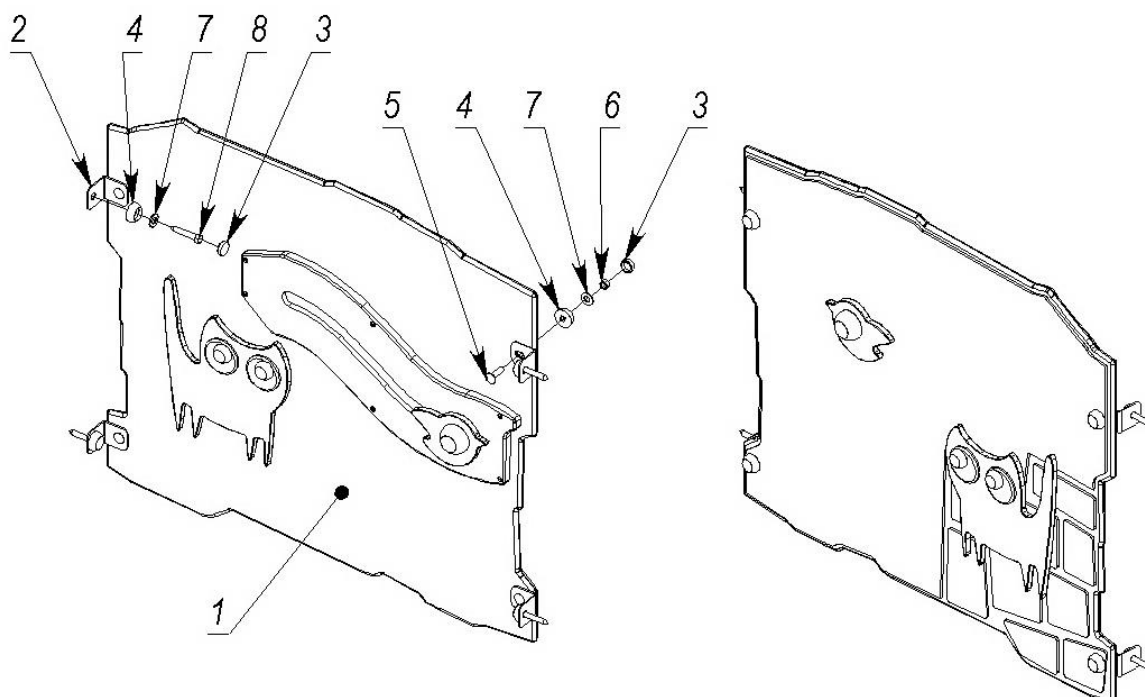


For T810 NEWZOF, T810 NEWZGF

Pos.	Name	Weight,kg	Q-ty	Note
1	Fence	7	1	Violet
2	Plate	.	4	Yellow
3	Cap M8	.	8	Yellow
4	Cup M8	.	8	Yellow
5	Bolt M8x30 GOST7802	.	4	
6	Nut M8 GOST 5915	.	4	
7	Washer 10 GOST11371	.	8	
8	Screw 8x50 GOST11473	.	4	

For T810 NEWKZG

Pos.	Name	Weight,kg	Q-ty	Note
1	Fence	7	1	Green
2	Plate	.	4	Yellow
3	Cap M8	.	8	Yellow
4	Cup M8	.	8	Yellow
5	Bolt M8x30 GOST7802	.	4	
6	Nut M8 GOST 5915	.	4	
7	Washer 10 GOST11371	.	8	
8	Screw 8x50 GOST11473	.	4	

Picture 6 – Complete set and fence 1 scheme

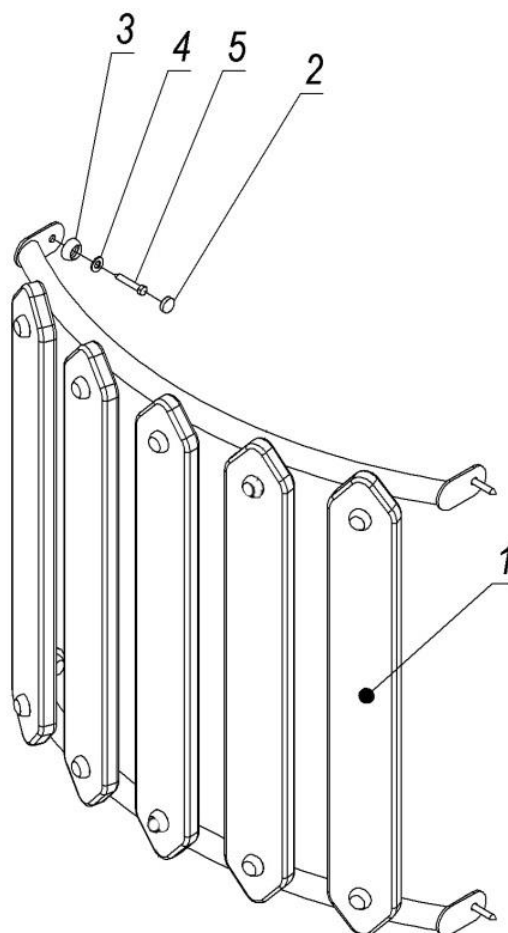


For T810NEWZOF, T810NEWZGF

Pos.	Name	Weight, kg	Q-ty	Note
1	Fence	10	1	Green
2	Cap M8	.	4	Yellow
3	Cup M8	.	4	Yellow
4	Washer 10 GOST11371	.	4	
5	Screw 8x50 GOST11473	.	4	

For T810NEWKZG

Pos.	Name	Weight, kg	Q-ty	Note
1	Fence	10	1	Red
2	Cap M8	.	4	Yellow
3	Cup M8	.	4	Yellow
4	Washer 10 GOST11371	.	4	
5	Screw 8x50 GOST11473	.	4	

Picture 7 – Complete set and fence 2 assembly scheme

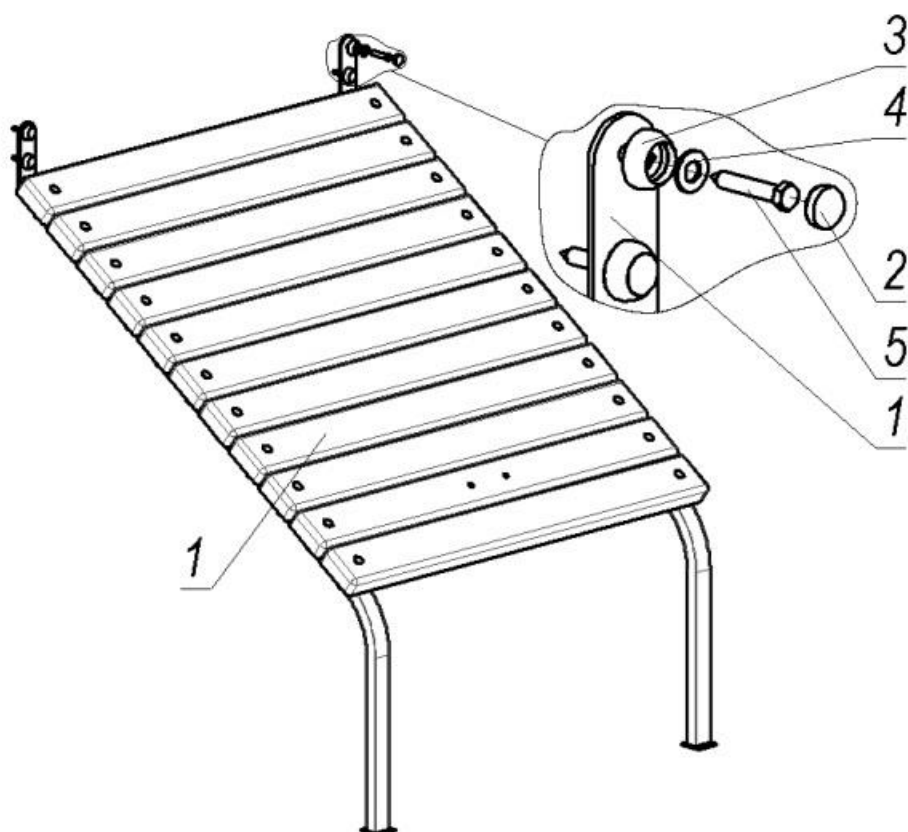


For T810 NEWZOF, T810 NEWZGF

Pos.	Name	Weight, kg	Q-ty	Note
1	Straight climb 0,7m	39	1	Violet
2	Cap M8	.	4	Yellow
3	Cup M8	.	4	Yellow
4	Washer 10 GOST11371	.	4	
5	Screw 8x50 GOST11473	.	4	

For T810 NEWKZG

Pos.	Name	Weight, kg	Q-ty	Note
1	Straight climb 0,7m	39	1	Green
2	Cap M8	.	4	Yellow
3	Cup M8	.	4	Yellow
4	Washer 10 GOST11371	.	4	
5	Screw 8x50 GOST11473	.	4	

Picture 8 – Complete set and straight climb assembly scheme

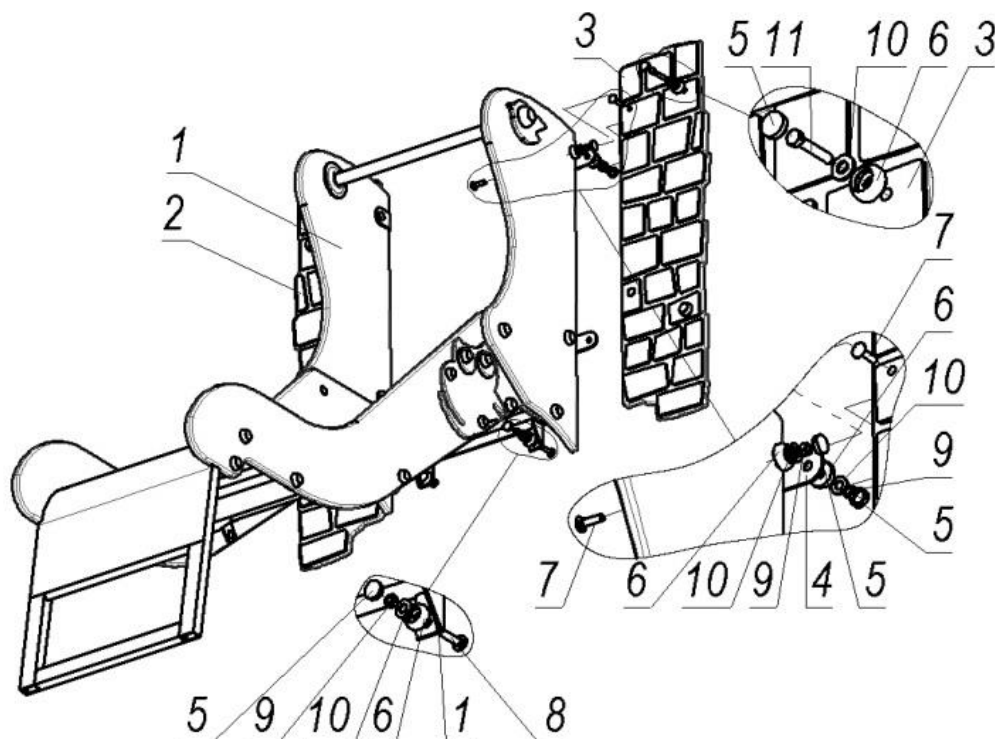

For T810 NEWZOF

Pos.	Name	Weight, kg	Q-ty	Note
1	Slide 700 mm	39	1	Green
2	Cover plate Right wall	2	1	Orange
3	Cover plate Left wall	2	1	Orange
4	Angle bar	0,1	4	Blue
5	Cap M8	.	14	Yellow
6	Cup M8	.	14	Yellow
7	Bolt M8x30 GOST7802	.	8	
8	Bolt M8x40 GOST7802	.	2	
9	Nut M8 GOST 5915	.	10	
10	Washer 10 GOST11371	.	14	
11	Screw 8x50 GOST11473	.	4	


For T810 NEWZGF

Pos.	Name	Weight, kg	Q-ty	Note
1	Slide 700 mm	39	1	Green
2	Cover plate Right wall	2	1	Yellow
3	Cover plate Left wall	2	1	Yellow
4	Angle bar	0,1	4	Blue
5	Cap M8	.	14	Yellow
6	Cup M8	.	14	Yellow
7	Bolt M8x30 GOST7802	.	8	
8	Bolt M8x40 GOST7802	.	2	
9	Nut M8 GOST 5915	.	10	
10	Washer 10 GOST11371	.	14	
11	Screw 8x50 GOST11473	.	4	

For T810 NEWKZG

Pos.	Name	Weight, kg	Q-ty	Note
1	Slide 700 mm	39	1	Red
2	Cover plate Right wall	2	1	Yellow
3	Cover plate Left wall	2	1	Yellow
4	Angle bar	0,1	4	Blue
5	Cap M8	.	14	Yellow
6	Cup M8	.	14	Yellow
7	Bolt M8x30 GOST7802	.	8	
8	Bolt M8x40 GOST7802	.	2	
9	Nut M8 GOST 5915	.	10	
10	Washer 10 GOST11371	.	14	
11	Screw 8x50 GOST11473	.	4	

Picture 9 – Complete set and slide assembly scheme

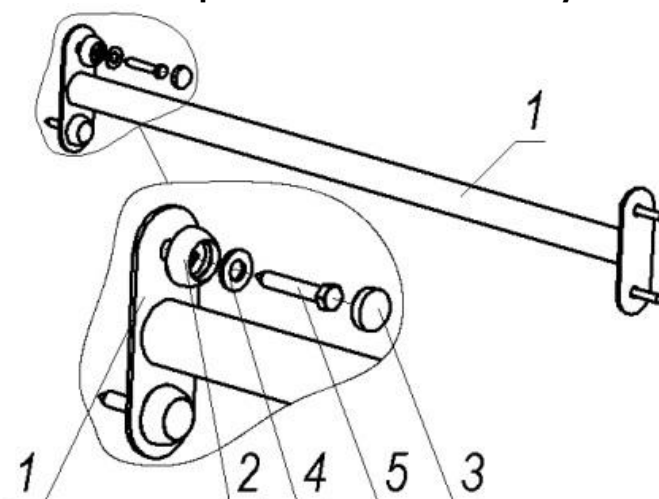

For T810 NEWZOF

Pos.	Name	Weight, kg	Q-ty	Note
1	Brace rod	0,5	1	Orange
2	Cup M8	.	4	Yellow
3	Cap M8	.	4	Yellow
4	Washer 10 GOST11371	.	4	
5	Screw 8x50 GOST11473	.	4	


For T810 NEWZGF

Pos.	Name	Weight, kg	Q-ty	Note
1	Brace rod	0,5	1	Yellow
2	Cup M8	.	4	Yellow
3	Cap M8	.	4	Yellow
4	Washer 10 GOST11371	.	4	
5	Screw 8x50 GOST11473	.	4	

For T810 NEWKZG

Pos.	Name	Weight, kg	Q-ty	Note
1	Brace rod	0,5	1	Green
2	Cup M8	.	4	Yellow
3	Cap M8	.	4	Yellow
4	Washer 10 GOST11371	.	4	
5	Screw 8x50 GOST11473	.	4	

Picture 10 – Complete set brace rod assembly scheme

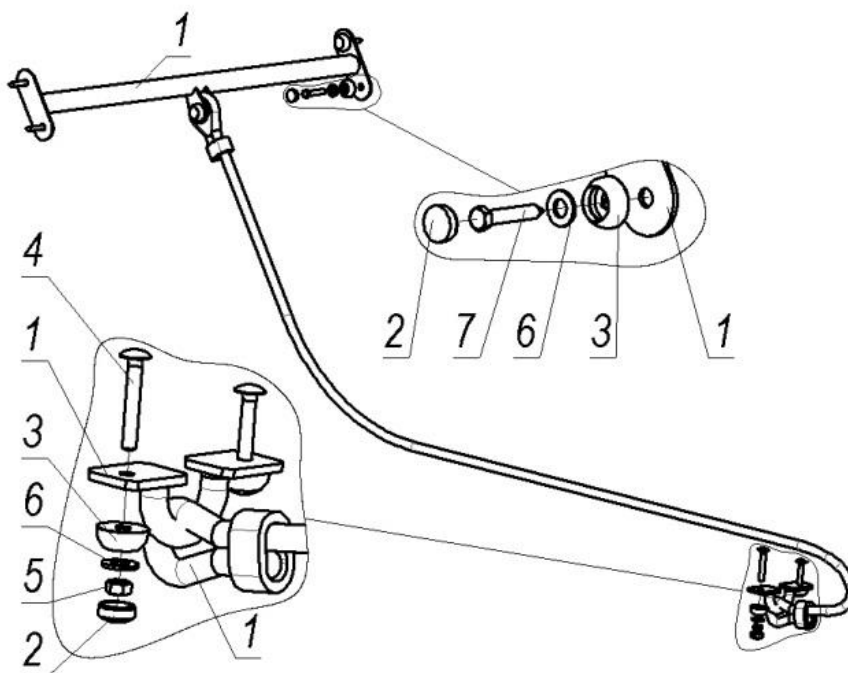


For T810 NEWZOF, T810 NEWZGF

Pos.	Name	Weight, kg	Q-ty	Note
1	Brace rod with rope assembly	3	1	Green
2	Cap M8	.	6	Yellow
3	Cup M8	.	6	Yellow
4	Bolt M8x55 GOST7802	.	2	
5	Nut M8 GOST 5915	.	2	
6	Washer 10 GOST11371	.	6	
7	Screw 8x50 GOST11473	.	4	


For T810 NEWKZG

Pos.	Name	Weight, kg	Q-ty	Note
1	Brace rod with rope assembly	3	1	Red
2	Cap M8	.	6	Yellow
3	Cup M8	.	6	Yellow
4	Bolt M8x55 GOST7802	.	2	
5	Nut M8 GOST 5915	.	2	
6	Washer 10 GOST11371	.	6	
7	Screw 8x50 GOST11473	.	4	

Picture 11 – Complete set and brace rod with rope assembly scheme

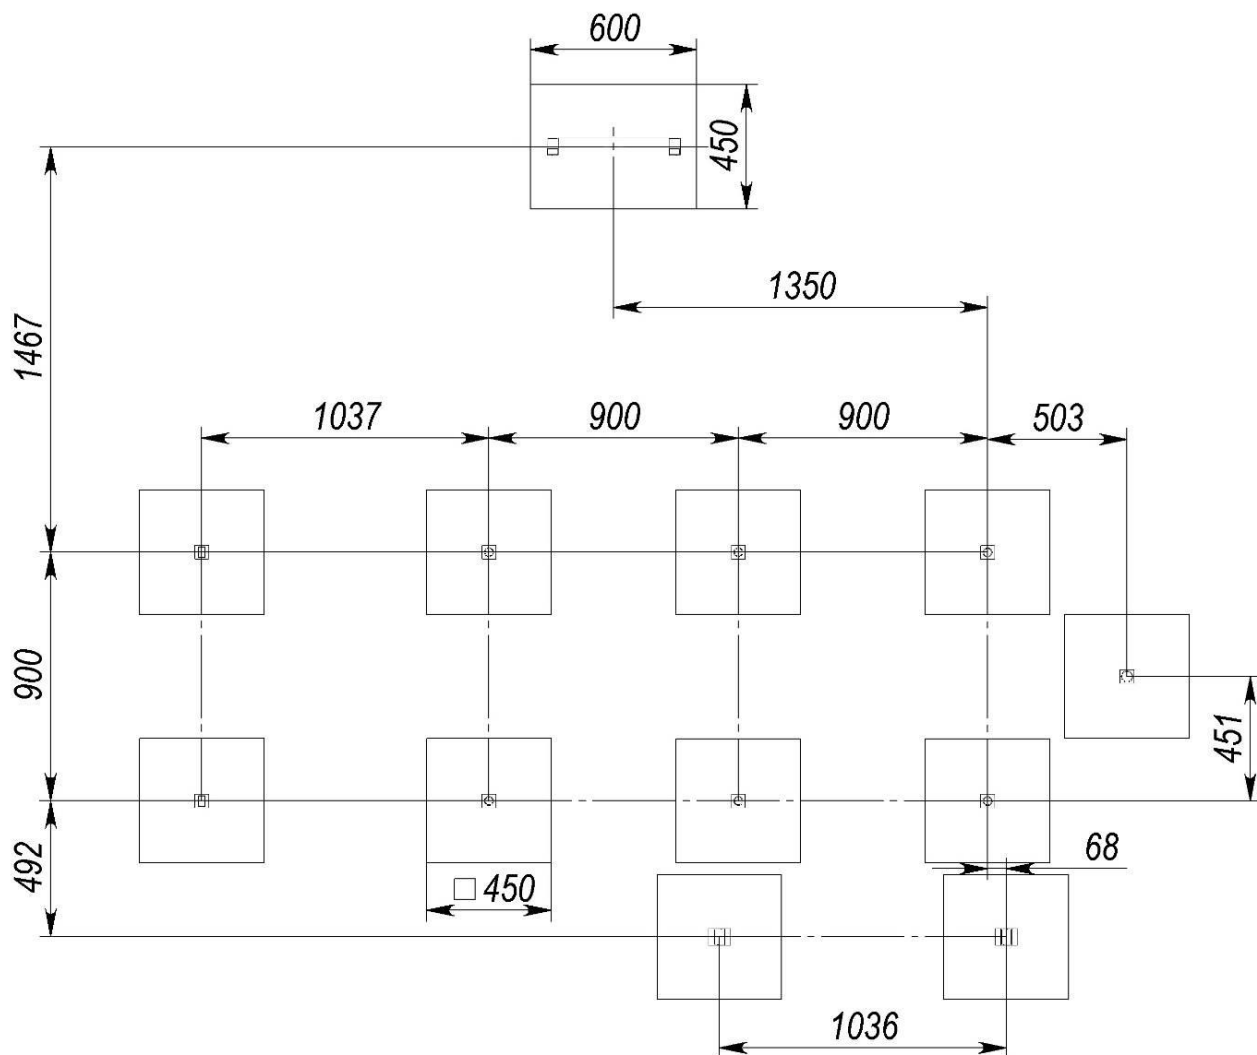

Picture 12 – Foundation scheme

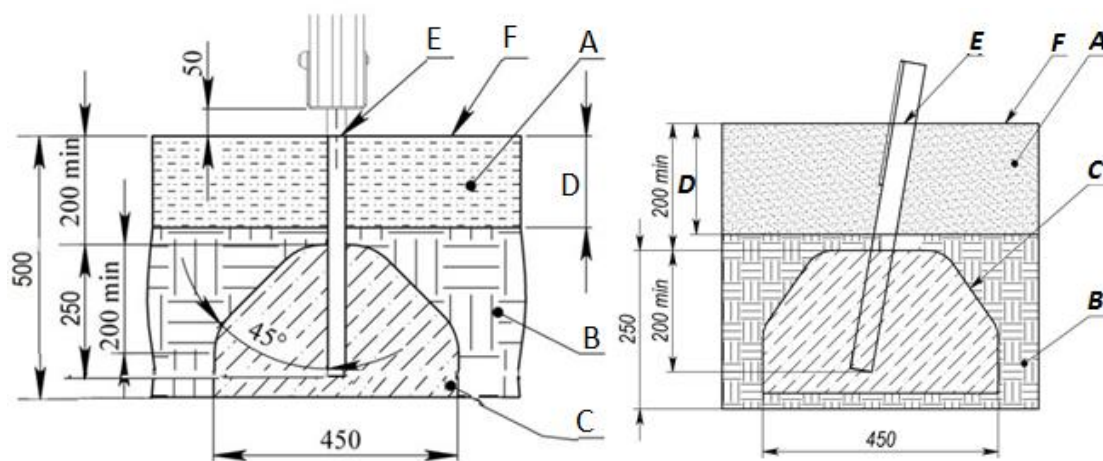


Picture 13 – Concreting scheme

Examples of impact-absorbing coverage

<i>Material</i> ¹	<i>Description</i>	<i>Minimal depth, mm</i>	<i>Height of fall, mm</i>
<i>Turf</i>			≤1000
<i>Tree bark</i>	<i>grain size 20-80 mm</i>	200	≤2000
		300	≤3000
<i>Sawdust</i>	<i>grain size 5-30 mm</i>	200	≤2000
		300	≤3000
<i>Sand</i> ²	<i>grain size 0,2-2 mm</i>	200	≤2000
		300	≤3000
<i>Gravel</i> ²	<i>grain size 2-8 mm</i>	200	≤2000
		300	≤3000
<i>Other materials</i>	<i>Tested by NIS according to EN 1177</i>	<i>Under the test</i>	<i>Under the test</i>

1. Materials specially prepared for playgrounds.

2. Clayish admixture is not allowed. Grain size is gained by separator sift as in EN 933-1.

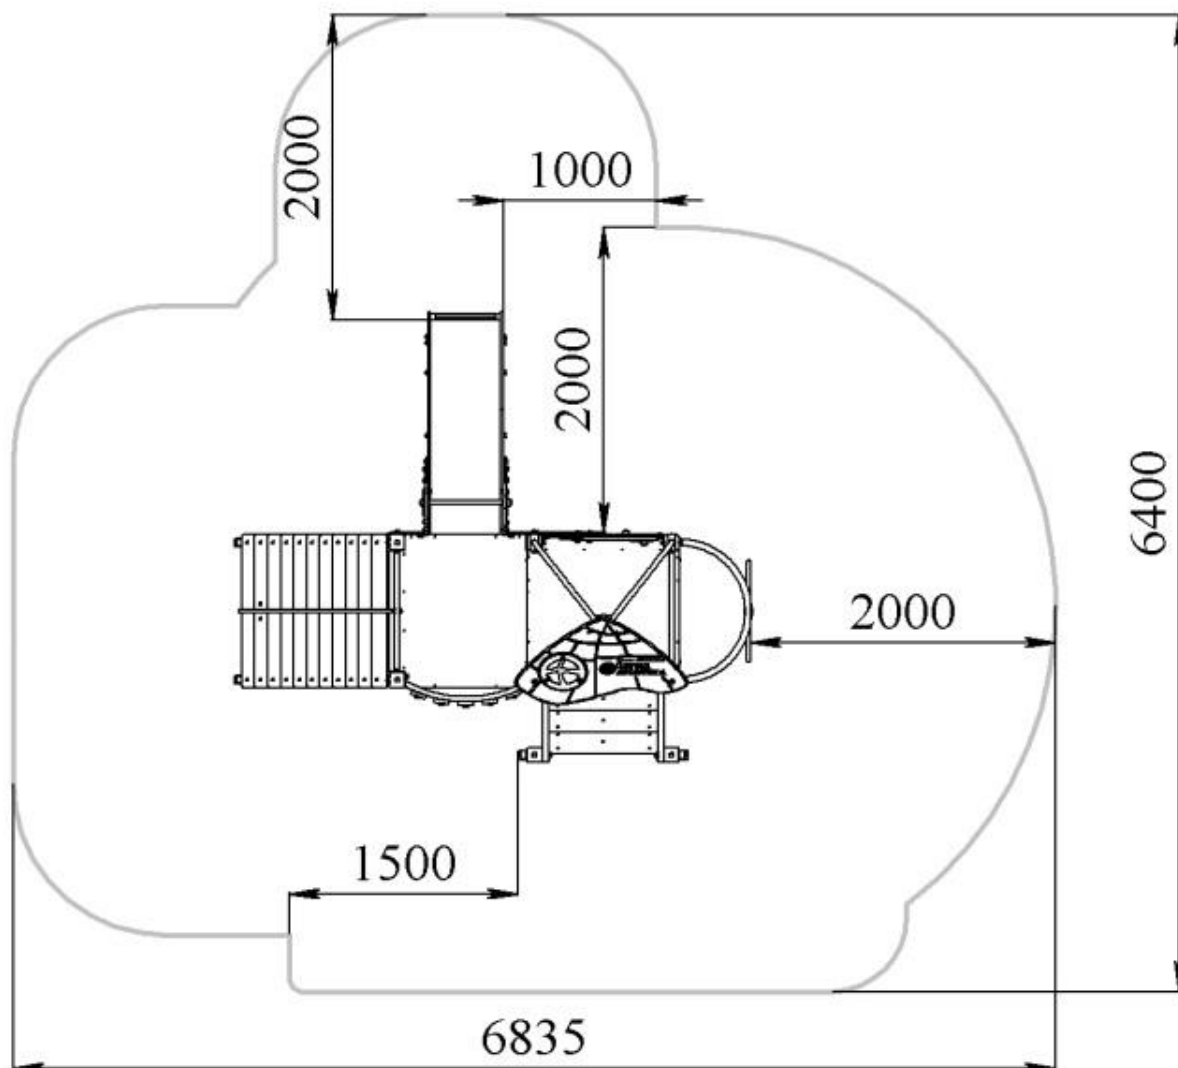

Picture 14 – Safety zone