
interatletika™

PRODUCTION AND SALE OF SPORTS GOODS

Customer support:
+38 095 273 81 53
play.interatletika.com

DATA SHEET

Playground complex «Big City-6» TE936

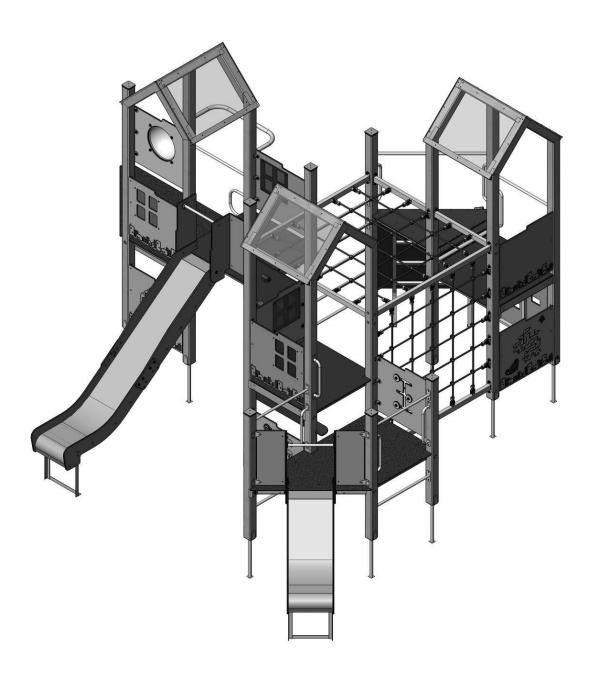

CONTENT

1. GENERAL INFORMATION	Ошиока: закладка не определена.
2. ASSEMBLING AND INSTALLATION OF THE PRODUCT	
3. PRODUCT USE	Ошибка! Закладка не определена.
4. PRODUCT MAINTENANCE	Ошибка! Закладка не определена.
5. STORAGE, TRANSPORT AND DISPOSAL INFORMATION	I Ошибка! Закладка не определена.
6. TECHNICAL DATA AND ASSEMBLY SCHEMES	
FOR NOTES	
	-

1. GENERAL INFORMATION

Purpose and content of this document. This document contains general description of the equipment, information on installation, intended use, maintenance, repair and manufacturer's warranty.

Distribution of this document for product modifications. Manufacturer can make changes to the product design to improve its performance, change the design, etc. This document may not contain a description of such changes, but applies to the following modified products.

2. ASSEMBLING AND INSTALLATION OF THE PRODUCT

Tools and accessories. The product does not include the tools required for installation.

Procedure of assembling and installing the product.

- 1) Mark the area according to the foundation location scheme.
- 2) Make the digs for installation of the embedded parts and the attachments. The depth of these digs leveled by deepening or adding the gravel.
- 3) Assemble and install the equipment in accordance with the assembly schemes chapter 7.
- 4) To concrete the embedded parts and support constructions of the attachment elements. During installation of equipment on a sand soil, overall sizes of the digs must be increased by 15-20%.

To avoid cracking of the wood, it is necessary to drill the holes with diameter 0,6..0,7 of the start diameter and depth up to 0,8 of it's length for the screws with diameter more than 4 mm.

WARNING! The presence and participation of the children in the process of installation of the equipment is not allowed.

3. PRODUCT USE

Do not use the product until it has been fully and completely installed.

Do not use the product by users of a different age and weight category.

Before using the product, clear the safety zone of unnecessary objects that may cause harm to the user (debris, tools left after assembly and installation, etc.).

Do not use the product in adverse weather conditions (ice, snow, rain, hail, strong winds, etc.), which may cause injury to the user.

4. PRODUCT MAINTENANCE

You have purchased high-quality and reliable equipment. In the process of its production, the requirements of regulatory and technical documents of Ukraine, the CIS countries and the European Union regulating the production of children's gaming equipment were taken into account. However, it should not be forgotten that when operating any technical product, certain rules and requirements must be followed. Despite the fact that our product is of high quality and reliability, this rule applies to it in full. You should be aware that the implementation of the following rules and recommendations for product maintenance is aimed at ensuring that your child, the child of your friends or acquaintances is safe and no unforeseen factors threaten his health, life.

Remember that the operation of the product is accompanied by the influence of various negative factors on it, a complete list of which cannot be predicted. Among them, an important place is occupied by natural factors and factors caused by human influence on equipment. As a rule, their action initially leads to disruptions in the appearance of the product. Thus, under the influence of factors caused by the exploitation of a person, there may be damage to the integrity of the paint coating of parts made of wood, in the form of scuffs, chips, incisions, and when exposed to parts made of metal, damage to the paint coating in the form of nicks, chips, abrasion, etc. This leads to the emergence and development of defects that can be the cause of the destruction of the product. The product is particularly dangerous if it is used for other than its intended purpose, if the permissible loads are exceeded, or if vandalism occurs, as these factors can cause irreversible changes in the structure of the material from which the product is made, leading to destruction.

The maintenance of the product implies, first of all, the responsibility of the user to comply with all recommendations provided in this document, starting with a daily inspection of the external condition of the product before operation.

Daily inspection of the product is a very important procedure. With its help, you can timely detect any changes in the appearance of the product (deformation of individual parts, deformation of the structure as a whole or part of it, damage to parts, cracks of welds, as well as the absence of fastening of parts of the product, etc.).

Before using the product, check its operability, absence of damage, dirt on the product, sharp edges, reliability of fixing the structure, absence of unnecessary objects on the surface of the site. If the product is damaged, fully or partially inoperable, or has any other defects, do not use it.

During operation it is also necessary to inspect the condition of the product periodically - the current inspection. It includes an external inspection of the product, checking its operability (in the presence of moving elements - the smoothness of the movement of mechanisms, compliance with operating modes, etc.). Current inspection allows you to detect malfunctions caused by the operation of equipment, climatic conditions, acts of vandalism and other factors, until they reach a critical level and the destruction of the product. The current inspection is carried out in order to detect foreign objects that may threaten the user and lead to violations of the functioning of the product. The frequency of the current inspection is set by the owner taking into account the operating conditions. If you do not have sufficient technical knowledge and skills to conduct such inspections, we recommend you to contact the authorized specialists of the manufacturer in order to obtain advice.

Every three months, a scheduled inspection should be carried out, which primarily concerns the foundation part, load-bearing elements and connection nodes of elements (their integrity and degree of deterioration).

Page 3

PLAY.INTERATLETIKA.COM

The main annual inspection must be carried out annually by authorised specialists of the manufacturer. During the inspection, the technical condition of the equipment shall be assessed for compliance with safety requirements. The degree of deterioration and damage to wooden elements and their ability to withstand the applied loads, damage, corrosion of metal elements and the impact of these factors on the safety of the product are determined. The inspection also helps to identify the impact of repairs, if any, on the safety of the equipment.

Based on the results of the inspection, a maintenance procedure is carried out to eliminate the identified discrepancies in the product's operation. This procedure includes assessing the condition of parts and assemblies, replacing worn parts, and restoring the integrity of protective coatings. The results of the inspections, as well as the procedures carried out as a result of the inspection and maintenance of the product must be properly documented in the Registration Journal, which is an integral part of this passport. The owner of the product must keep the acts of maintenance of the product, acts of repair work.

5. STORAGE, TRANSPORT AND DISPOSAL INFORMATION

The product is transported in the manufacturer's packaging by any means of transport that ensures its safety and protection from external factors (rain, snow, sunlight, water, high humidity, etc.).

Information about transportation

	Date	Brand, state number of	Position,	Signa-
Departure	Arrival	the ca/trailer	full name	ture

Before installation, store the product in the original packaging in dry, closed rooms with natural air ventilation. If it is necessary to transport the product to another location after use, it is recommended to use the manufacturer's packaging.

If long-term storage of the product is required, the following storage rules must be observed (the list of conditions is not complete):

- place the product in a closed dry room with natural ventilation;
- protect the product from external factors (dust, water drops, etc.) with a large plastic bag, leaving space for free air circulation;
 - take other measures to preserve the appearance and characteristics of the product during storage.

 When removing the product from storage and preparing for installation, follow the next recommendations:
 - remove the product from the packaging material (polyethylene, cardboard, other packaging materials);
 - remove dust and other contaminants from the surface of the product;
 - check completeness and absence of parts damage.

Storage information


Date		Product storage	Full name	Full name	Signature
Putting into storage	Removal from storage	conditions	ruii name	Signature	

After the end of the equipment's service life, the buyer independently determines the procedure for its use. If you decide to recycle, contact the seller or specialized organizations.


The equipment does not contain harmful impurities and materials that can harm your health and is not subject to special recycling.

6. TECHNICAL DATA AND ASSEMBLY SCHEMES


Length, mm	6201
Width, mm	5744
Height, mm	3462
Weight, kg	980
Height of fall, mm	2029
Age restrictions, years	Up to 12
Weight limits, kg	Up to 60

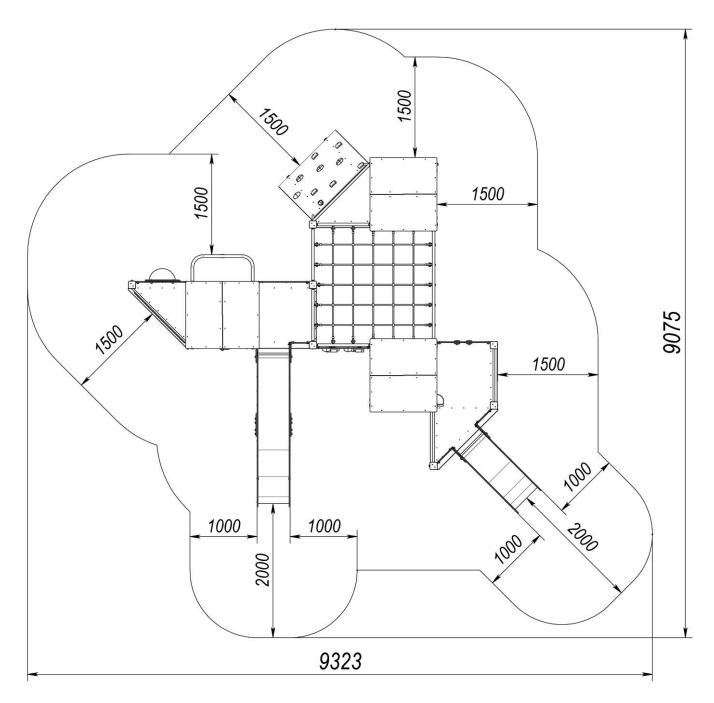

Picture 1 – Landing zone

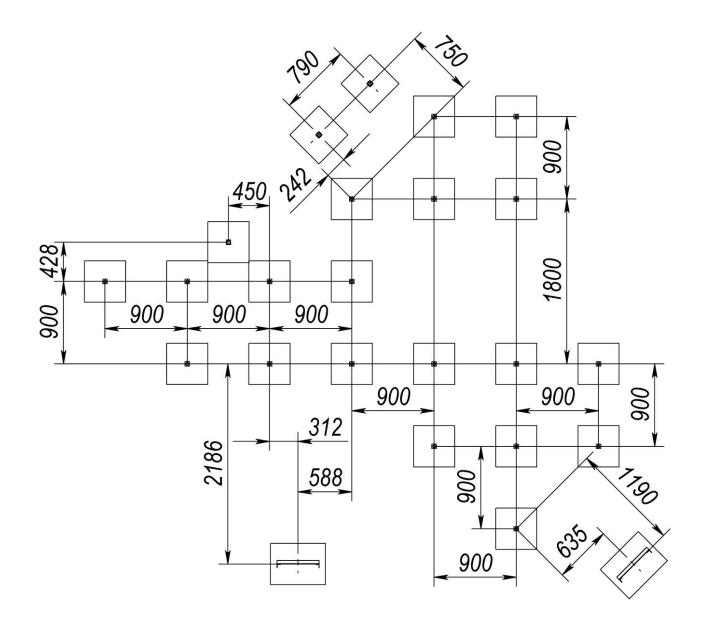


Picture 2 - Layout of foundations

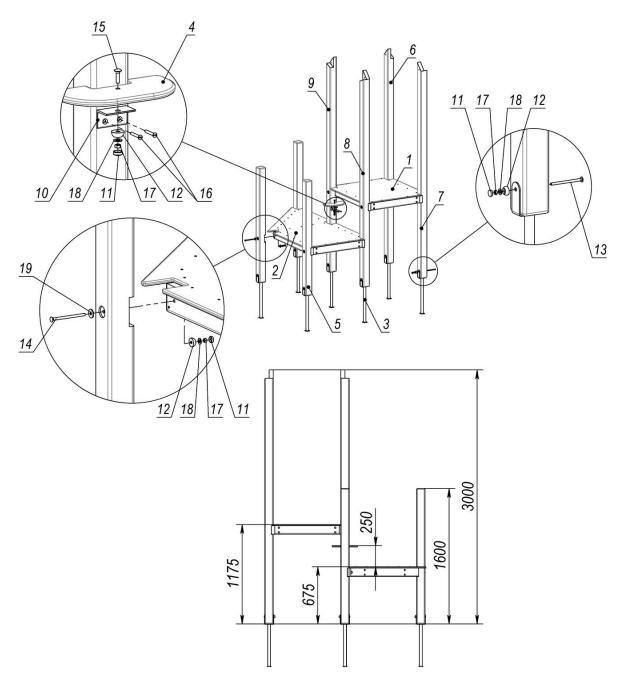

Pos.	Name	Weight, kg	Q-ty
1	Site 1x1 m	19	1
2	Double corner site (1x1.9)	31	1
3	Beam support	2	7
4	Step (150x300)		1
5	Beam 1.6m (mortise 0.7m)	9	3
6	Beam 3m (mortise 1.2)	17	1
7	Beam 3m (mortise 1.2)	17	1
8	Beam 3m (mortise 1.2-0.7)	17	1
9	Beam 3m (mortise 1.2-0.7)	17	1
10	Big angle bar		1

Pos.	Name	Weight, kg	Q-ty
11	Cap M8		17
12	Cup M8		17
13	Bolt M8*120 GOST7802		7
14	Bolt M8*130 GOST7802		9
15	Bolt M8*30 GOST7802		1
16	Screw 6x50 GOST1145		2
17	Nut M8 GOST5915		17
18	Washer 10 GOST11371		17
19	Washer 10 GOST6958		10


Picture 3 – Triple tower (0,7-0,7-1,2m)

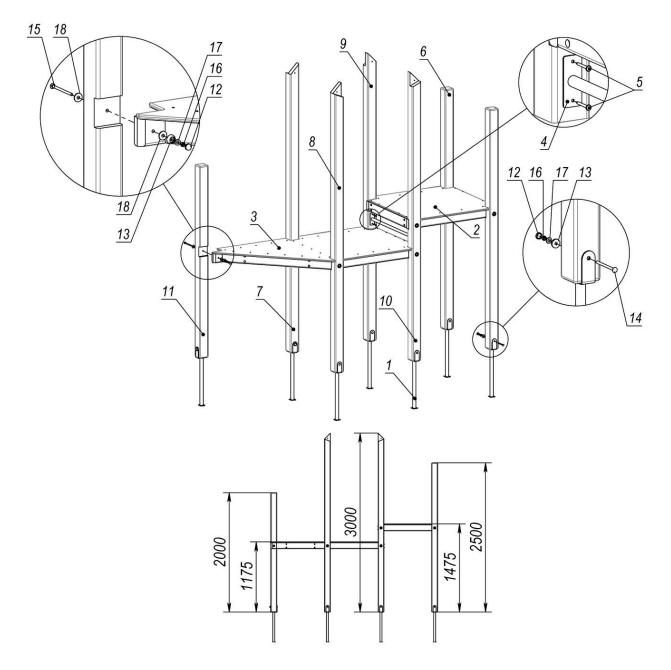

Pos.	Name	Weight,	Q-ty
		kg	
1	Beam support	2	7
2	Site 1x1m	19	1
3	Double corner site (1x1.9)	31	1
4	Brace rod 0.8m	1	1
5	Screw 6.0x60 SPAX T-STAR plus		4
	with press washer (univers.)		
6	Beam 2.5m (mortise 1.5m)	<i>15</i>	2
7	Beam 3m (mortise 1.2)	17	1
8	Beam 3m (mortise 1.2)	17	1
9	Beam 3m (mortise 1.2 and 1.5m)		1
10	Beam 3m (mortise 1.2 and 1.5m)		1


Pos.	Name	Weight, kg	Q-ty
11	Beam 2m (mortise 1.5m)	12	1
12	Cap M8		16
13	Cup M8		16
14	Bolt M8*120 GOST7802		7
15	Bolt M8*130 GOST7802		9
16	Nut M8 GOST5915		16
17	Washer 10 GOST11371		16
18	Washer 10 GOST6958		10

Picture 4 – Triple tower (1,2-1,2-1,5m)

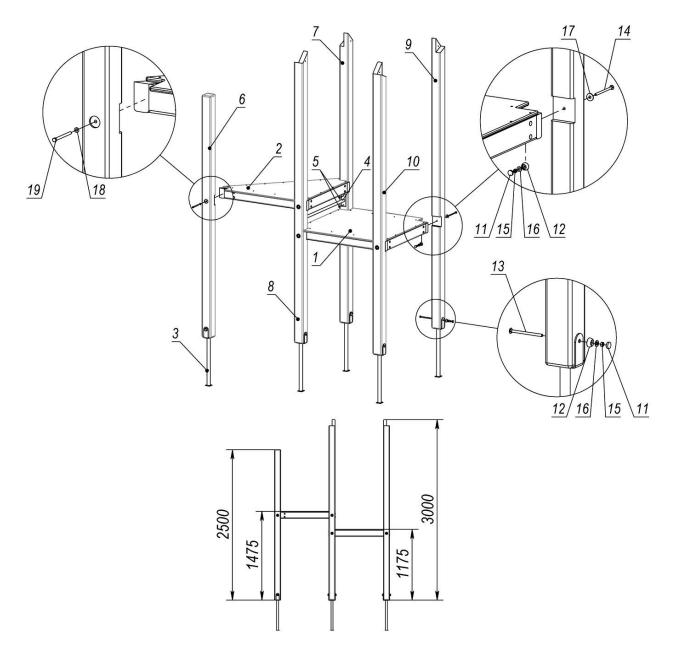


Pos.	Name	Weight,	Q-ty	Pos.	Name	Weight,	Q-ty
		kg				kg	
1	Site 1x1m	19	1	11	Cap M8		11
2	3-sided site	14	1	12	Cup M8		11
3	Beam support	2	5	13	Bolt M8*120 GOST7802		5
4	Brace rod 0.8m	1	1	14	Bolt M8*130 GOST7802		6
5	Screw 6.0x60 SPAX T-STAR plus		4	15	Nut M8 GOST5915		11
	with press washer (univers.)			16	Washer 10 GOST11371		11
6	Beam 2.5m (mortise 1.5m)	<i>15</i>	1	17	Washer 10 GOST6958		6
7	Beam 3m (mortise 1.2 and 1.5m)	17	1	18	Washer 8 GOST11371		1
8	Beam 3m (mortise 1.2 and 1.5m)	17	1	19	Screw 8x110 GOST11473		1
9	Beam 3m (mortise 1.2)	17	1			•	
10	Ream 3m (mortise 1 2)	17	1				

Picture 5 – Double corner tower (1,2-1,5m)

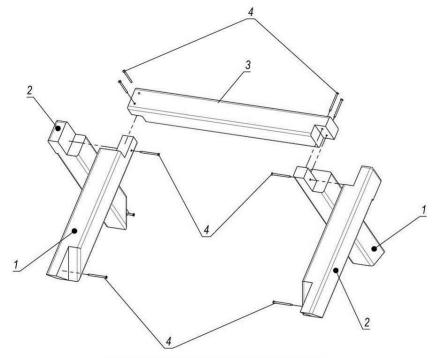


Pos.	Name	Weight, kg	Q-ty
1	Rear pediment		2
2	Front pediment		2
3	Ridge (100x100x900)	5	1
4	Screw 6x90 GOST1145		10

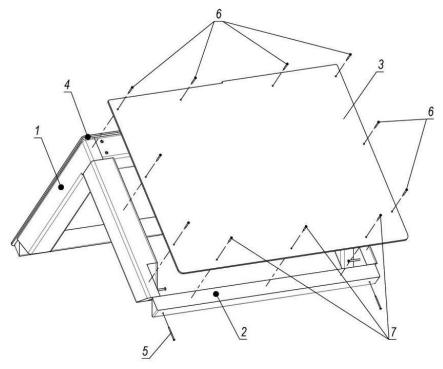


Pos.	Name	Weight, kg	Q-ty
1	Roof	19	1
2	Bar 970 mm		2
3	Roof slope (775x1000)	5	1
4	Roof slope (775x1000)	5	1
5	Screw 4x60 GOST1145		4
6	Screw 4x40 GOST1144		16
7	Screw 4x30 GOST1144		6

Picture 6 – Roof assembly scheme

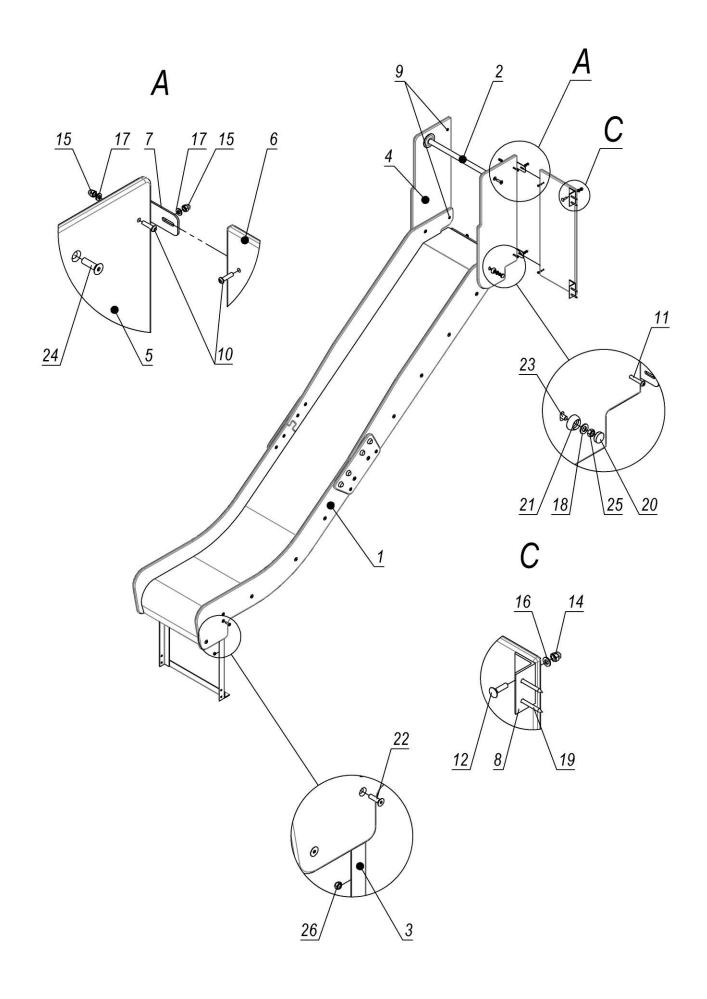


Picture 7

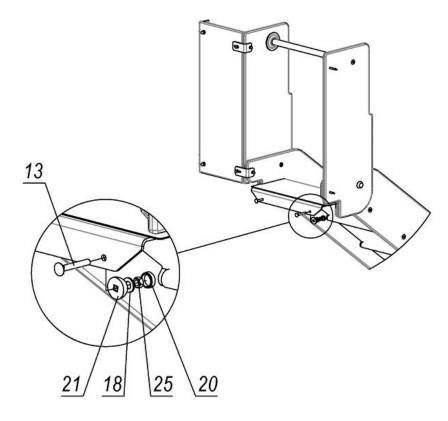


Pos.	Name	Weight, kg	Q-ty
1	Slide 1.5m (Big city) - 38 degrees	45	1
2	Brace rod 493 mm	1	1
3	Embedded element (angle bar)	5	1
4	Upper right sidewall	3	1
5	Upper left sidewall	3	1
6	Partition (275x705)	3	1
7	Slide angle bar		2
8	Big angle bar		2
9	Screw 6.0x60 SPAX T-STAR plus		2
	(univers.)		
10	Stud M6x25 ISO7380		3
11	Stud M6x40 ISO7380		1
12	Bolt M8*30 GOST7802		2 2
13	Bolt M8*55 GOST7802		
14	Cap nut M8 DIN1587		2
15	Cap nut M6 DIN1587		4
16	Washer 8 GOST11371		2
17	Washer 6 GOST11371		4
18	Washer 10 GOST11371		4
19	Screw 6x50 GOST1145		4
20	Cap M8		4
21	Cup M8		4
22	Stud M8x30 DIN7991		4
23	Stud M8x40 DIN7991		2
24	Stud M10x35 DIN7991		2
25	Nut M8 GOST5915		4
26	Nut M8 DIN985		4

Picture 7.1 – Assembly scheme of slide 1,5m

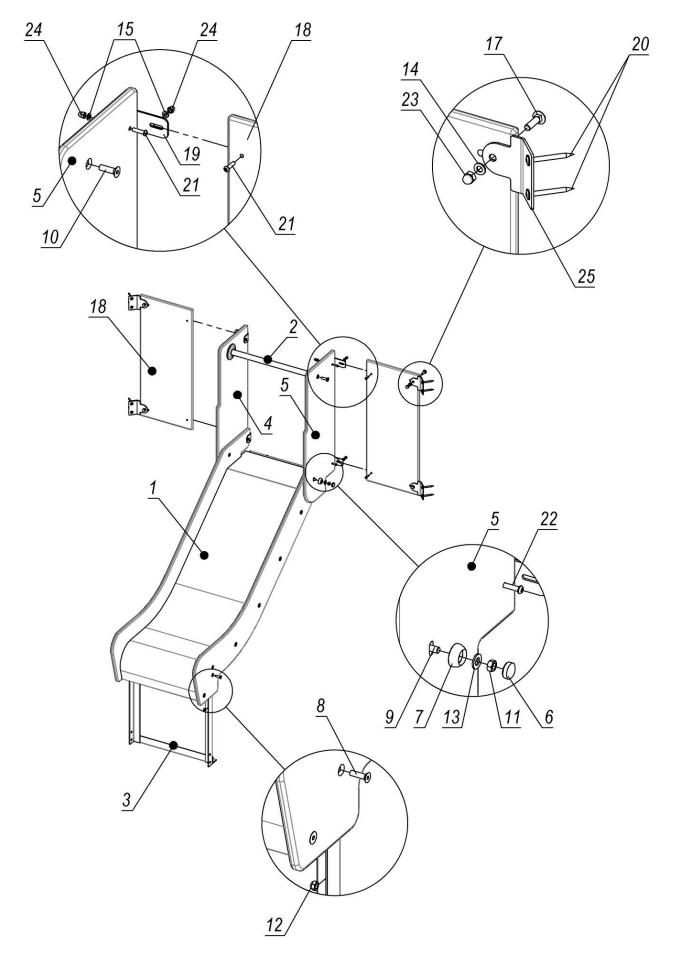


Picture 8

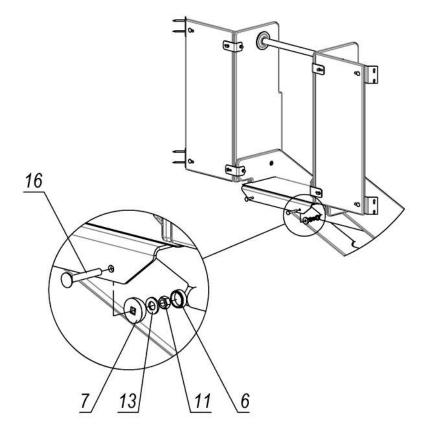


Pos.	Name	Weight, kg	Q-ty
1	Slide 0.7m - 38 degrees	24	1
2	Brace rod 493 mm	1	1
3	Embedded element (angle bar)	5	1
4	Upper right sidewall	3	1
5	Upper left sidewall	3	1
6	Cap M8		4
7	Cup M8		4
8	Stud M8x30 DIN7991		4
9	Stud M8x40 DIN7991		2
10	Stud M10x35 DIN7991		2
11	Nut M8 GOST5915		4
12	Nut M8 DIN985		4
13	Washer 10 GOST11371		4
14	Washer 8 GOST11371		2
15	Washer 6 GOST11371		10
16	Bolt M8*55 GOST7802		2
17	Bolt M8*30 GOST7802		4
18	Partition (306x705)	3	2
19	Slide angle bar		4
20	Screw 6.0x60 SPAX T-STAR plus		8
	(univers.)		
21	Stud M6x25 ISO7380		6
22	Stud M6x40 ISO7380		2
23	Cap nut M8 DIN1587		4
24	Cap nut M6 DIN1587		8
25	Angle bar 135 degrees		4

Picture 8.1 – Assembly scheme of slide 0,7m

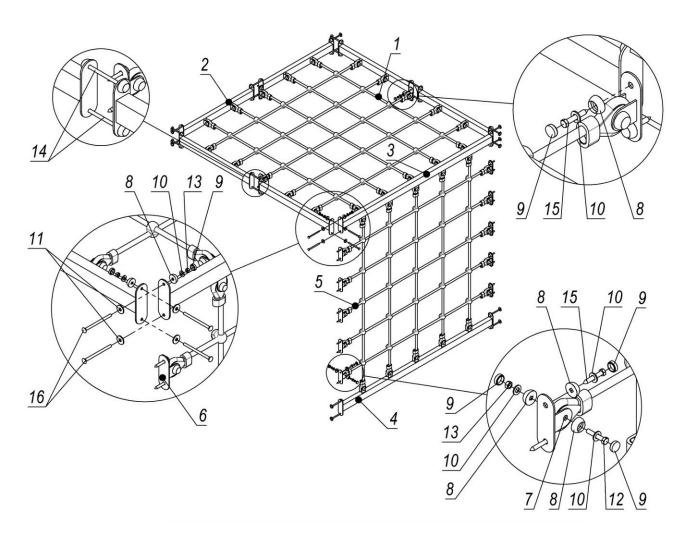


Pos.	Name	Weight, kg	Q-ty
1	Rope mesh 1.7*1.7	9	1
2	Crossbar 800mm	3	6
3	Crossbar 1700mm	6	1
4	Crossbar 1700mm lower	6	1
5	Rope mesh 1.6*1.6	9	1
6	Rope bracket		13
7	Tube d12x1.5 GOST10704, L=22mm		40
8	Cup M8		138
9	Cap M8		138
10	Washer 10 GOST11371		138
11	Washer 10 GOST6958		20
12	Bolt M8*45 GOST7798		40
13	Nut M8 GOST5915		72
14	Sprig M8 L=135		6
15	Screw 8x50 GOST11473		26
16	Bolt M8*120 GOST7802		20


Picture 9 – Assembly scheme of rope mesh

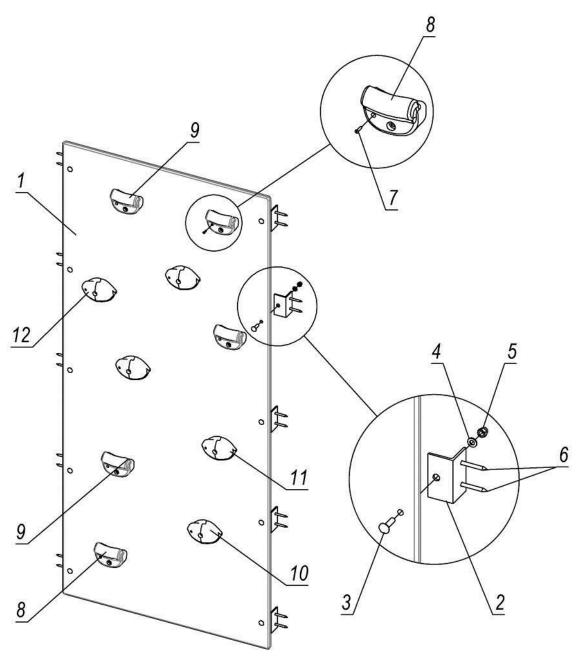


Pos.	Name	Weight, kg	Q-ty
1	Wall plywood	16	1
2	Big angle bar		10
3	Bolt M8*30 GOST7802		10
4	Washer 8 GOST11371		10
5	Cap nut M8 DIN1587		10
6	Screw 6x50 GOST1145		20
7	Screw 3.5x20 GOST1145		10
8	Big stone for climbing		2
9	Big stone for climbing		3
10	Big stone for climbing		3
11	Big stone for climbing		1
12	Big stone for climbing		1

Picture 10 – Installation scheme of wall

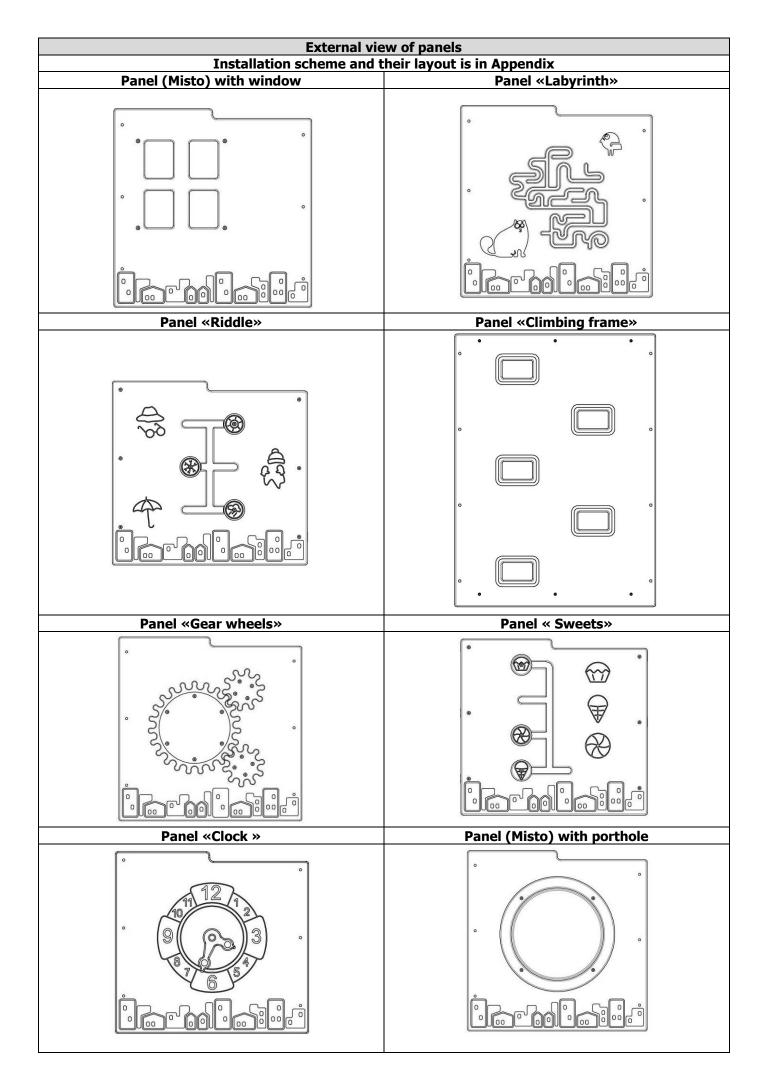

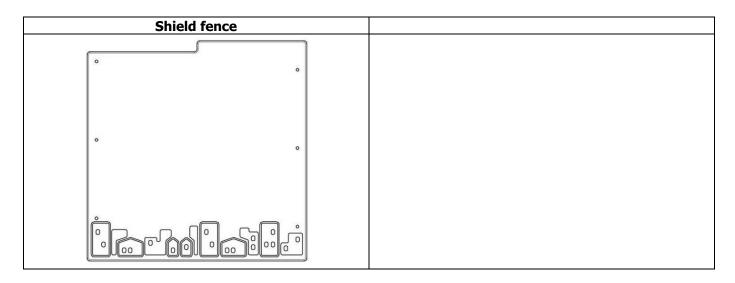

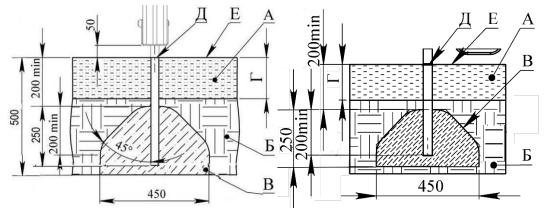

For beams supports and other elements

for the slides of the complex

A - shock-absorbing coating;

Б – soil;

B – concrete;

 Γ - depth of the shock absorbing coating;

Д - product level plane;

E – game surface.

Examples of impact-absorbing coatings


Material ¹	Description	Minimal depth,	Height of fall,
riacciai	Description	mm	mm
Turf			≤1000
Tree bark	grain size 20-80 mm	200	≤2000
		300	≤3000
Sawdust	grain size 5-30 mm	200	≤2000
	g. a 5.25 5 5 5 11	300	≤3000
Sand ²	grain size 0,2-2 mm	200	≤2000
	g	300	
Gravel ²	grain size 2-8 mm	200	≤2000
5.515.	g. a 5.25 2 5	300	≤3000
Another material	HIC tested according to	According to the	According to the
Another material	EN1177	test	test

^{1.} Materials specially prepared for playgrounds.

Picture 11 - Concreting scheme


^{2.} There should not be any clay inclusions. The grain size is obtained by sieving through a sieve as in EN933-1.

Appendix

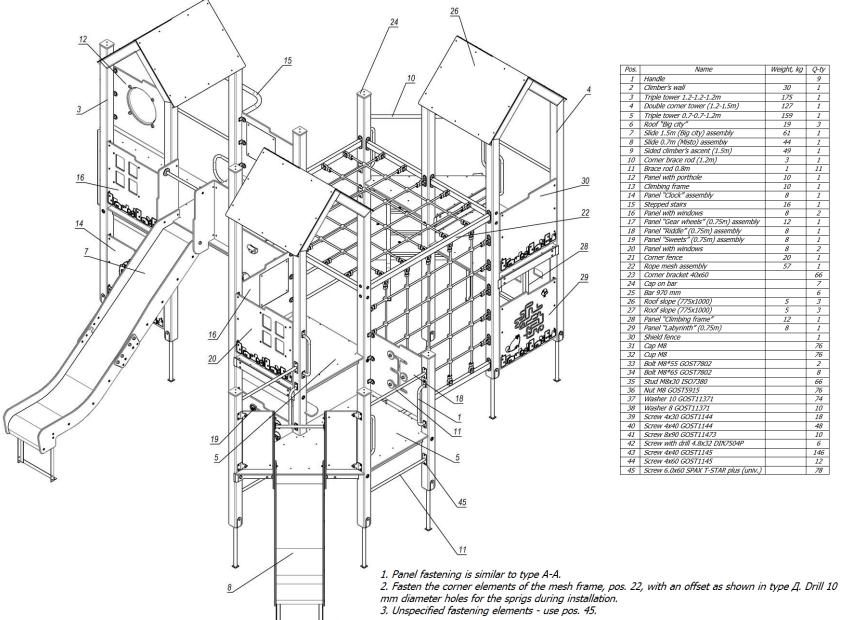

Pos.	Name	Weight, kg	Q-ty
1	Handle		9
2	Climber's wall	30	1
3	Triple tower 1.2-1.2-1.2m	175	1
4	Double corner tower (1.2-1.5m)	127	1
5	Triple tower 0.7-0.7-1.2m	159	1
6	Roof "Big city"	19	3
7	Slide 1.5m (Big city) assembly	61	1
8	Slide 0.7m (Misto) assembly	44	1
9	Sided climber's ascent (1.5m)	49	1
10	Corner brace rod (1.2m)	3	1
11	Brace rod 0.8m	1	11
12	Panel with porthole	10	1
13	Climbing frame	10	1
14	Panel "Clock" assembly	8	1
15	Stepped stairs	16	1
16	Panel with windows	8	2
17	Panel "Gear wheels" (0.75m) assembly	12	1
18	Panel "Riddle" (0.75m) assembly	8	1
19	Panel "Sweets" (0.75m) assembly	8	1
20	Panel with windows	8	2
21	Corner fence	20	1
22	Rope mesh assembly	57	1
23	Corner bracket 40x60		66
24	Cap on bar		7
25	Bar 970 mm		6
26	Roof slope (775x1000)	5	3
27	Roof slope (775x1000)	5	3
28	Panel "Climbing frame"	12	1
29	Panel "Labyrinth" (0.75m)	8	1
30	Shield fence		1
31	Cap M8		76
32	Cup M8		76
33	Bolt M8*55 GOST7802		2
34	Bolt M8*65 GOST7802		8
35	Stud M8x30 ISO7380		66
36	Nut M8 GOST5915		76
37	Washer 10 GOST11371		74
38	Washer 8 GOST11371		10
39	Screw 4x30 GOST1144		18
40	Screw 4x40 GOST1144		48
41	Screw 8x90 GOST11473		10
42	Screw with drill 4.8x32 DIN7504P		6
43	Screw 4x40 GOST1145		146
44	Screw 4x60 GOST1145		12
45	Screw 6.0x60 SPAX T-STAR plus (univ.)		78

Picture 12

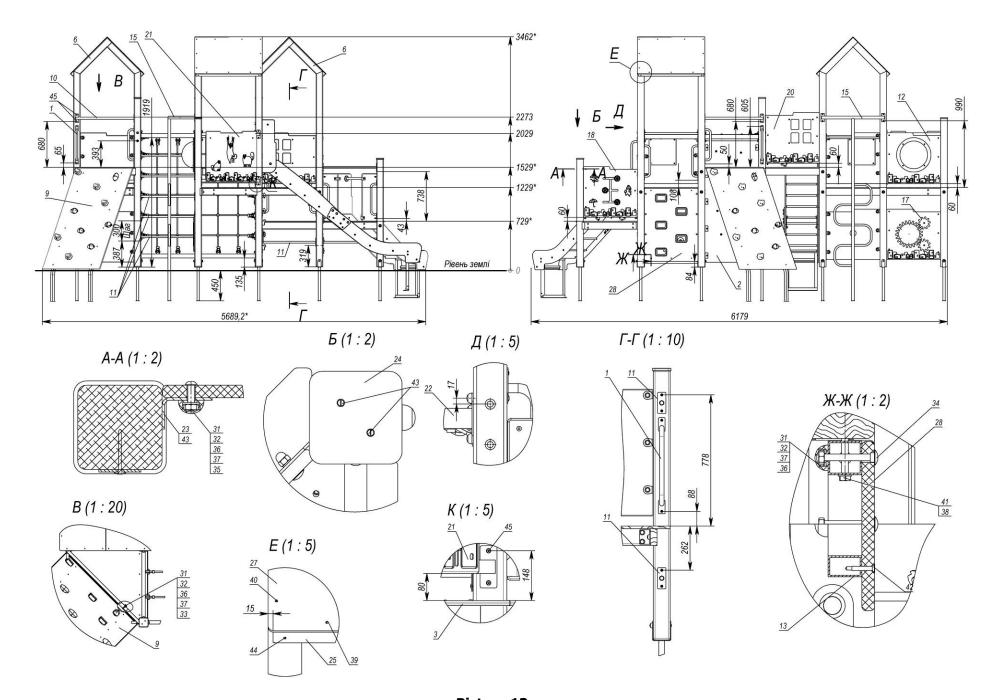

Picture 13