

interatletika™

PRODUCTION AND SALE OF SPORTS GOODS

Customer support:

☎ +38 095 273 81 53

play.interatletika.com

DATA SHEET

Dog park equipment

CONTENT

| | |
|--|---------------------------------|
| 1. GENERAL INFORMATION..... | Ошибка! Закладка не определена. |
| 2. MAIN TECHNICAL DATA AND CHARACTERISTICS..... | 3 |
| 3. COMPLETENESS AND CHARACTERISTICS OF THE MAIN PARTS OF THE PRODUCT | 3 |
| 4. PROCEDURE FOR ASSEMBLING AND INSTALLING THE PRODUCT | 11 |
| 5. PRODUCT USE | 24 |
| 6. PRODUCT MAINTENANCE | 24 |

FOR NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

1. GENERAL INFORMATION

Purpose and content of this document. This document contains a general description of the equipment, information on installation, intended use, maintenance, current repair and manufacturer's warranty.

Distribution of this document for product modifications. The manufacturer can make changes to the design of the product, aimed at improving its characteristics, changing the design, etc. This document may not contain a description of such changes, but applies to such modified products.

2. MAIN TECHNICAL DATA AND CHARACTERISTICS



Table 1 – Basic parameters

| № | Product name | Code | Dimensions, mm | | | Weight, kg |
|----|----------------------------|------------|----------------|-------|--------|------------|
| | | | Length | Width | Height | |
| 1 | Barrier 2 levels | BO001 | 2000 | 100 | 1001 | 66,65 |
| 2 | Barrier 3 levels | BO002 | 3000 | 100 | 2000 | 141,90 |
| 3 | Barrier 3 levels | BO002.1 | 3000 | 100 | 1200* | 100 |
| 4 | Barrier Wheel | BO003 | 1180 | 756 | 1478 | 21 |
| 5 | Angled wall | BO004 | 4169 | 1000 | 1603 | 143,03 |
| 6 | Straight beam | BO 005 | 8612 | 264 | 997* | 120 |
| 7 | Slide with handrails | BO 006 | 7016 | 1000 | 4074 | 366 |
| 8 | Slide with handrails | BO 006-2.5 | 6019 | 1000 | 4074 | 315,5 |
| 9 | Angled wall | BO007 | 2074 | 1500 | 1596 | 127,98 |
| 10 | Hide-out | BO008 | 1000 | 1000 | 1999 | 64,87 |
| 11 | Athletics barrier | BO009 | 1000 | 50 | 750 | 7,71 |
| 12 | Trench | BO010 | 9532 | 1000 | 1000 | 241,79 |
| 13 | Slalom | BO011 | 7000 | 850 | 1000 | 48,73 |
| 14 | Long jump | BO012 | 1537 | 1262 | 1200 | 39,93 |
| 15 | Swing | BO013 | 4250 | 534 | 702 | 52,47 |
| 16 | Connection | BO014 | 93 | 93 | 150 | 0,77 |
| 17 | Connection 615 mm | BO014.1 | 100 | 100 | 615 | 0,85 |
| 18 | Information post-trash bin | BO 016 | 400 | 250 | 2296 | 29 |
| 19 | Barrier | BO 017 | 1058 | 400 | 1000 | 9 |



* Height from ground level

3. COMPLETENESS AND CHARACTERISTICS OF THE MAIN PARTS OF THE PRODUCT



Table 2 – Product appearance
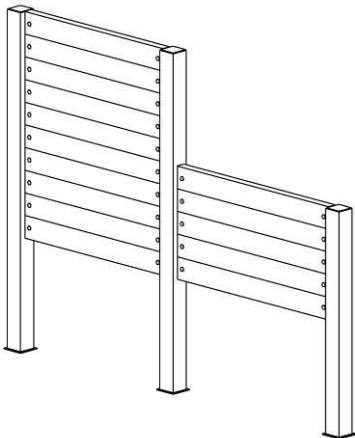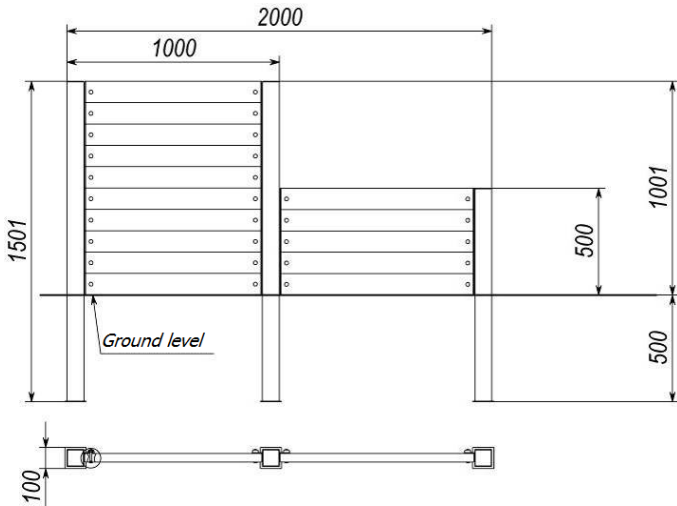
| BO 001 – Barrier 2 levels | |
|---|--|
|  |  |



BO 002 - Barrier 3 levels

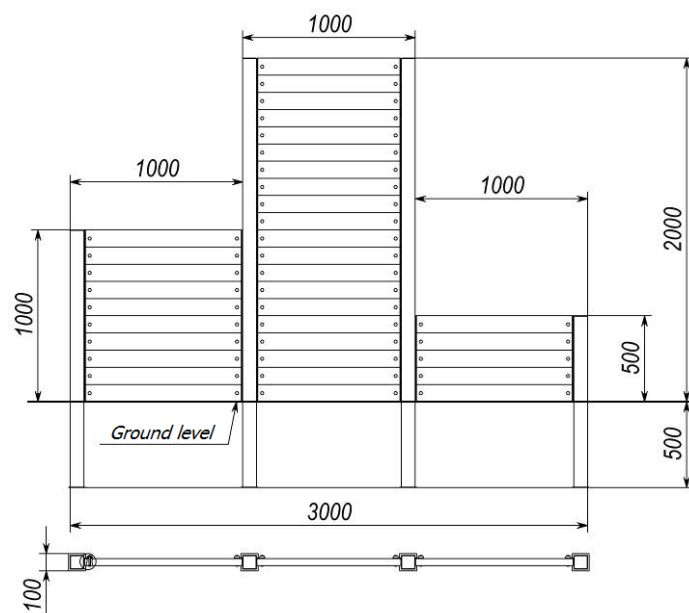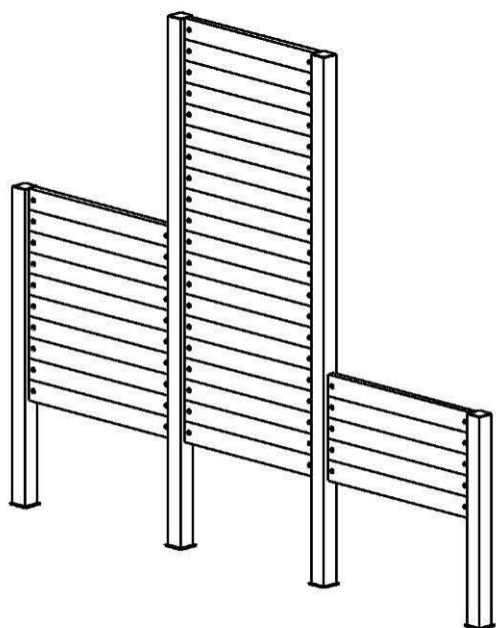



BO 002.1- Barrier 3 levels

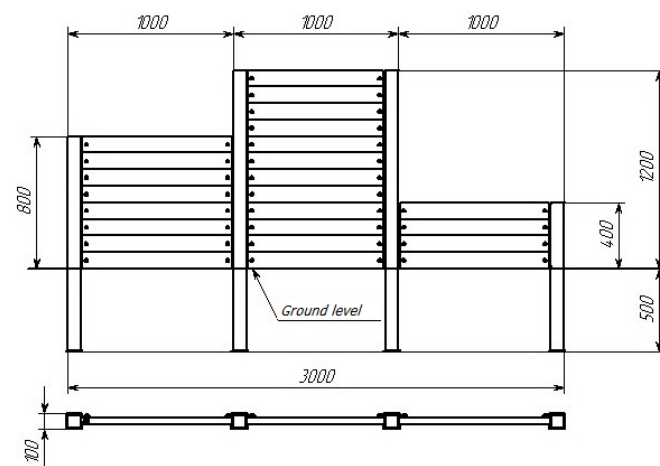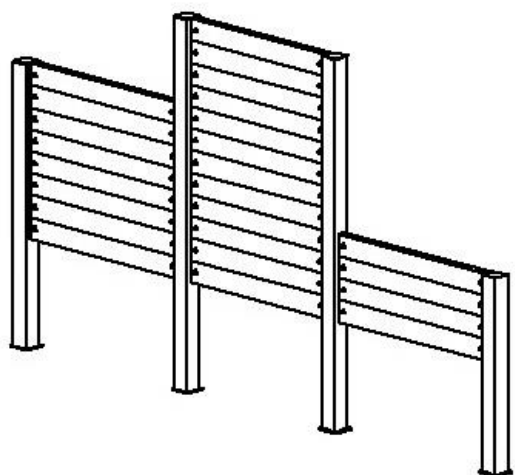



BO 003 – Barrier Wheel

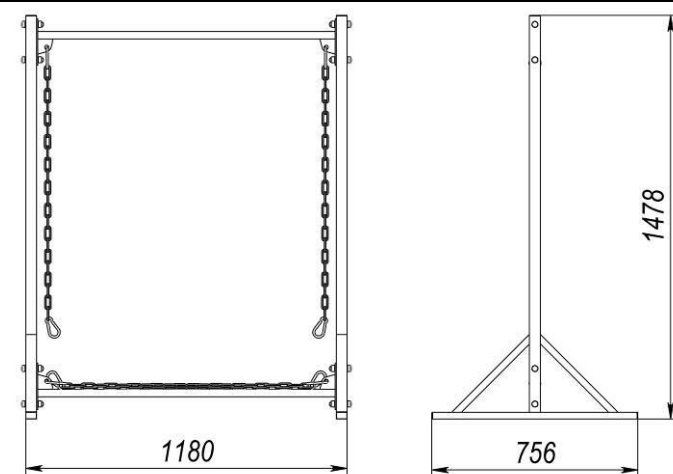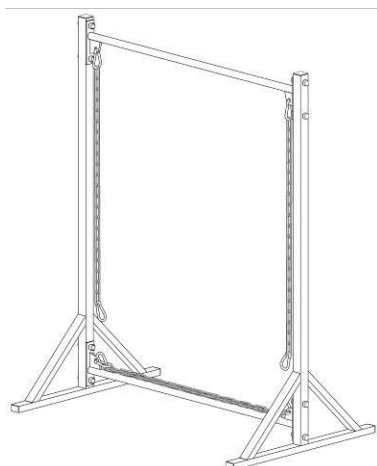


BO 004 – Angled wall

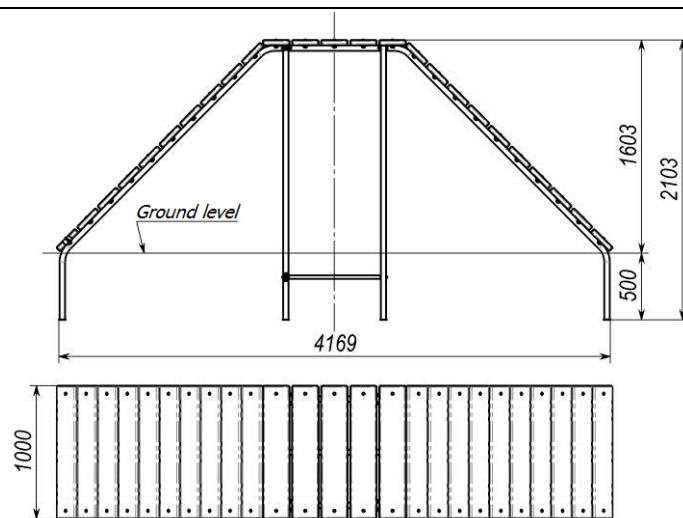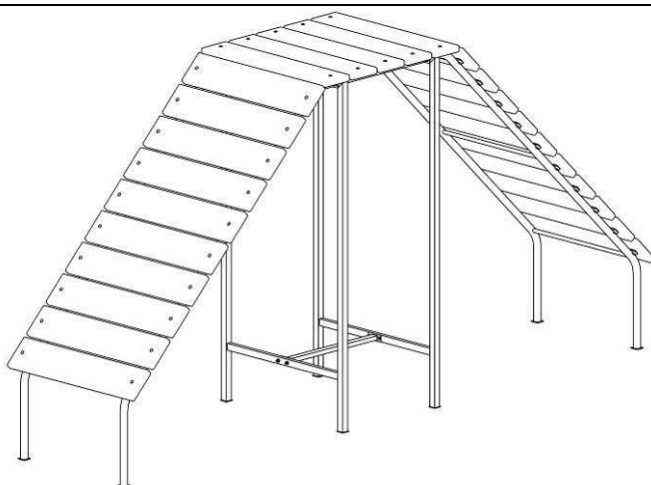


BO 005 – Straight beam

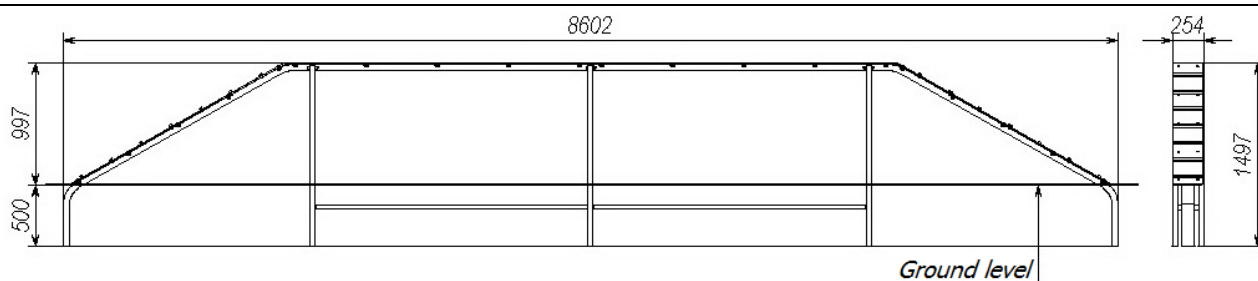
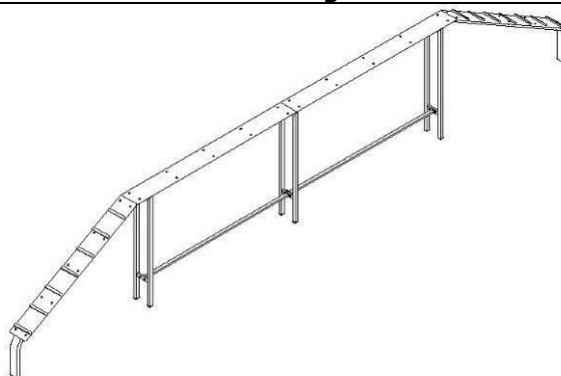


BO 006 – Slide with handrails


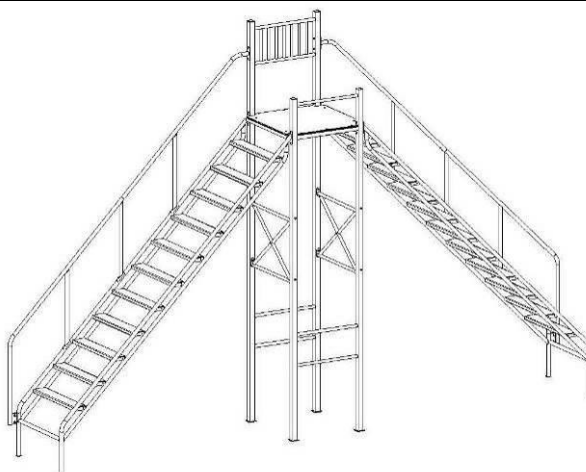


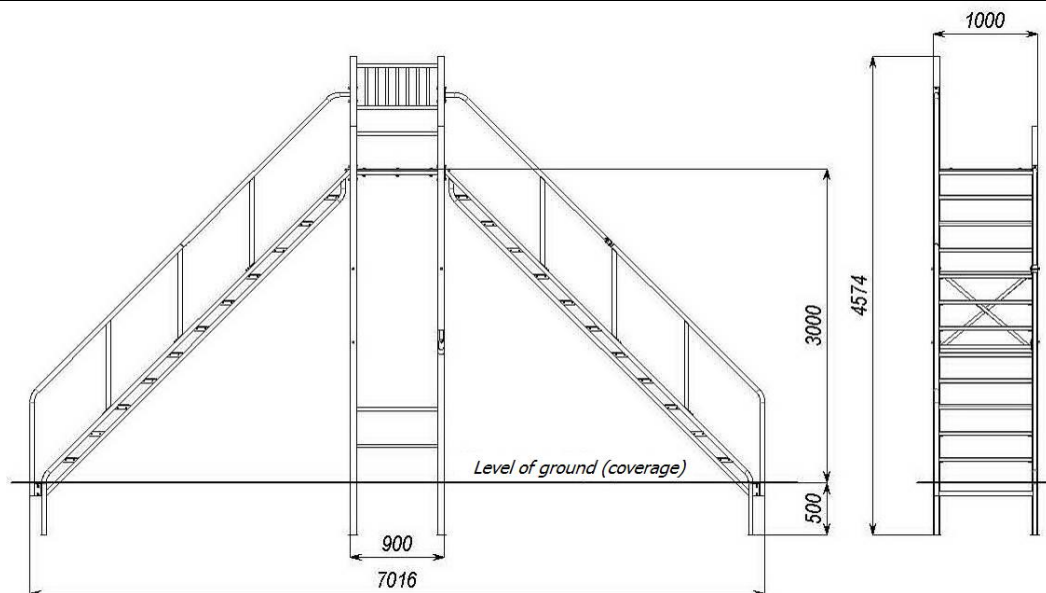



BO 006-2,5 – Slide with handrails

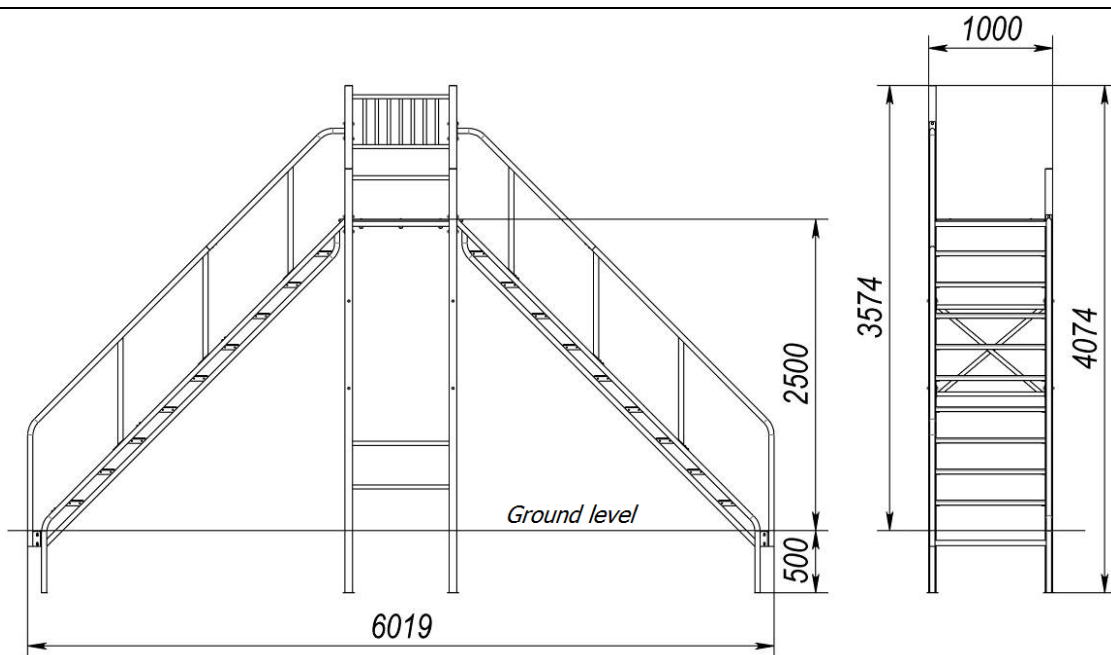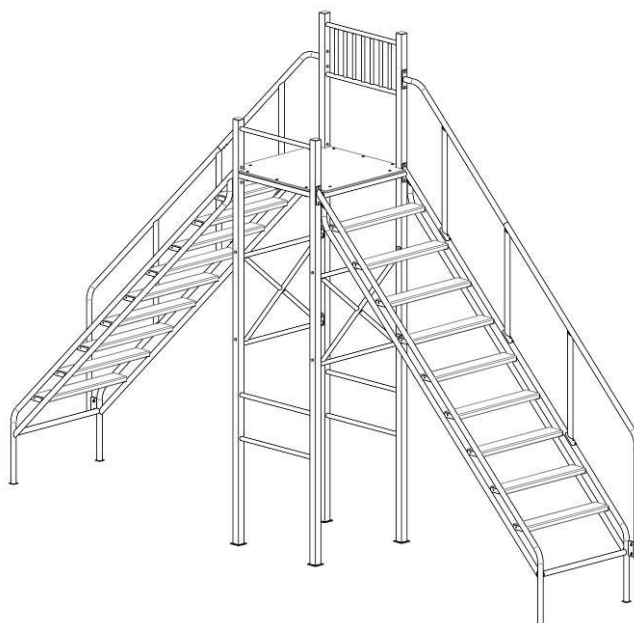



BO 007 – Angled wall

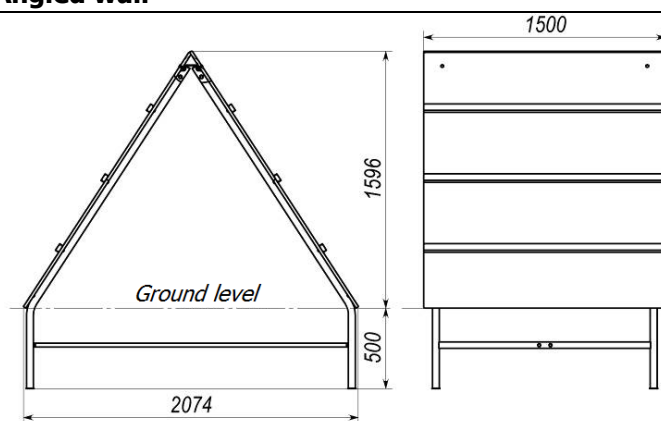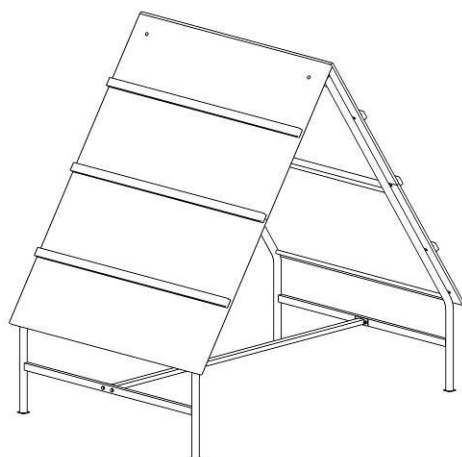



BO 008 – Hide-out

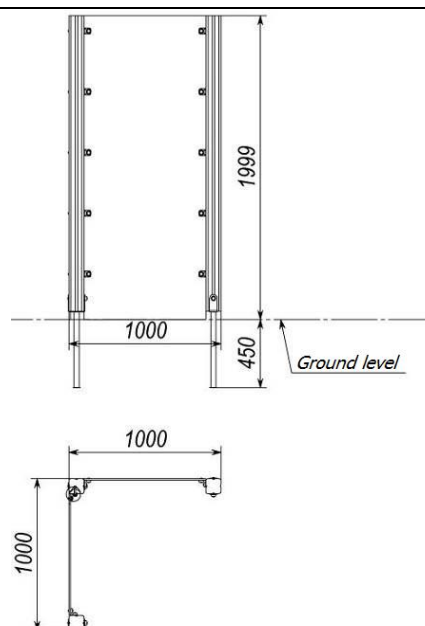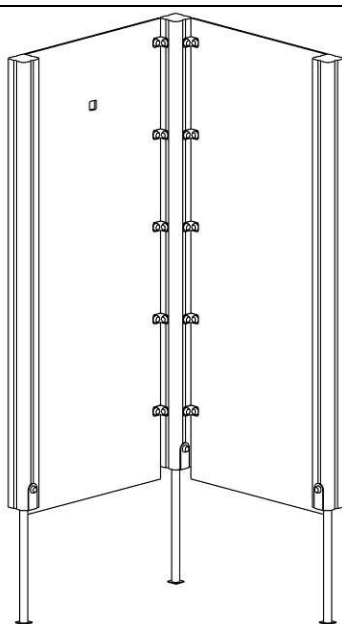


BO 009 – Athletics barrier

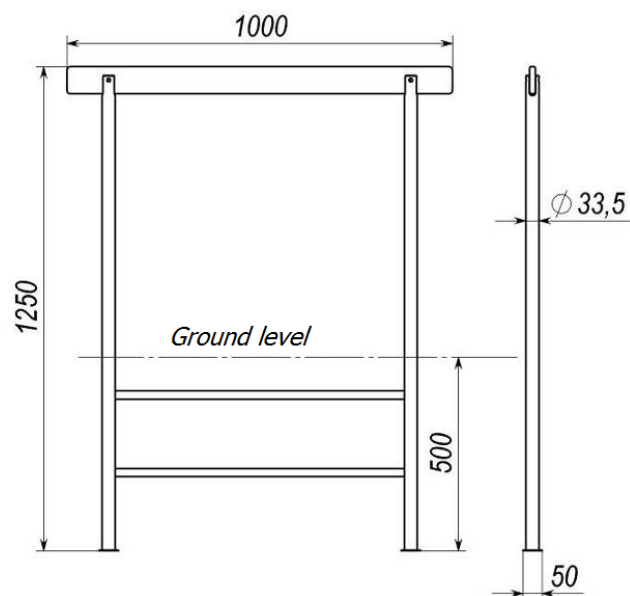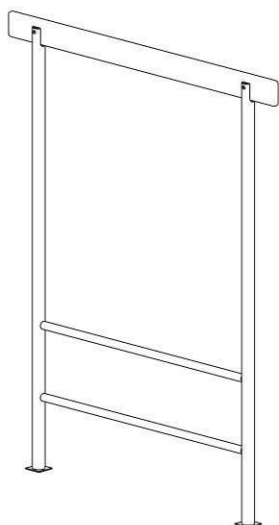


BO 010 - Trench

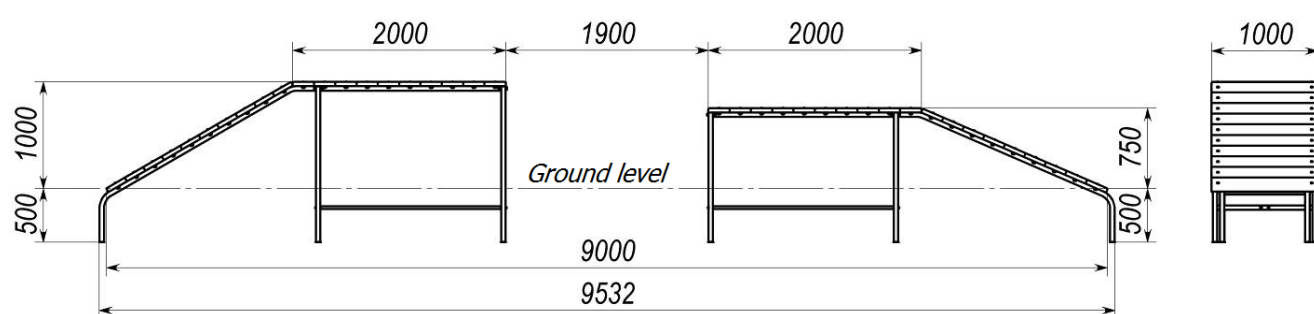
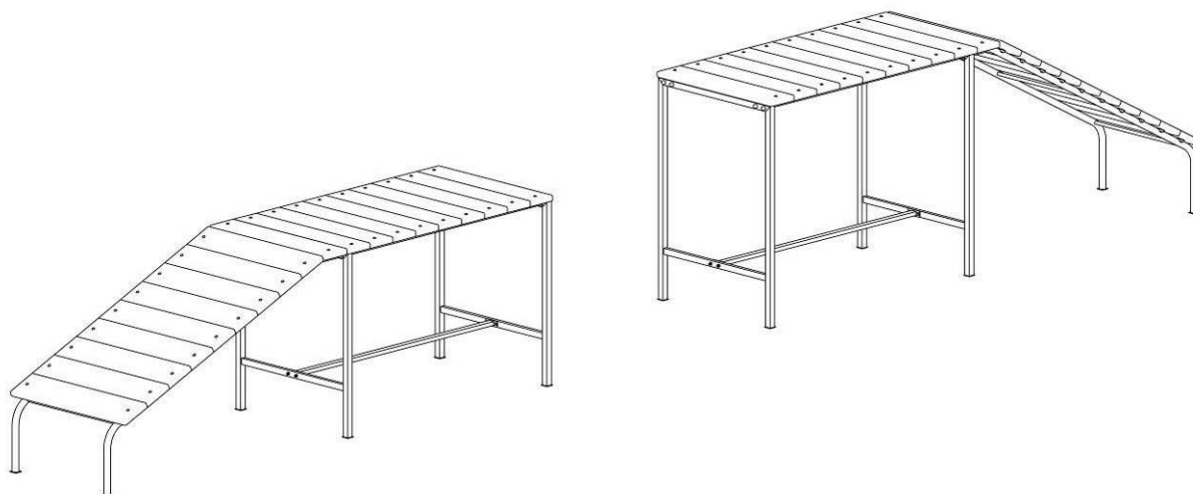


BO 011 - Slalom

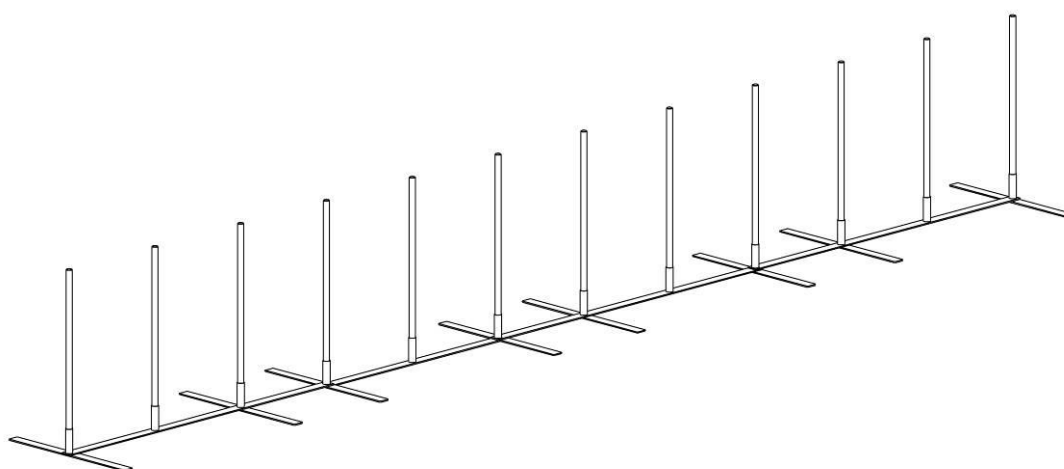


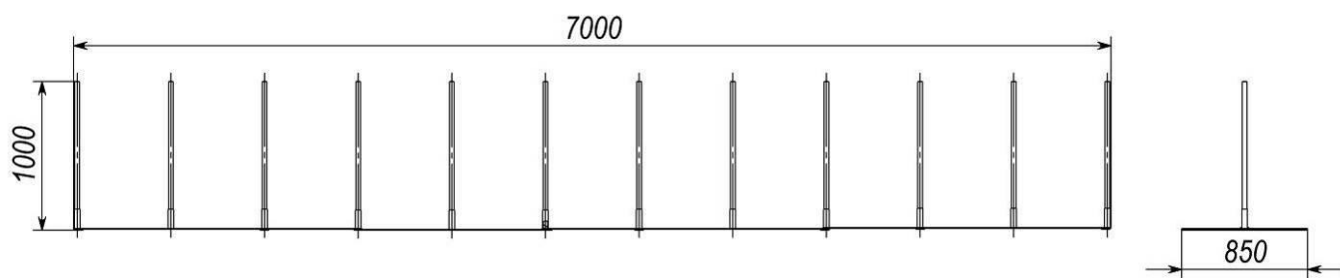


BO 012 – Long jump

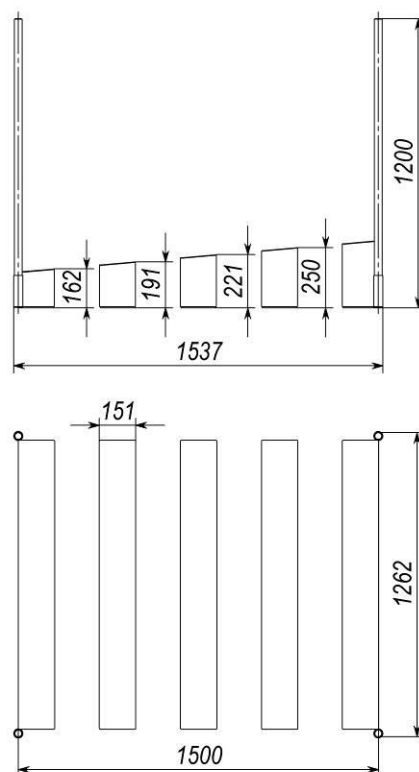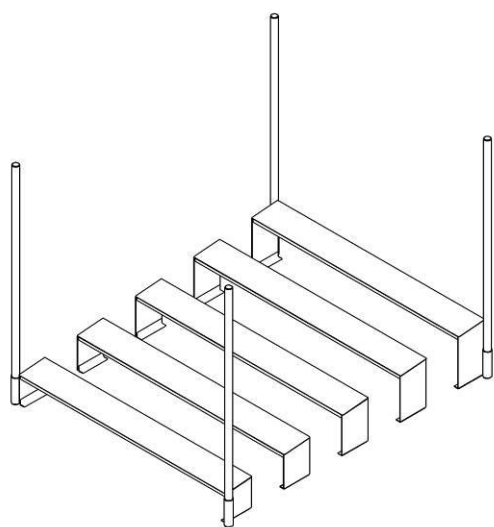


BO 013 - Swing

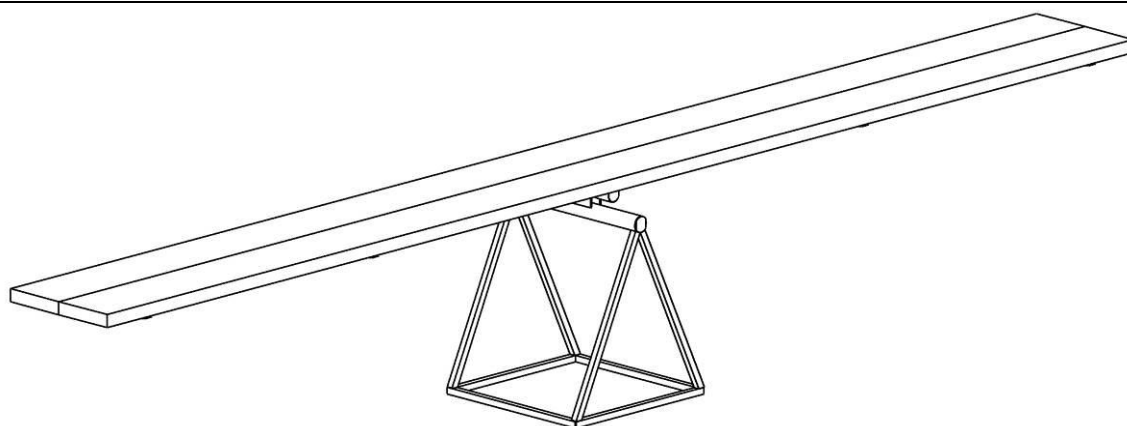


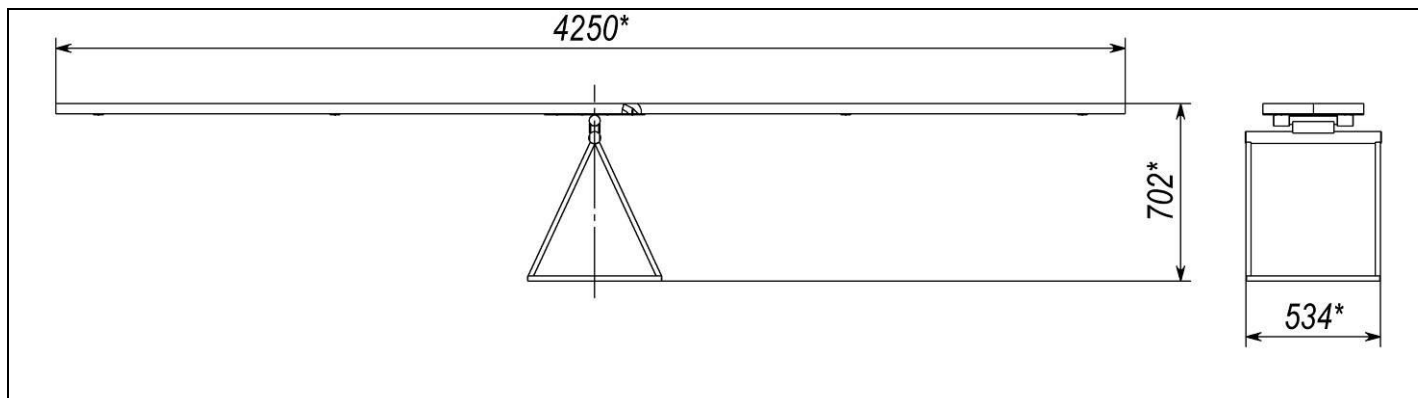



BO 014 - Connection

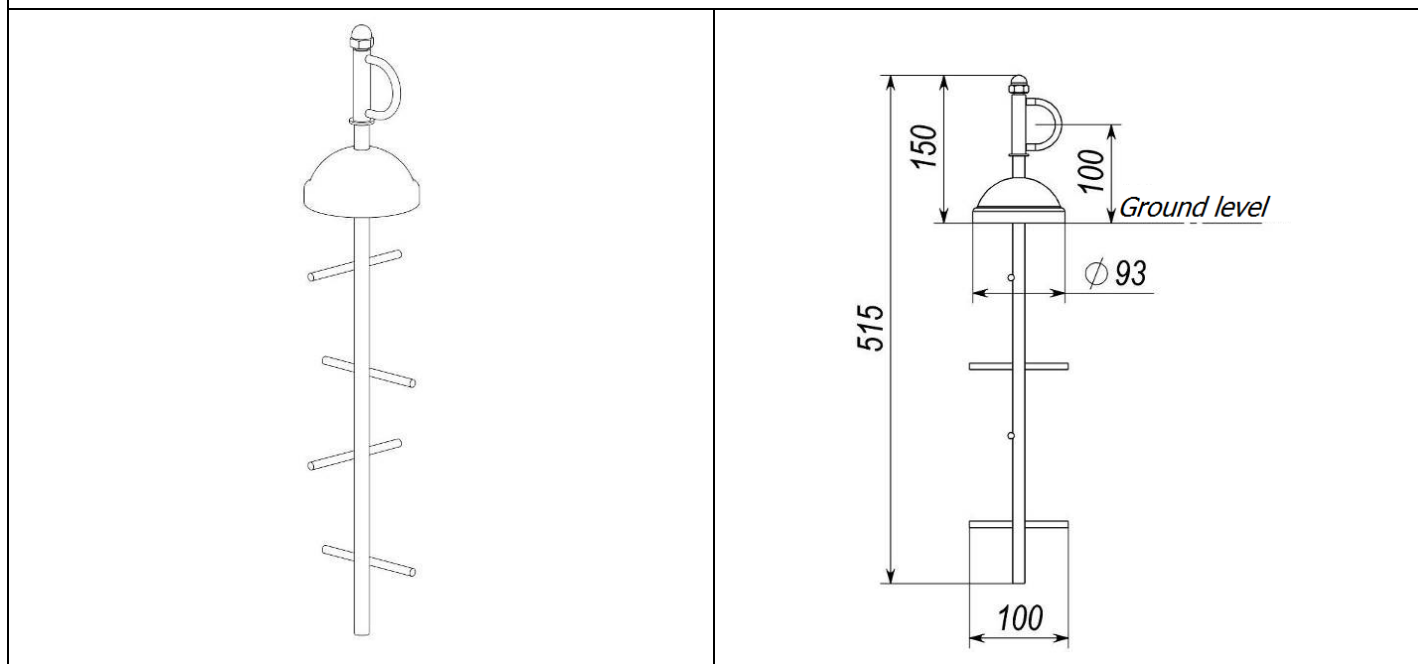



BO 014.1 - Connection

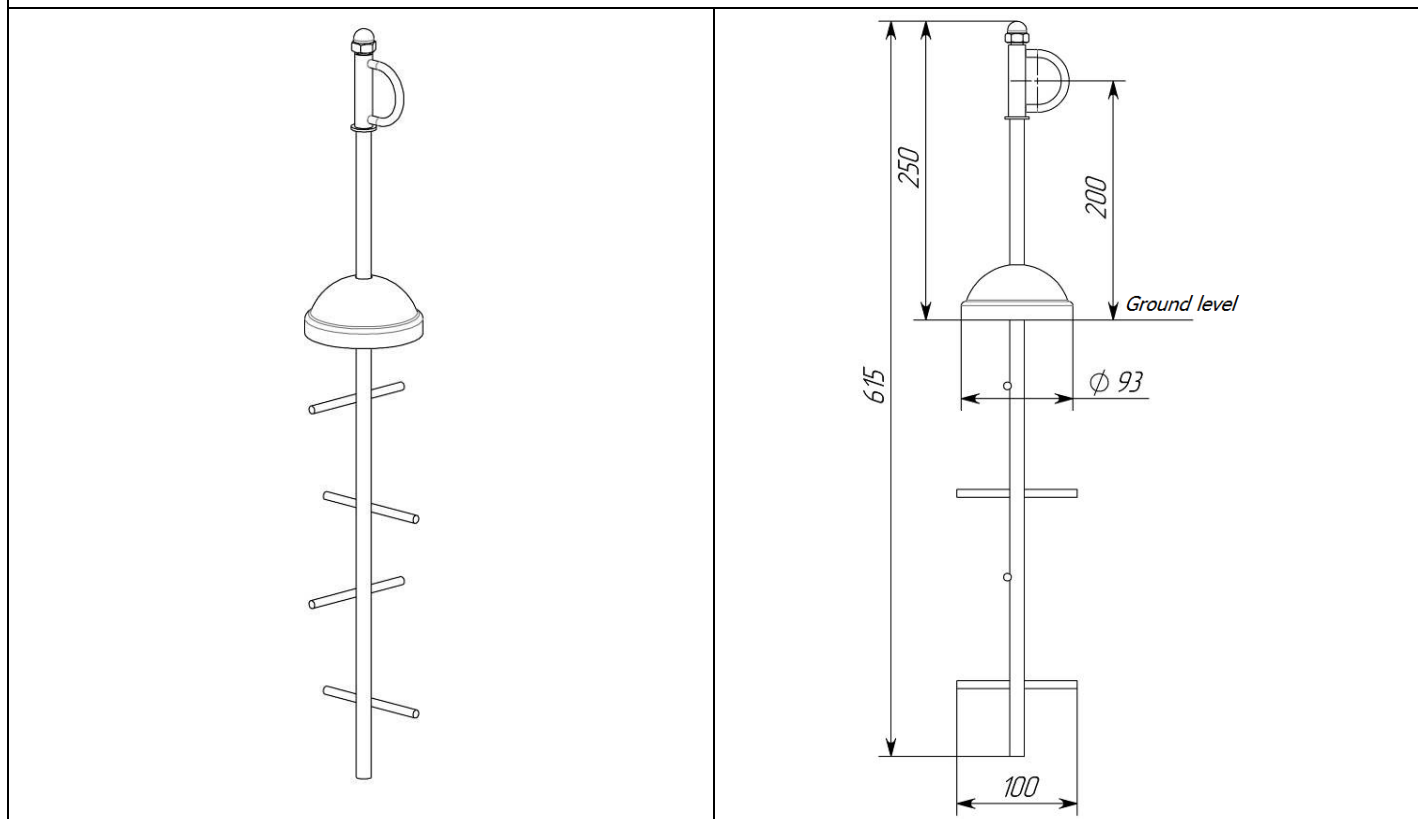

BO 016 – information post – trash bin

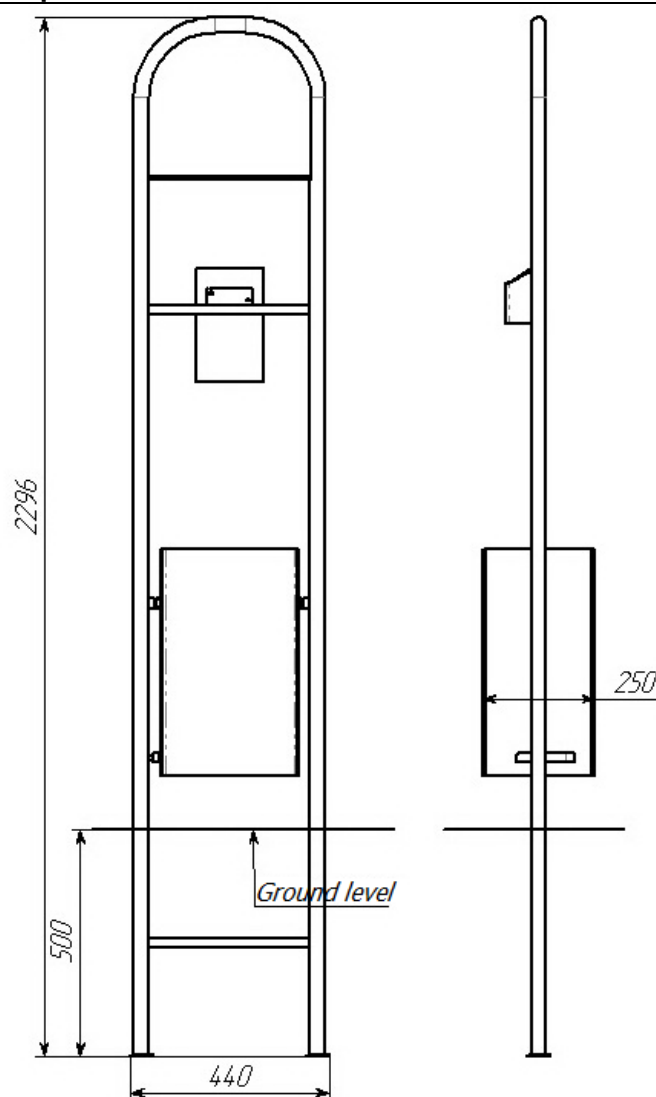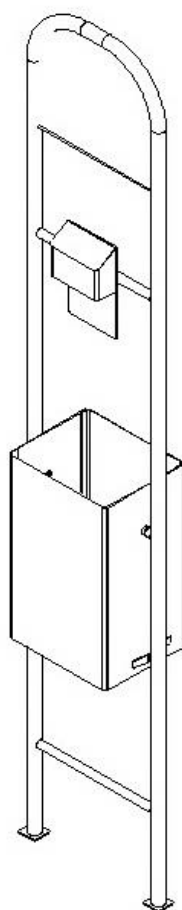

BO-017 – Barrier

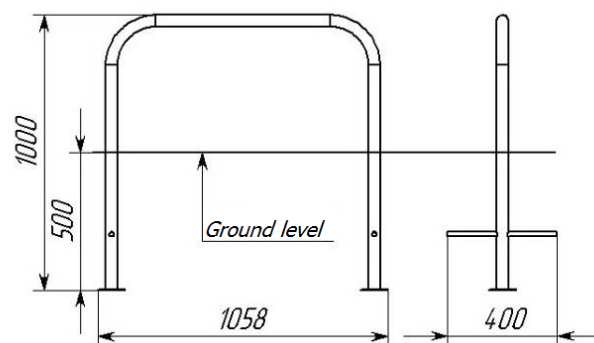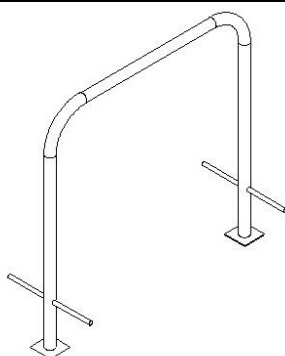

4. PROCEDURE FOR ASSEMBLING AND INSTALLING THE PRODUCT


Tools and accessories. The product does not include the tools required for installation.

The procedure for assembling and installing the product.


- 1) The assembly scheme is shown in the table 3.
- 2) The ground level is shown in Table 2. After installing the product in the ground, the pit is tightly compacted
- 3) **BO 006** – concrete according to table 4

Products BO 003 and BO017 are supplied assembled.


Table 3 – Assembly scheme

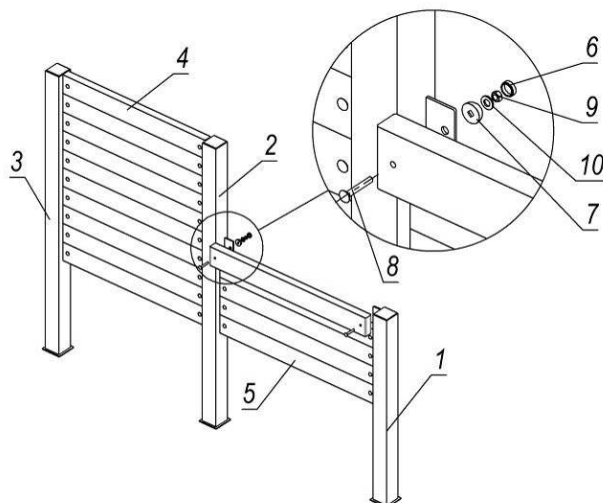BO 001 – Barrier 2 levels


| Pos. | Name | Weight, kg | Q-ty |
|------|---------------------|------------|------|
| 1 | Right rack | 8 | 1 |
| 2 | Middle rack | 13 | 1 |
| 3 | Left rack | 13 | 1 |
| 4 | Board 40x100x834 | 2 | 10 |
| 5 | Board 40x100x914 | 2 | 5 |
| 6 | Cap M8 | | 30 |
| 7 | Cup M8 | | 30 |
| 8 | Bolt M8x55 | | 30 |
| 9 | Nut M8 GOST5915 | | 30 |
| 10 | Washer 10 GOST11371 | | 30 |

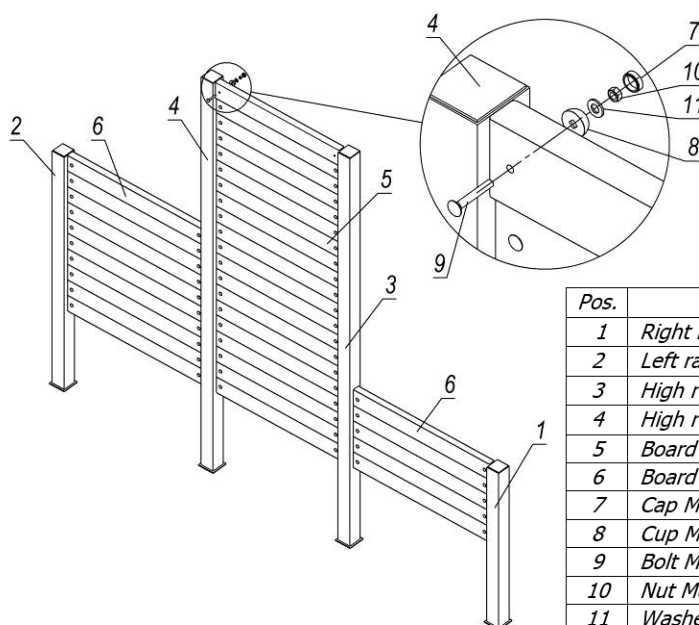BO 002 – Barrier 3 levels

| Pos. | Name | Weight, kg | Q-ty |
|------|---------------------|------------|------|
| 1 | Right rack | 8 | 1 |
| 2 | Left rack | 13 | 1 |
| 3 | High rack right | 22 | 1 |
| 4 | High rack left | 23 | 1 |
| 5 | Board 40x100x834 | 2 | 20 |
| 6 | Board 40x100x914 | 2 | 15 |
| 7 | Cap M8 | | 70 |
| 8 | Cup M8 | | 70 |
| 9 | Bolt M8x55 GOST7802 | | 70 |
| 10 | Nut M8 GOST5915 | | 70 |
| 11 | Washer 10 GOST11371 | | 70 |

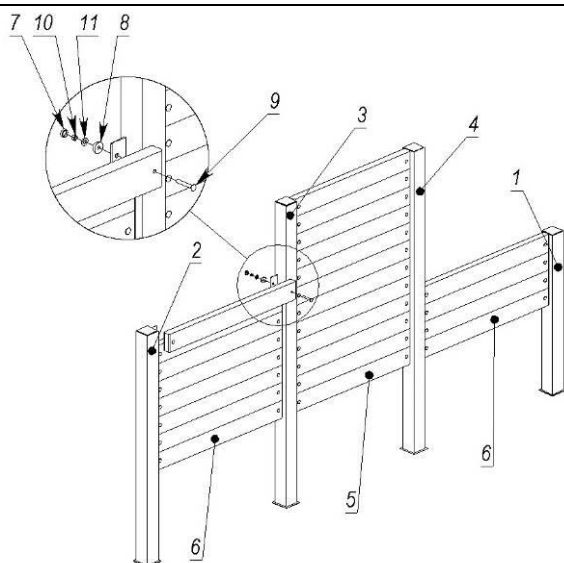
BO 002.1 – Barrier 3 levels

| Pos. | Name | Weight, kg | Q-ty |
|------|---------------------|------------|------|
| 1 | Right rack | 7 | 1 |
| 2 | Left rack | 11 | 1 |
| 3 | High rack left | 16 | 1 |
| 4 | High rack right | 15 | 1 |
| 5 | Board 40x100x834 | 2 | 12 |
| 6 | Board 40x100x914 | 2 | 12 |
| 7 | Cap M8 | | 48 |
| 8 | Cup M8 | | 48 |
| 9 | Bolt M8x55 GOST7802 | | 48 |
| 10 | Nut M8 GOST5915 | | 48 |
| 11 | Washer 10 GOST11371 | | 48 |

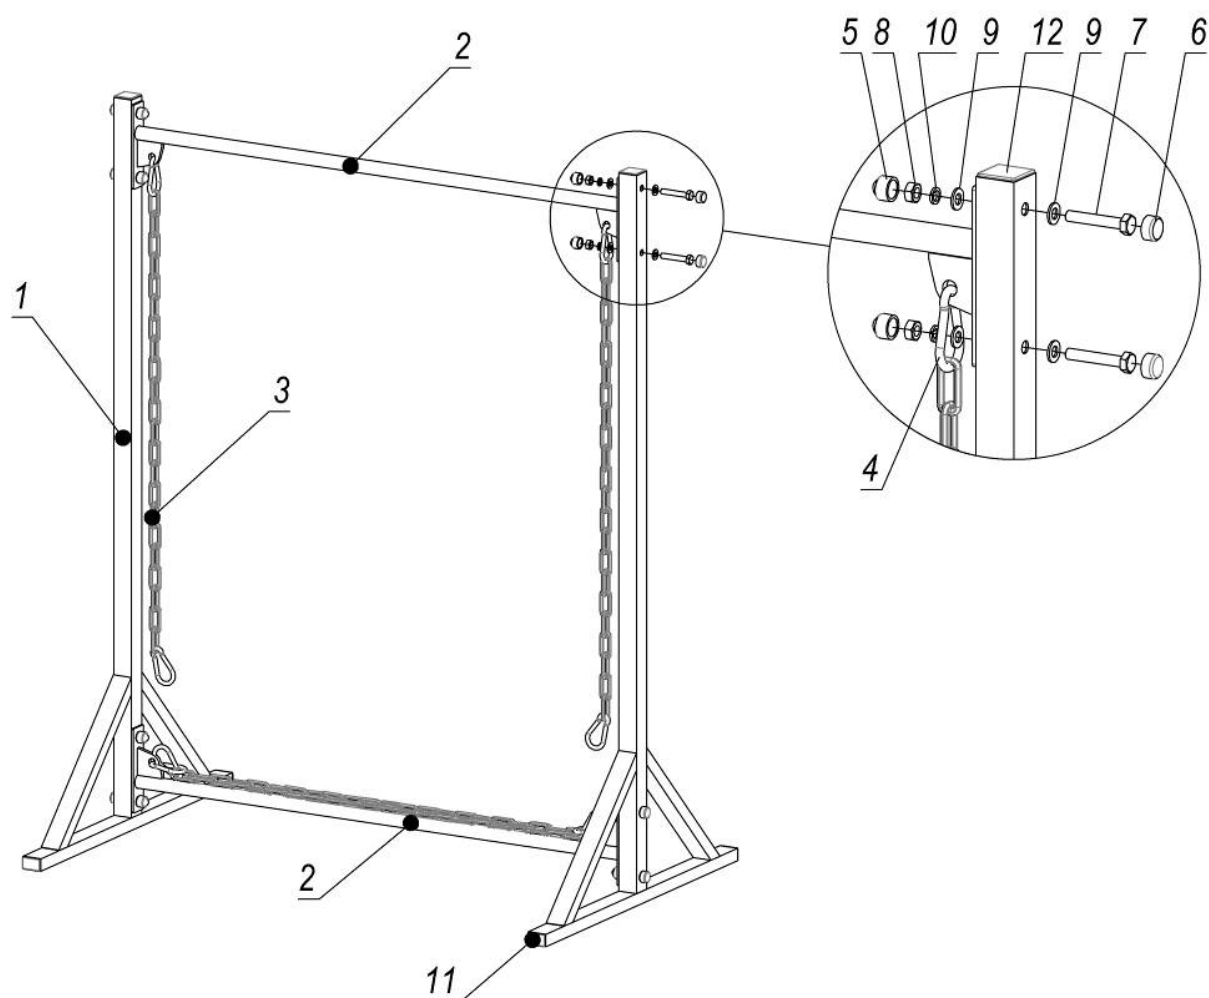


| Pos. | Name | Weight, kg | Q-ty |
|------|-------------------------------------|------------|------|
| 1 | Rack | 6 | 2 |
| 2 | Crossbar | 2 | 2 |
| 3 | Chain 6x42-22 DIN763 (L=936mm) | | 4 |
| 4 | Firefighting carabine 8*80 DIN5299C | | 8 |
| 5 | Cap S17 (fig.) | | 8 |
| 6 | Cap S17 (fl.) | | 8 |
| 7 | Bolt M10*60 DIN933 (full thread) | | 8 |
| 8 | Nut M10 DIN934 (hexagonal) | | 8 |
| 9 | Washer 10 DIN125 (flat) | | 16 |
| 10 | Washer 10 DIN7980 (spring) | | 8 |
| 11 | Plug 25x40 | | 4 |
| 12 | Plug 40x40 | | 2 |

BO 004 – Angled wall

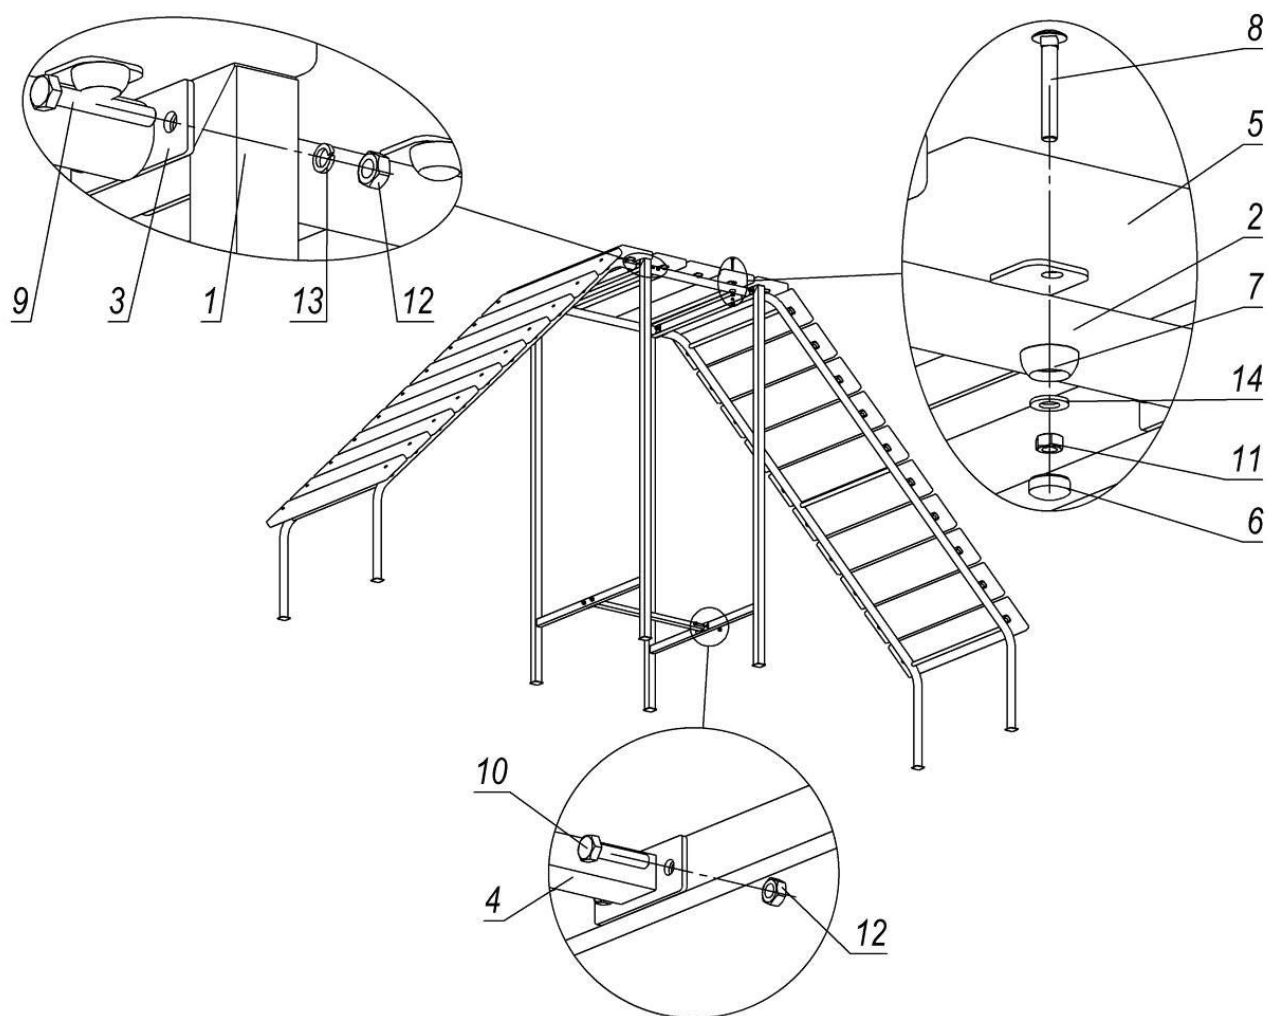


| Pos. | Name | Weight, kg | Q-ty |
|------|----------------------|------------|------|
| 1 | Frame | 14 | 2 |
| 2 | Bridge | 6 | 1 |
| 3 | Incline frame | 19 | 2 |
| 4 | Binder | 2 | 1 |
| 5 | Board 40x200x1000 | 3 | 25 |
| 6 | Cap M8 | | 50 |
| 7 | Cup M8 | | 50 |
| 8 | Bolt M8x55 GOST7802 | | 50 |
| 9 | Bolt M10x65 GOST7798 | | 8 |
| 10 | Bolt M10x45 GOST7798 | | 4 |
| 11 | Nut M8 GOST5915 | | 50 |
| 12 | Nut M10 GOST5915 | | 12 |
| 13 | Washer 10 GOST6402 | | 8 |
| 14 | Washer 10 GOST11371 | | 50 |


BO 005 – Straight beam

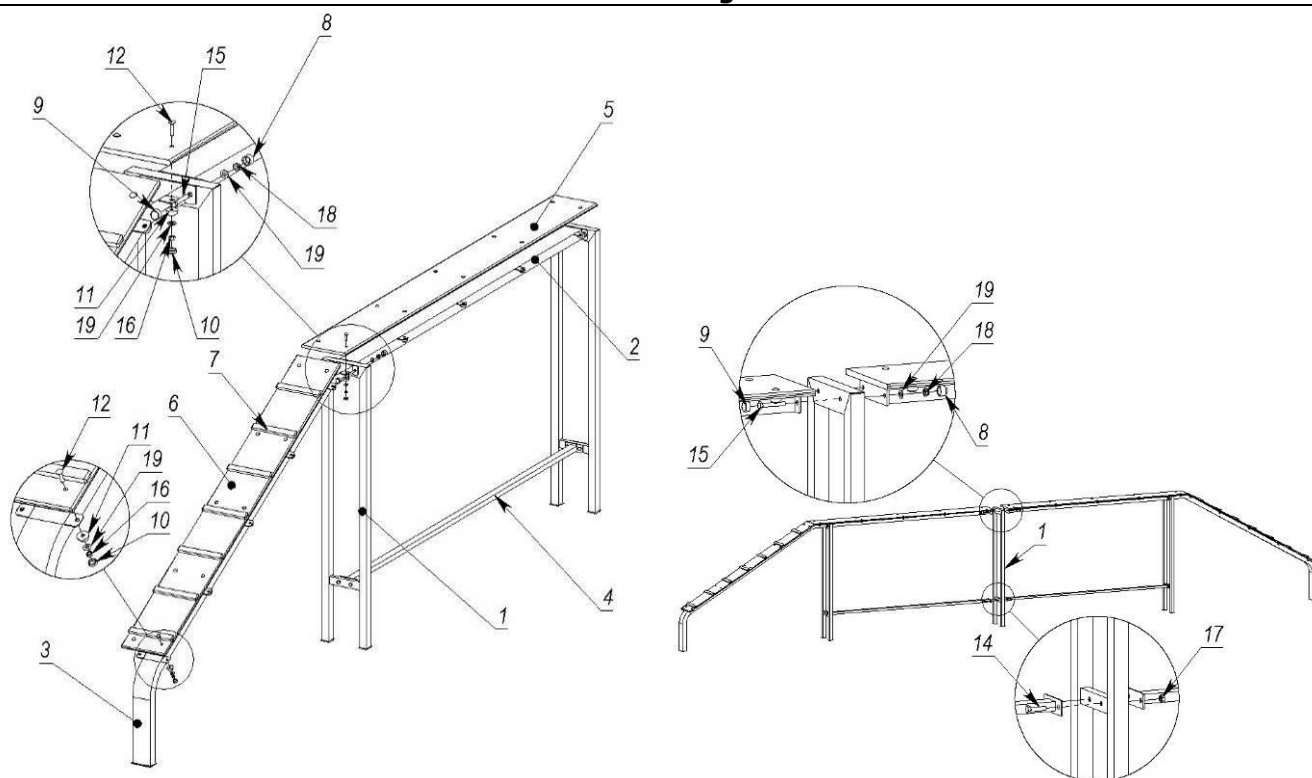


| Pos. | Name | Weight, kg | Q-ty |
|------|----------------------|------------|------|
| 1 | Side rack | 8 | 3 |
| 2 | Bridge | 16 | 2 |
| 3 | Angle bar | 16 | 2 |
| 4 | Connector | 5 | 2 |
| 5 | Gangway | 7 | 2 |
| 6 | Ascent | 6 | 2 |
| 7 | Bar | | 14 |
| 8 | Cap 19 fig. | 3 | 6 |
| 9 | Cap 19 fl. | 2 | 6 |
| 10 | Cap M8 | | 40 |
| 11 | Cup M8 | | 40 |
| 12 | Bolt M8x30 GOST7802 | | 40 |
| 13 | Bolt M10x40 GOST7798 | | 4 |
| 14 | Bolt M10x45 GOST7798 | | 2 |
| 15 | Bolt M10x65 GOST7798 | | 6 |
| 16 | Nut M8 GOST5915 | | 40 |
| 17 | Nut M10 GOST5915 | | 6 |
| 18 | Nut M10 GOST985 | | 6 |
| 19 | Washer 10 GOST11371 | | 46 |
| 20 | Screw 4x25 GOST1145 | | 28 |

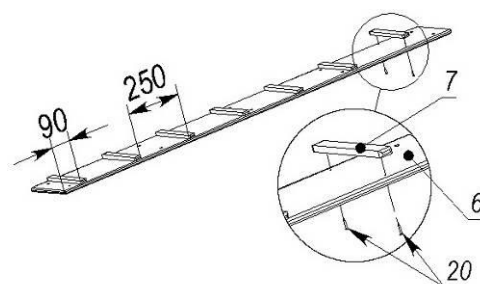


BO 006 (BO 006-2.5) – Slide with handrails

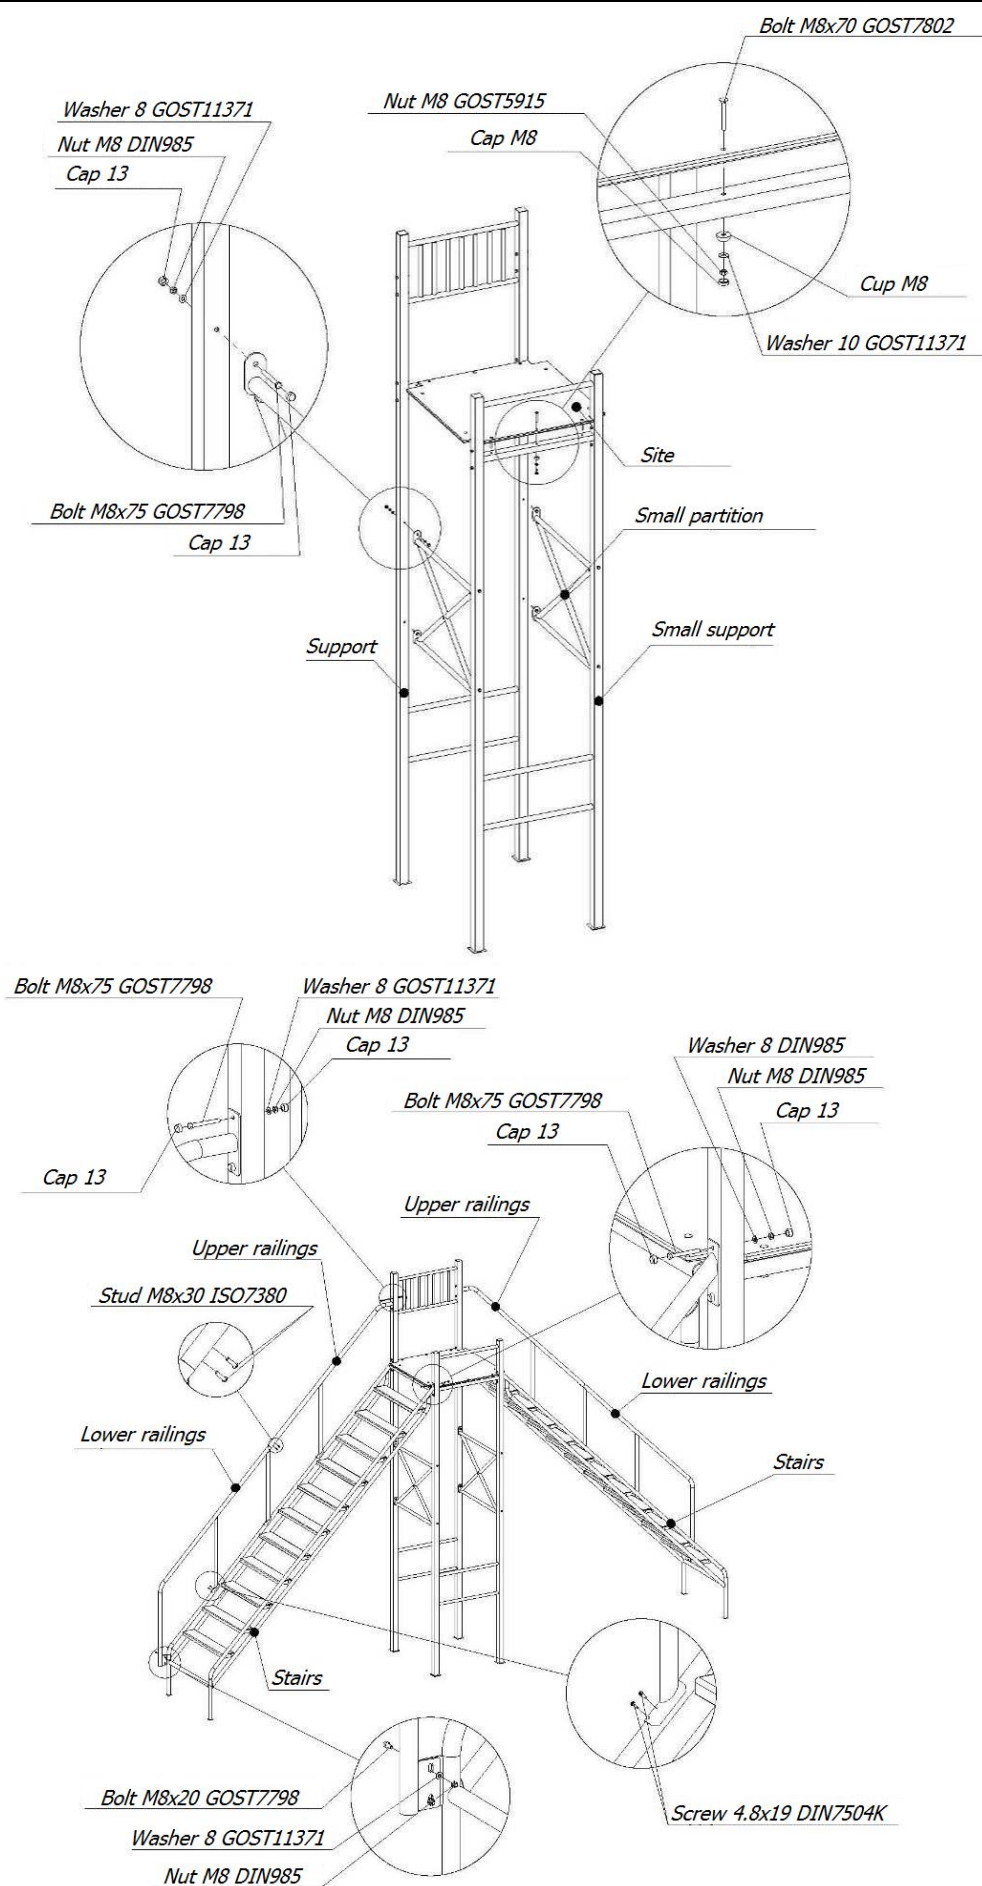


BO 007 – Angled wall

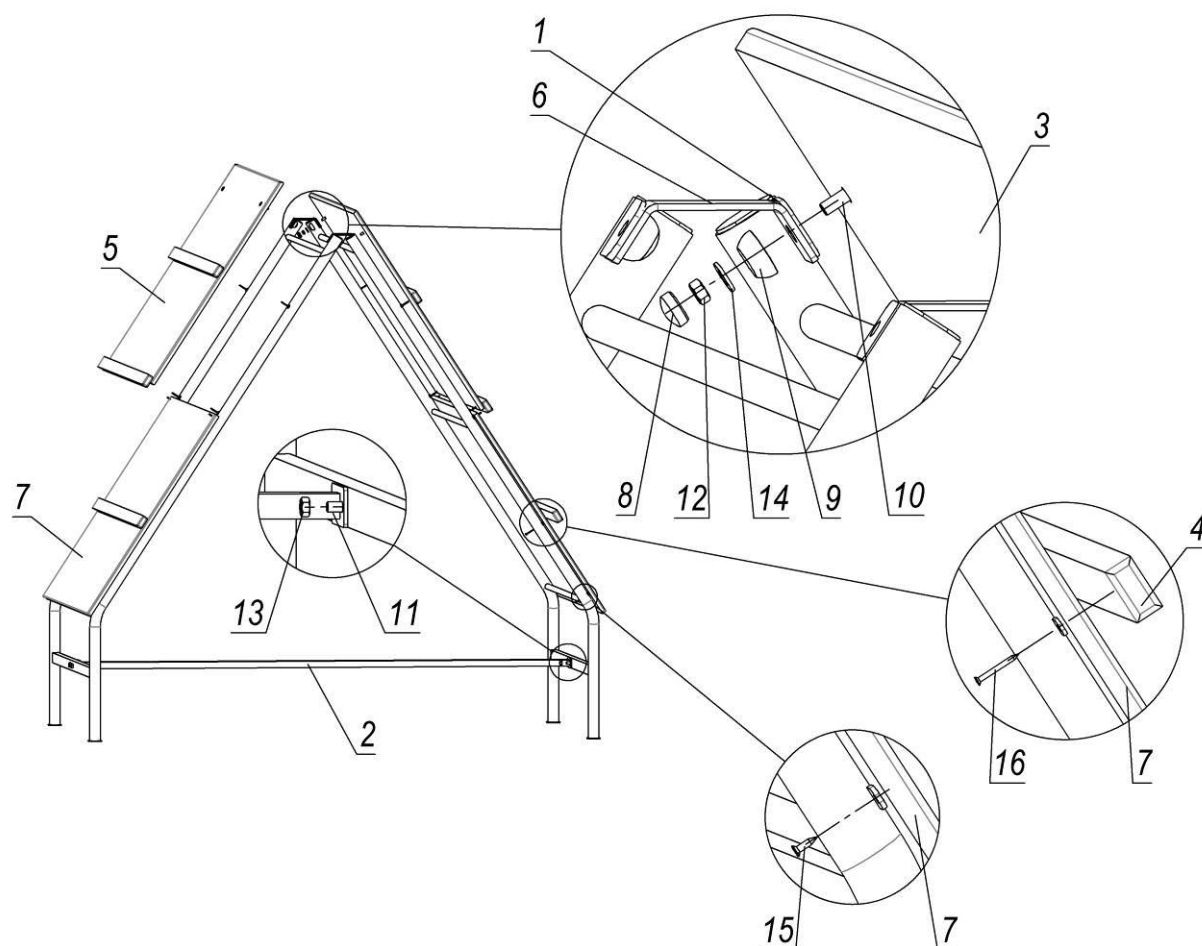


| Pos. | Name | Weight, kg | Q-ty |
|------|----------------------|------------|------|
| 1 | Incline frame | 20 | 2 |
| 2 | Binder | 4 | 1 |
| 3 | Inclined wall | 19 | 1 |
| 4 | Step | 1 | 6 |
| 5 | Wall | 20 | 1 |
| 6 | Clamp | | 2 |
| 7 | Wall | 19 | 2 |
| 8 | Cap M8 | | 4 |
| 9 | Cup M8 | | 4 |
| 10 | Bolt M8x35 GOST7802 | | 4 |
| 11 | Bolt M10x45 GOST7798 | | 4 |
| 12 | Nut M8 GOST5915 | | 4 |
| 13 | Nut M10 GOST5915 | | 4 |
| 14 | Washer 10 GOST11371 | | 4 |
| 15 | Screw 4x16 GOST1145 | | 4 |
| 16 | Screw 4x40 GOST1145 | | 16 |

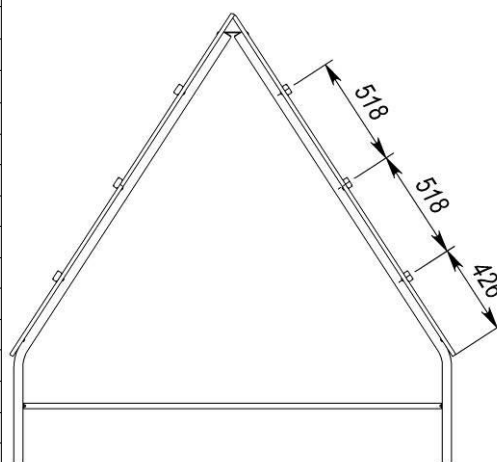

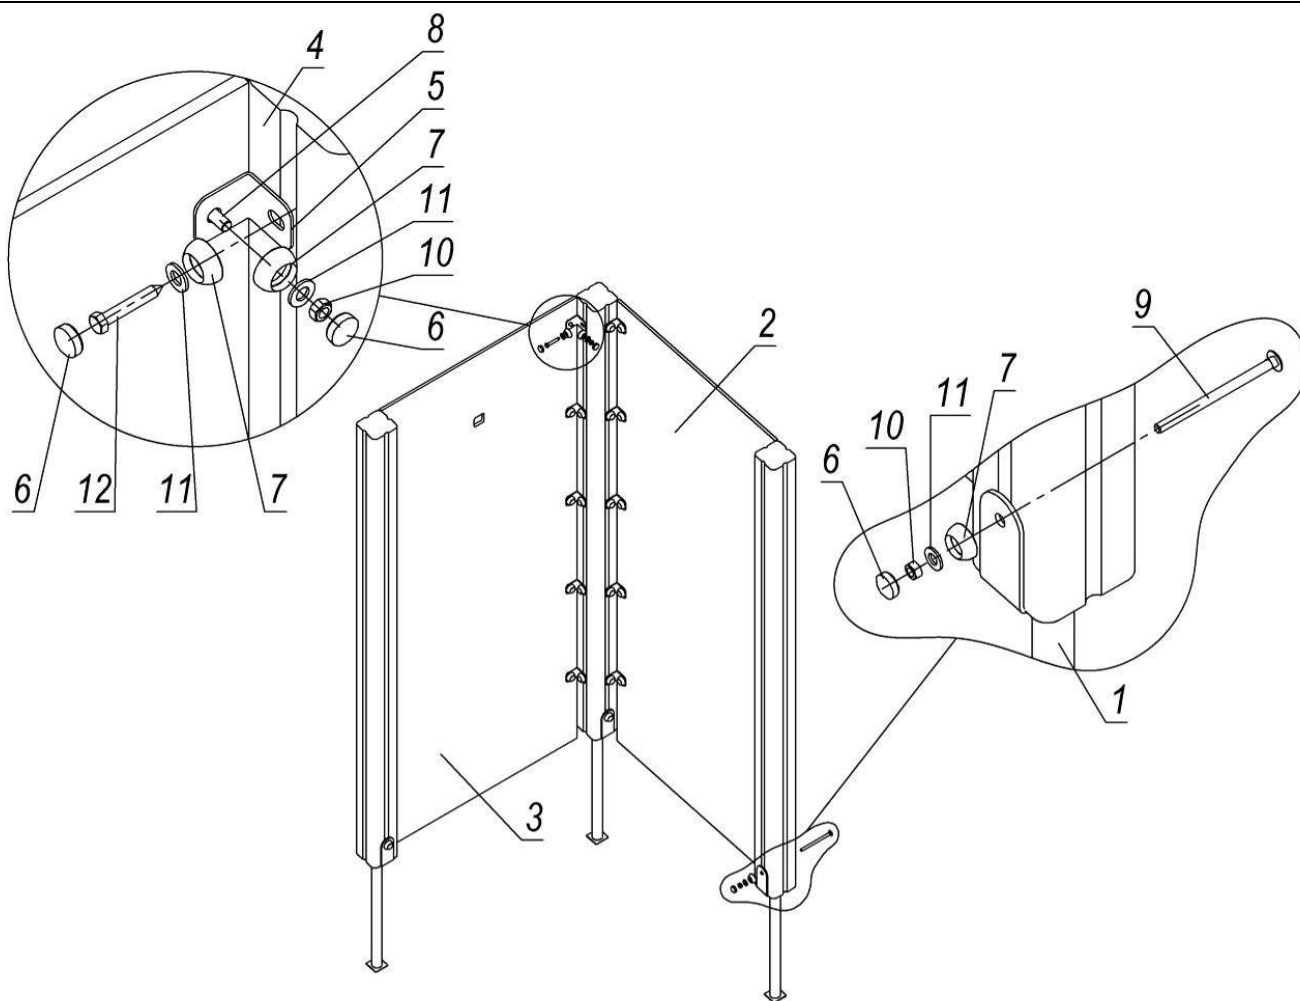


| Pos. | Name | Weight, kg | Q-ty |
|------|---------------------------------|------------|------|
| 1 | Beam support | 2 | 3 |
| 2 | Shield | 12 | 1 |
| 3 | Observation shield | 12 | 1 |
| 4 | Rack | 11 | 3 |
| 5 | Angle bar 45x45x40 (90 degrees) | | 20 |
| 6 | Cap M8 | | 43 |
| 7 | Cup M8 | | 43 |
| 8 | Bolt M8x25 GOST7802 | | 20 |
| 9 | Bolt M8x120 GOST7802 | 7 | 3 |
| 10 | Nut M8 GOST5915 | | 23 |
| 11 | Washer 10 GOST11371 | | 43 |
| 12 | Screw 8x50 GOST11473 | | 20 |


BO 009 – Athletics barrier

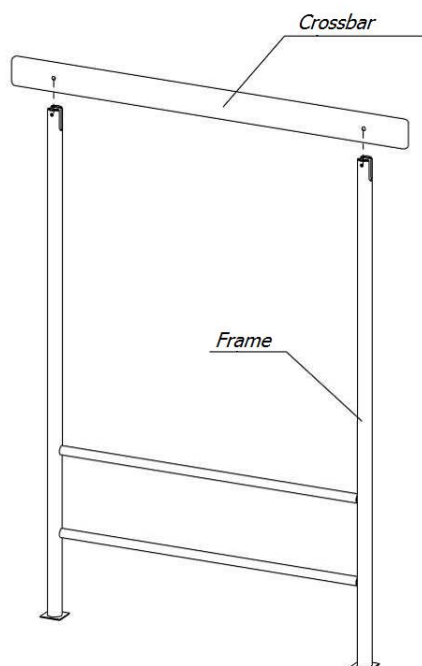

BO 010 - Trench

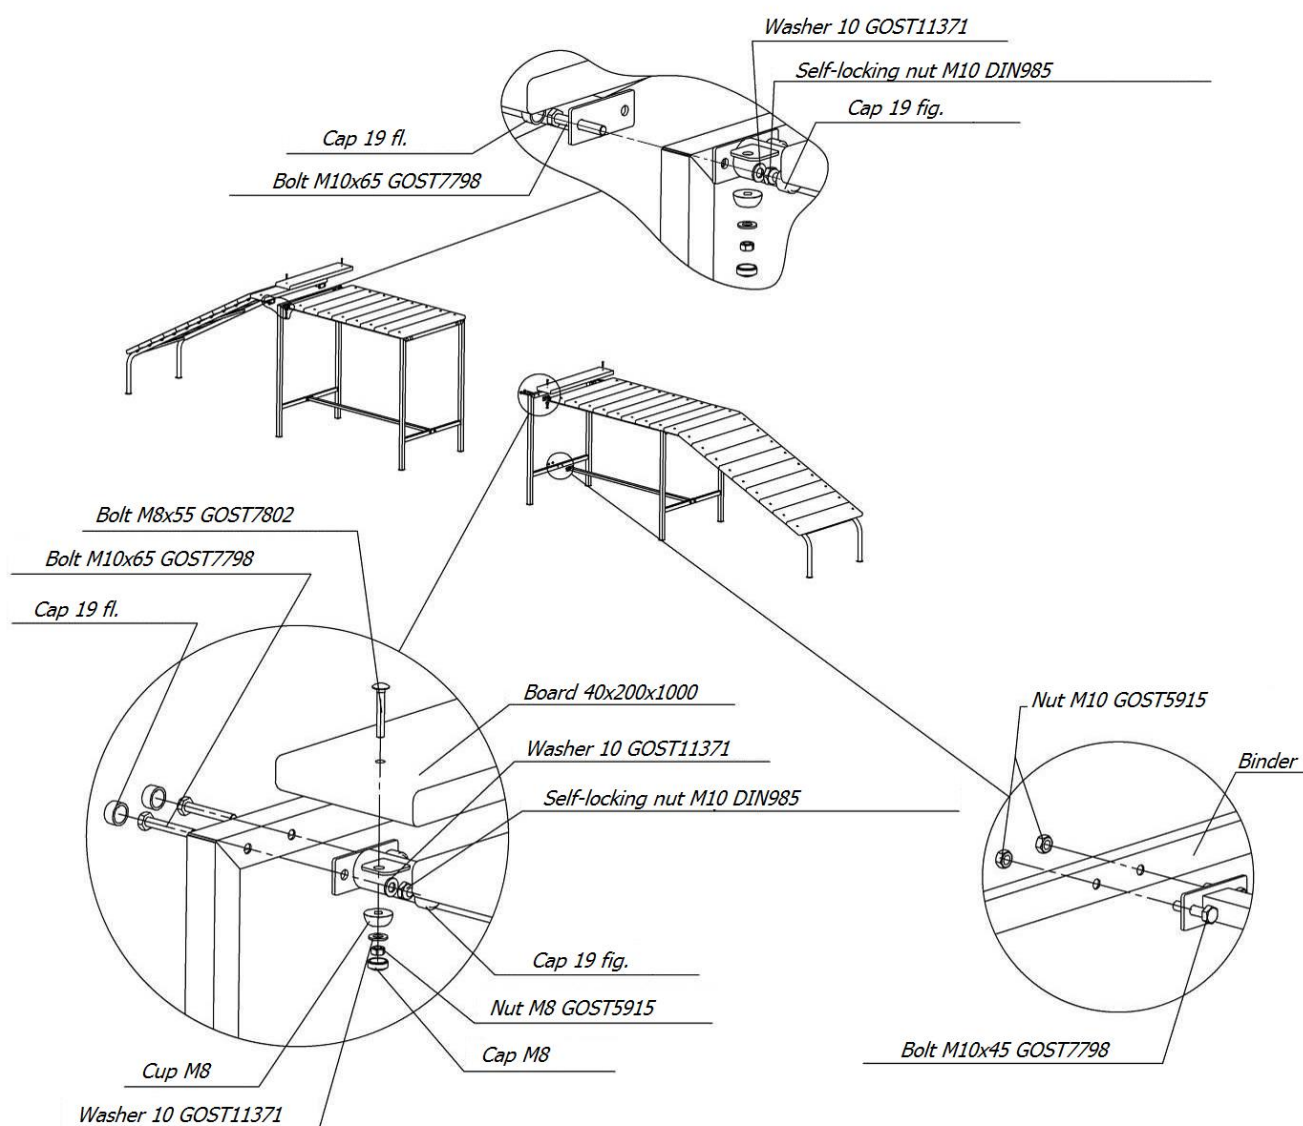


BO 011 - Slalom

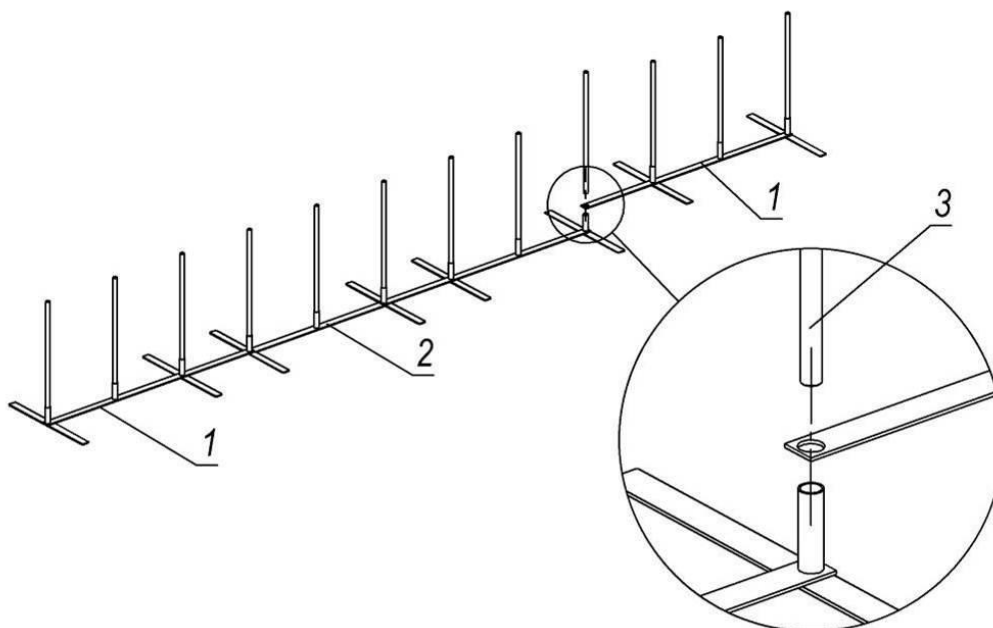


| <i>Pos.</i> | <i>Name</i> | <i>Weight, kg</i> | <i>Q-ty</i> |
|-------------|----------------------|-------------------|-------------|
| 1 | Section frame | 11 | 3 |
| 2 | Middle section frame | 9 | 1 |
| 3 | Rack | | 12 |

BO 012 – Long jump

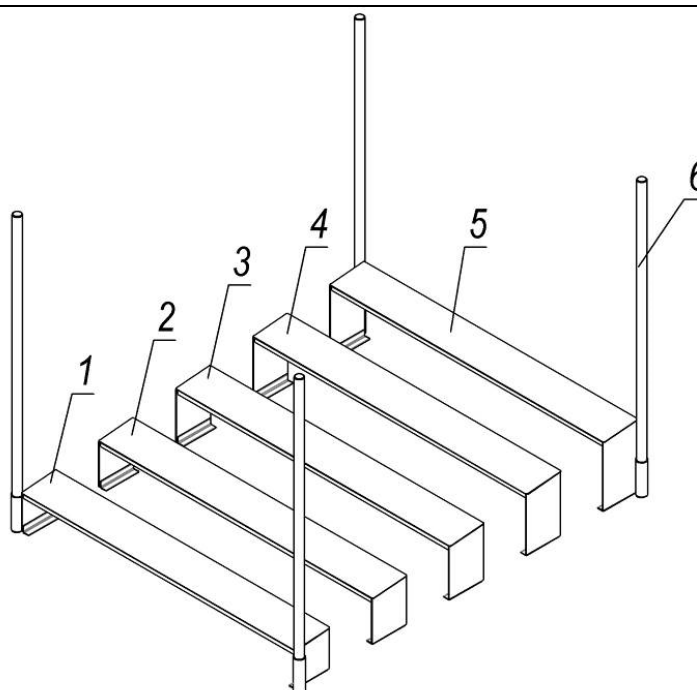

| <i>Pos.</i> | <i>Name</i> | <i>Weight, kg</i> | <i>Q-ty</i> |
|-------------|-------------|-------------------|-------------|
| 1 | Step 1 | 8 | 1 |
| 2 | Step 2 | 7 | 1 |
| 3 | Step 3 | 7 | 1 |
| 4 | Step 4 | 7 | 1 |
| 5 | Step 5 | 8 | 1 |
| 6 | Rack | | 4 |

BO 013 - Swing

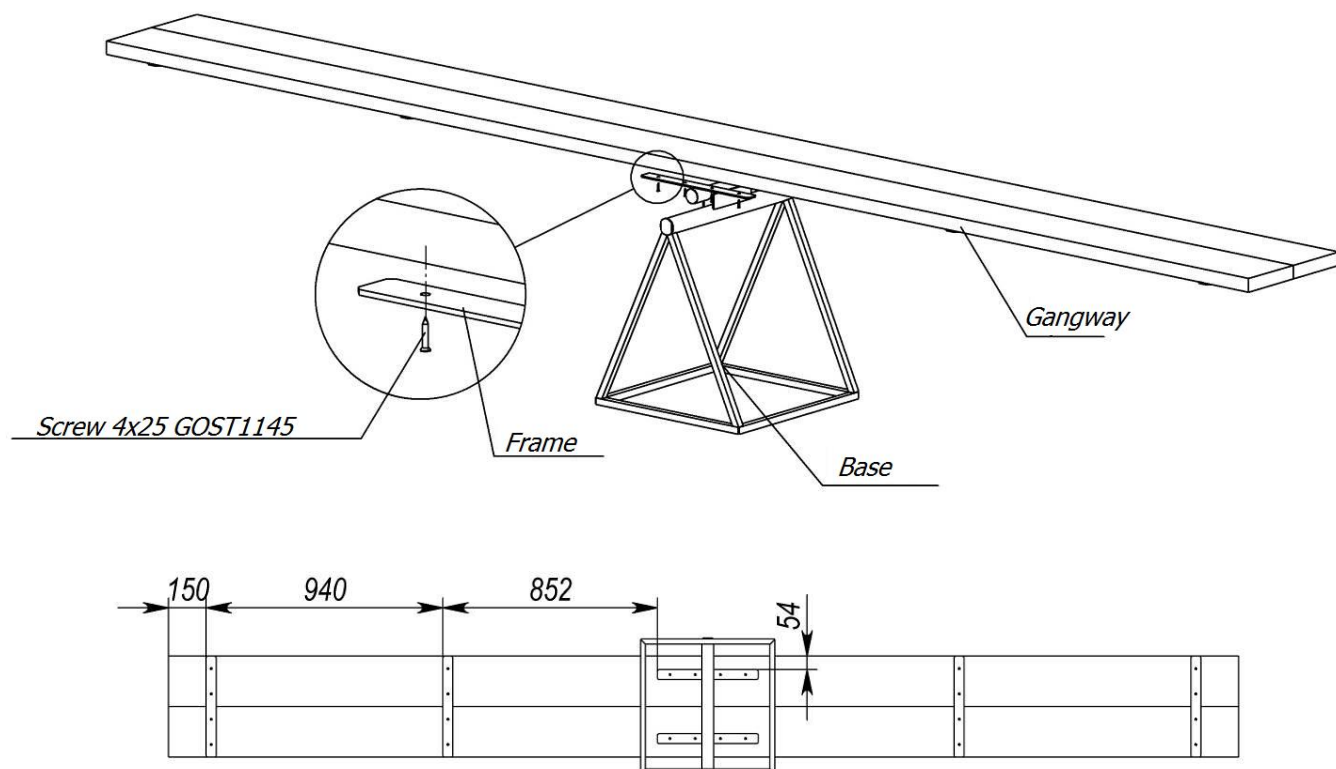

BO 014 - Connection

Cap nut M10 DIN1587



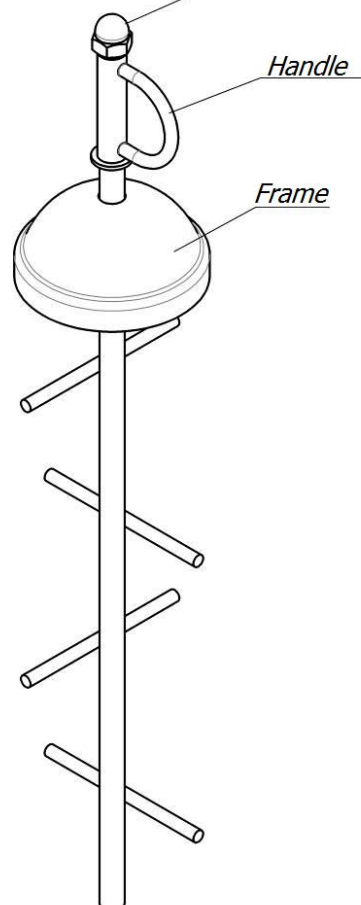


Table 4 – Concreting scheme


BO 001 – Barrier 2 levels

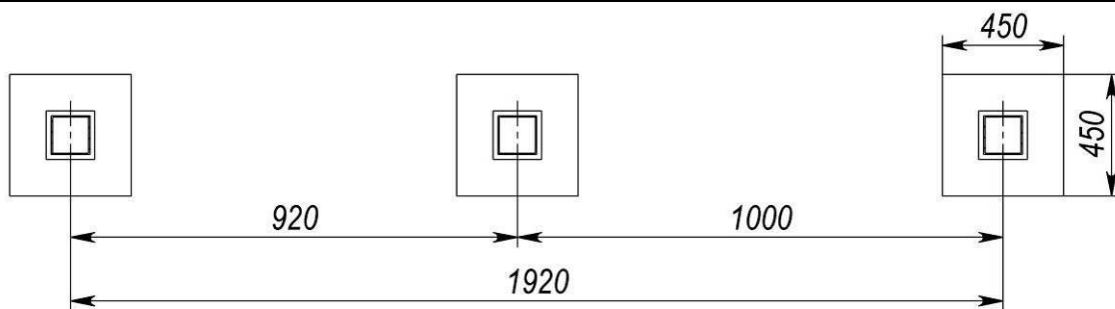


BO 002 – Barrier 3 levels

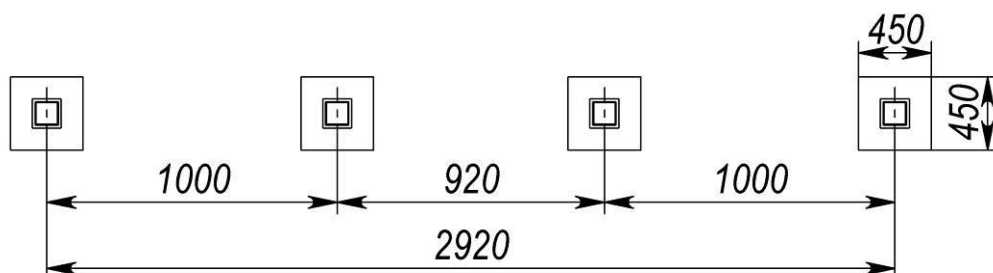


BO 004 – Angled wall

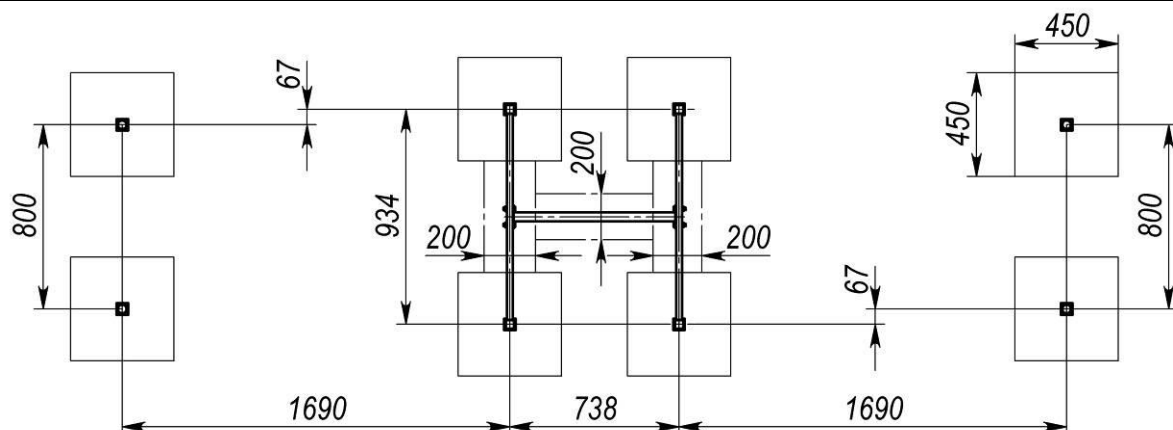


BO 005 – Straight beam

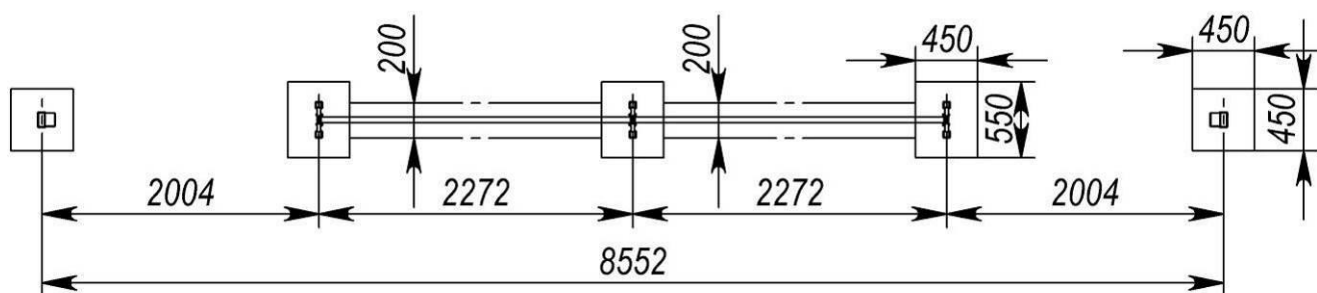


BO 006 – Slide with handrails

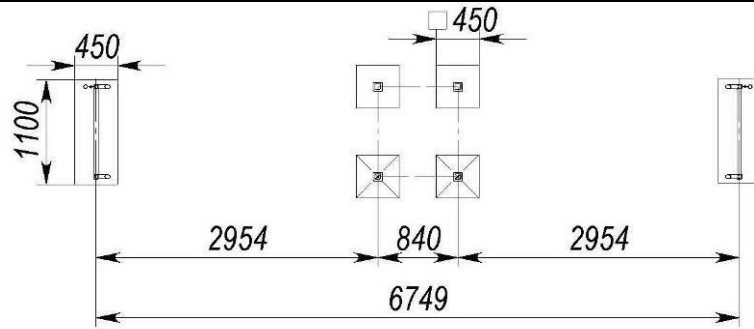


BO 006-2.5 – Slide with handrails

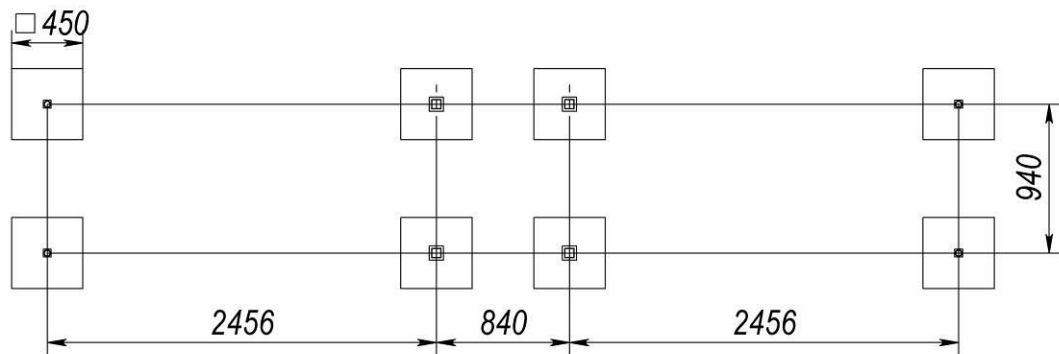


BO 007 – Angled wall

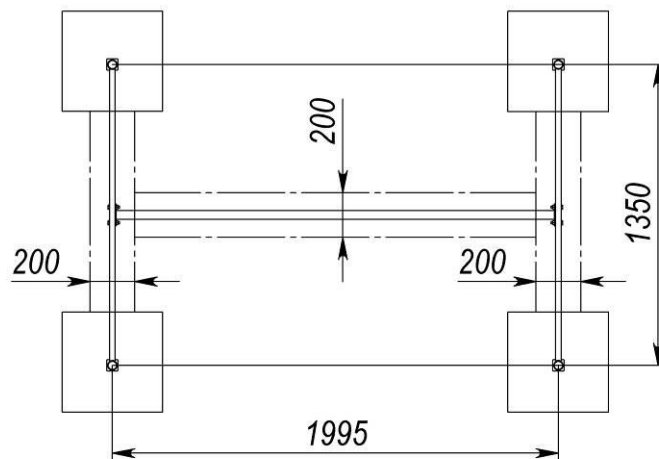



BO 008 – Hide-out

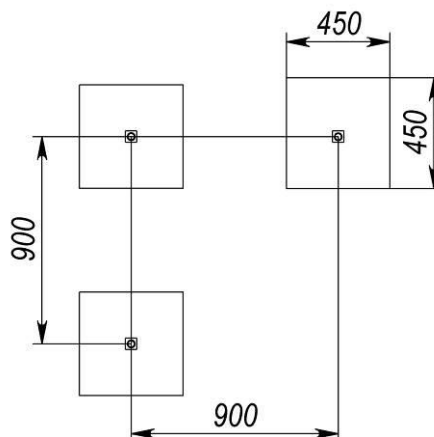

BO 009 – Athletics barrier

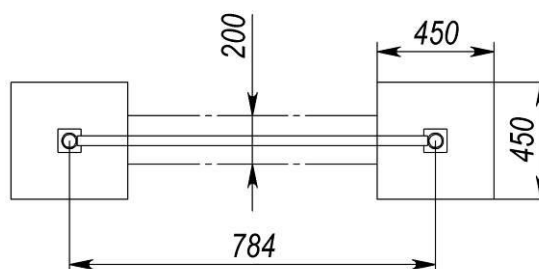

BO 010 - Trench

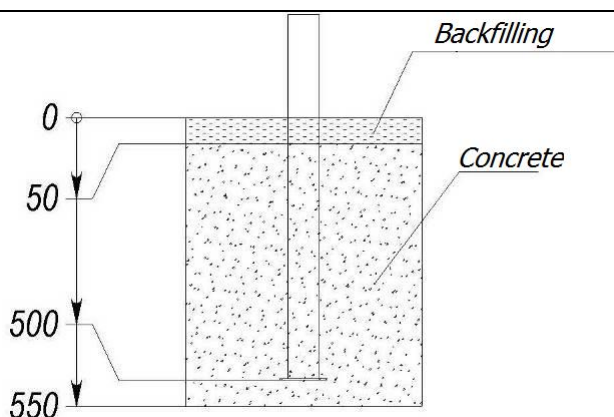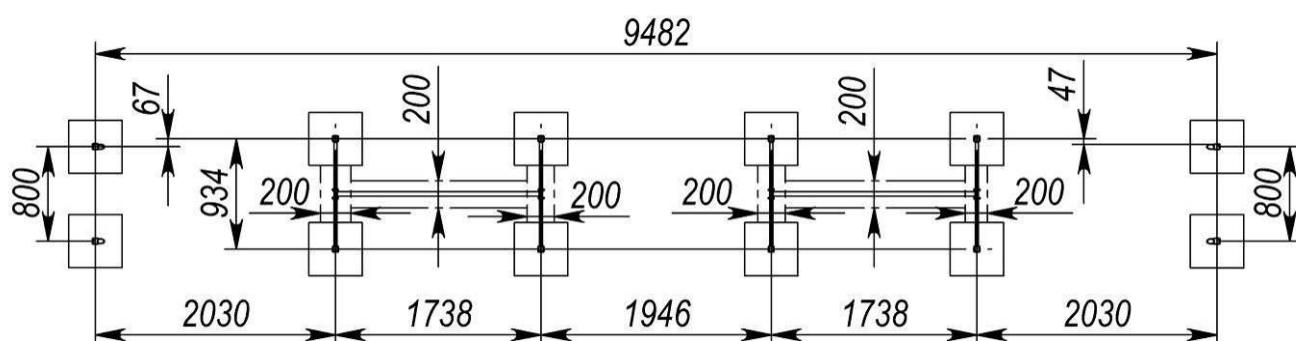

5. PRODUCT USE

Do not use the product until it has been fully and permanently installed.
Do not allow the product to be used directly by a person.

6. PRODUCT MAINTENANCE

You have purchased high-quality and reliable equipment. In the process of its production, the requirements of regulatory and technical documents of Ukraine, the CIS countries and the European Union regulating the production of children's gaming equipment were taken into account. However, it should not be forgotten that when operating any technical product, certain rules and requirements must be followed. Despite the fact that our product is of high quality and reliability, this rule applies to it in full. You should be aware that the implementation of the following rules and recommendations for product maintenance is aimed at ensuring that your child, the child of your friends or acquaintances is safe and no unforeseen factors threaten his health, life.

Remember that the operation of the product is accompanied by the influence of various negative factors on it, a complete list of which cannot be predicted. Among them, an important place is occupied by natural factors and factors caused by human influence on equipment. As a rule, their action initially leads to disruptions in the appearance of the product. Thus, under the influence of factors caused by the exploitation of a person, there may be damage to the integrity of the paint coating of parts made of wood, in the form of scuffs, chips, incisions, and when exposed to parts

made of metal, damage to the paint coating in the form of nicks, chips, abrasion, etc. This leads to the emergence and development of defects that can be the cause of the destruction of the product. The product is particularly dangerous if it is used for other than its intended purpose, if the permissible loads are exceeded, or if vandalism occurs, as these factors can cause irreversible changes in the structure of the material from which the product is made, leading to destruction.

The maintenance of the product implies, first of all, the responsibility of the user to comply with all recommendations provided in this document, starting with a daily inspection of the external condition of the product before operation.

Daily inspection of the product is a very important procedure. With its help, you can timely detect any changes in the appearance of the product (deformation of individual parts, deformation of the structure as a whole or part of it, damage to parts, cracks of welds, as well as the absence of fastening of parts of the product, etc.).

Before using the product, check its operability, absence of damage, dirt on the product, sharp edges, reliability of fixing the structure, absence of unnecessary objects on the surface of the site. If the product is damaged, fully or partially inoperable, or has any other defects, do not use it.

During operation it is also necessary to inspect the condition of the product periodically - the current inspection. It includes an external inspection of the product, checking its operability (in the presence of moving elements - the smoothness of the movement of mechanisms, compliance with operating modes, etc.). Current inspection allows you to detect malfunctions caused by the operation of equipment, climatic conditions, acts of vandalism and other factors, until they reach a critical level and the destruction of the product. The current inspection is carried out in order to detect foreign objects that may threaten the user and lead to violations of the functioning of the product. The frequency of the current inspection is set by the owner taking into account the operating conditions. If you do not have sufficient technical knowledge and skills to conduct such inspections, we recommend you to contact the authorized specialists of the manufacturer in order to obtain advice.

Every three months, a scheduled inspection should be carried out, which primarily concerns the foundation part, load-bearing elements and connection nodes of elements (their integrity and degree of deterioration).

The main annual inspection must be carried out annually by authorised specialists of the manufacturer. During the inspection, the technical condition of the equipment shall be assessed for compliance with safety requirements. The degree of deterioration and damage to wooden elements and their ability to withstand the applied loads, damage, corrosion of metal elements and the impact of these factors on the safety of the product are determined. The inspection also helps to identify the impact of repairs, if any, on the safety of the equipment.

Based on the results of the inspection, a maintenance procedure is carried out to eliminate the identified discrepancies in the product's operation. This procedure includes assessing the condition of parts and assemblies, replacing worn parts, and restoring the integrity of protective coatings. The results of the inspections, as well as the procedures carried out as a result of the inspection and maintenance of the product must be properly documented in the Registration Journal, which is an integral part of this passport. The owner of the product must keep the acts of maintenance of the product, acts of repair work.

